


* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

22 INT 1.2/00

*1

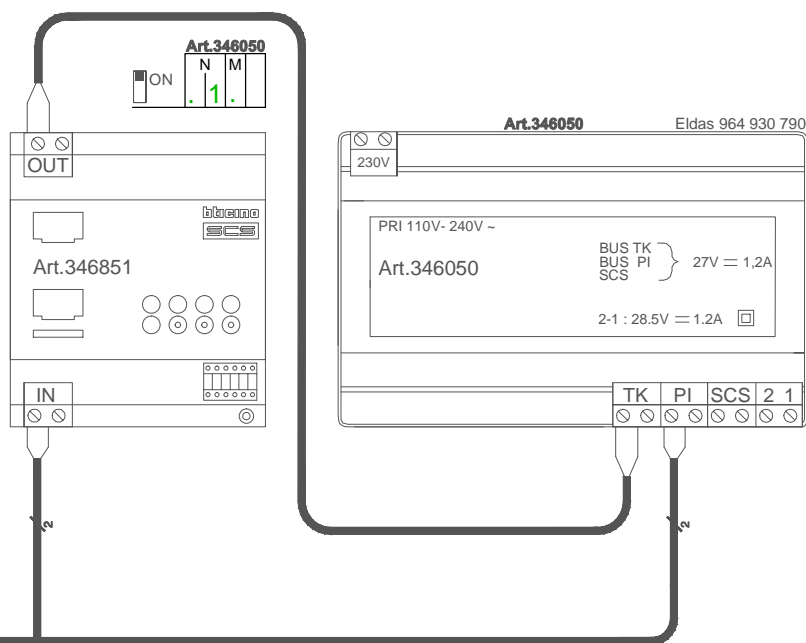


*1

21 TAB 1.1/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


22 INT 1.3/00

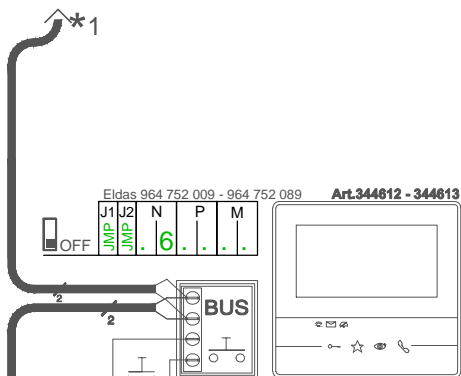

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JMP JMP 6


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

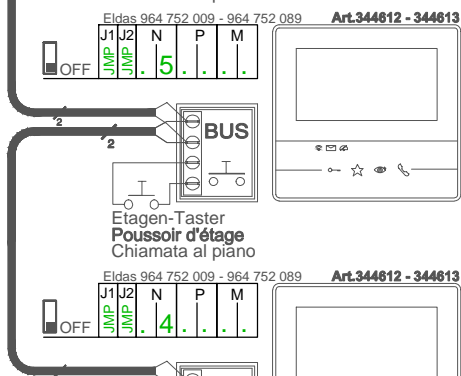

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JMP JMP 5


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

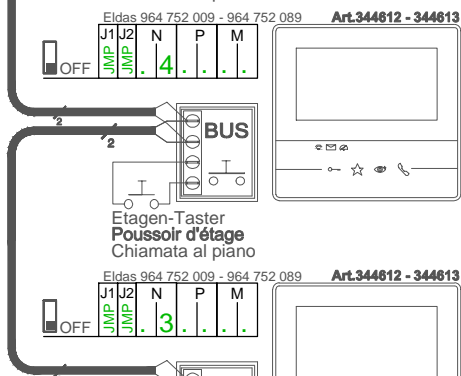

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JMP JMP 4


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

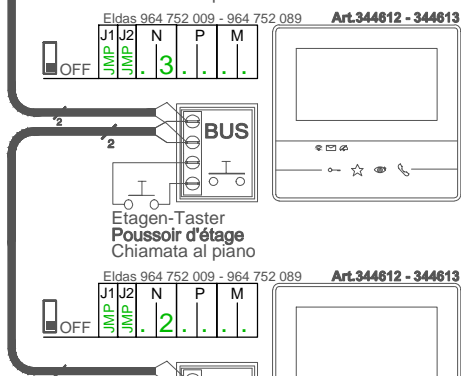

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JMP JMP 3

Etagen-Taster
Poussoir d'étage
 Chiamata al piano

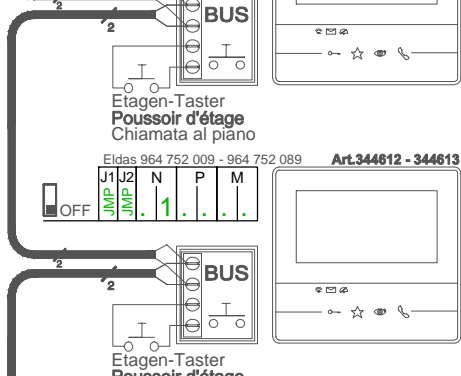

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JMP JMP 2

Etagen-Taster
Poussoir d'étage
 Chiamata al piano



Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JMP JMP 1







Etagen-Taster
Poussoir d'étage
 Chiamata al piano

22 INT 1.1/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

22 INT 1.4/00

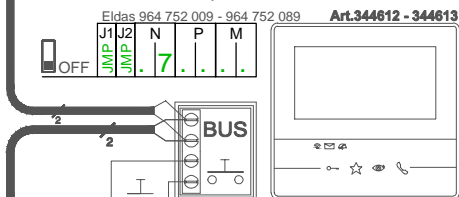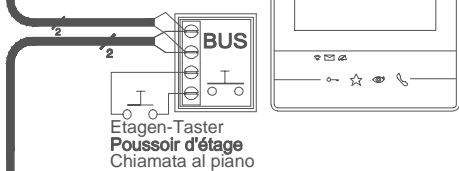
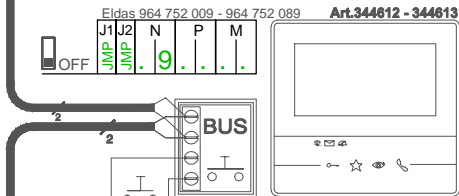
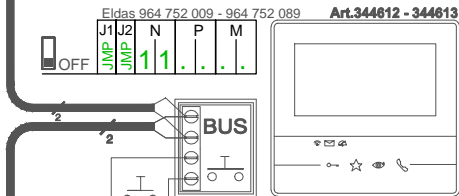
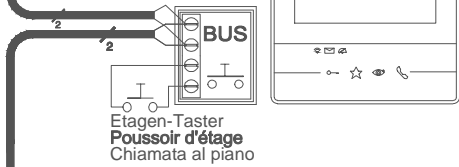
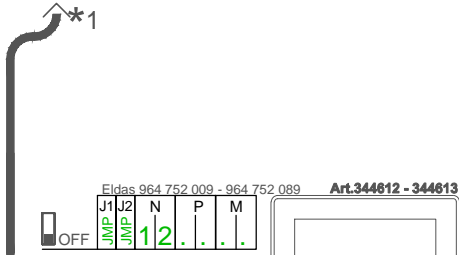


22 INT 1.2/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

22 INT 1.5/00

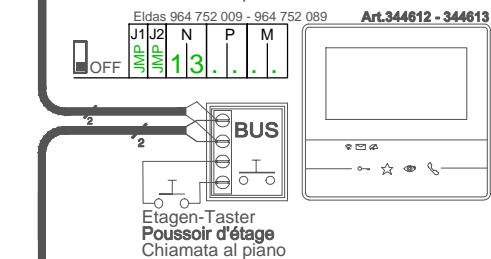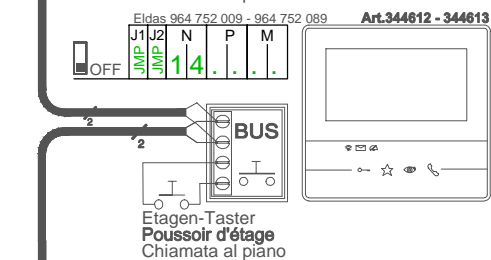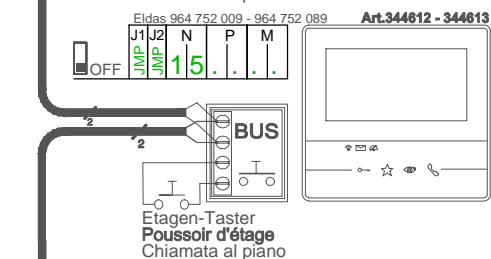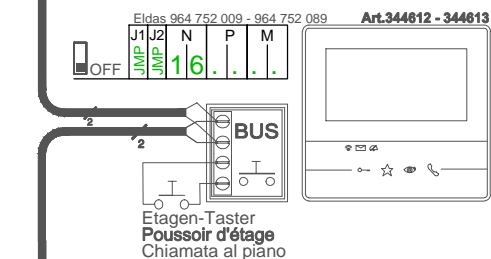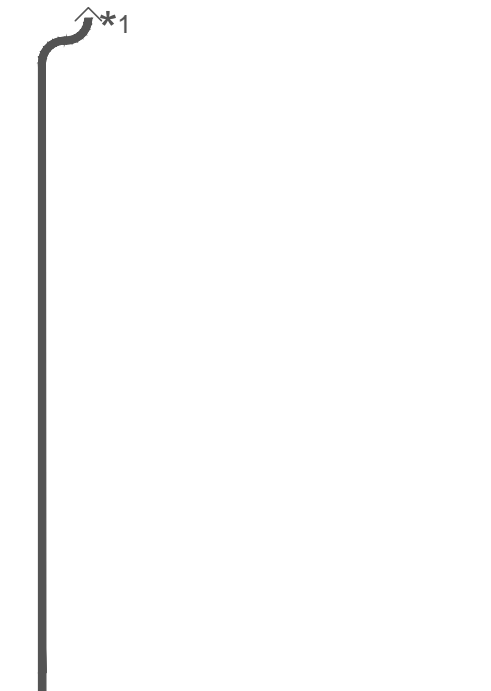



22 INT 1.3/00

*1

* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**
Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

23 INT 1.6/00

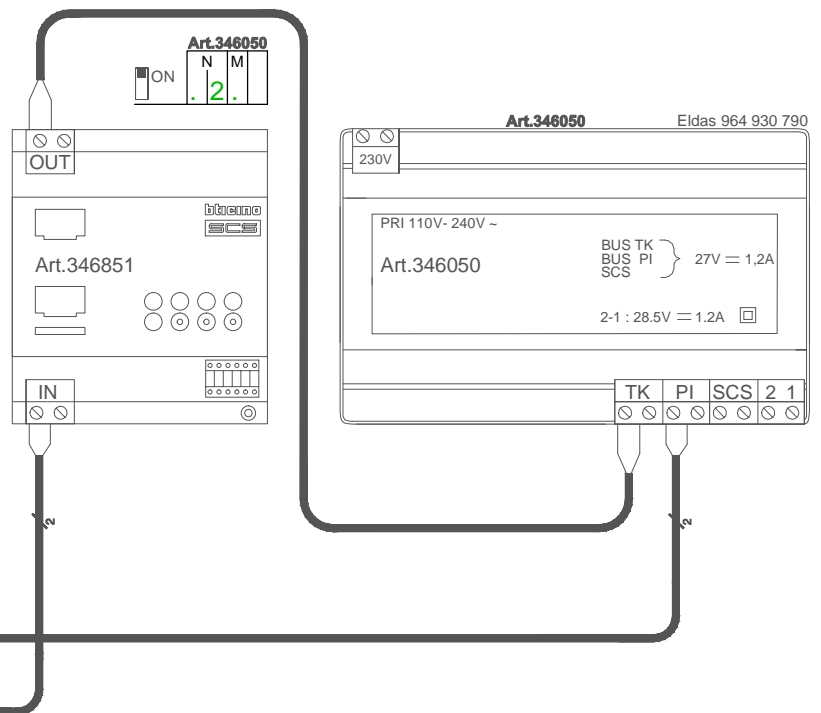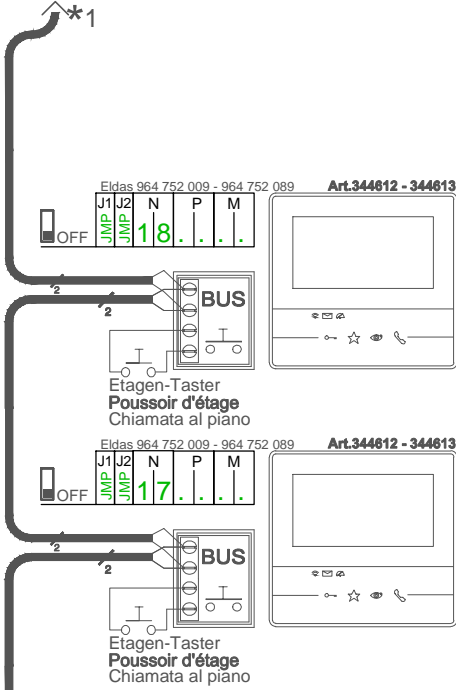


22 INT 1.4/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


22 INT 1.7/00

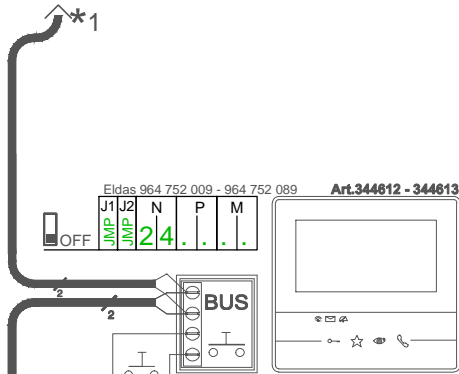

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 24


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

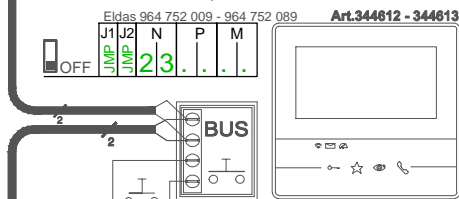

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 23


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

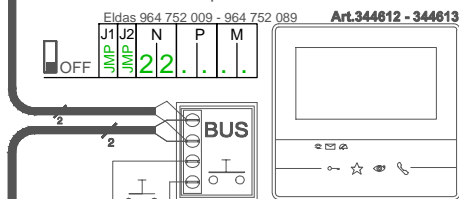

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 22


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

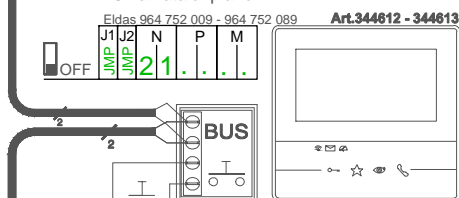

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 21


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

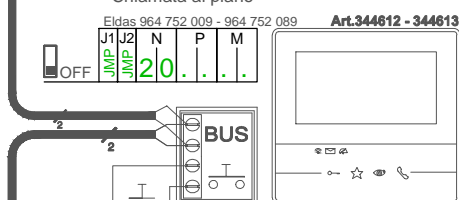

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 20

Etagen-Taster
Poussoir d'étage
 Chiamata al piano

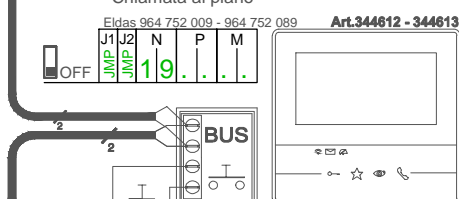

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 19


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

22 INT 1.5/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

22 INT 1.8/00

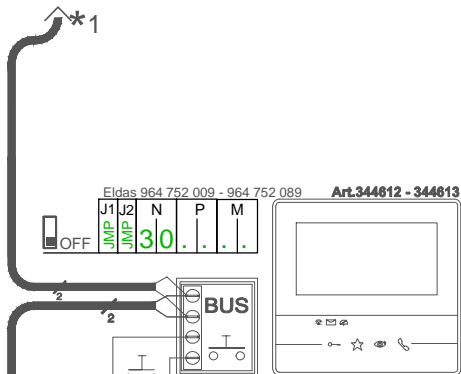


Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 30

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

22 INT 1.8/00

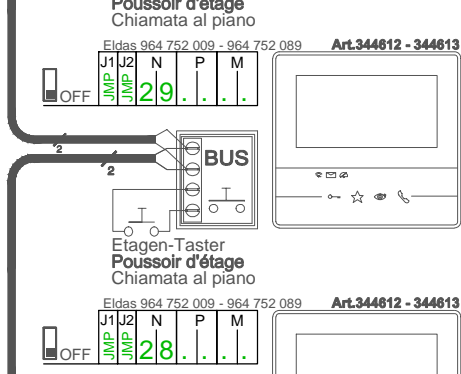


Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 29

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

22 INT 1.8/00

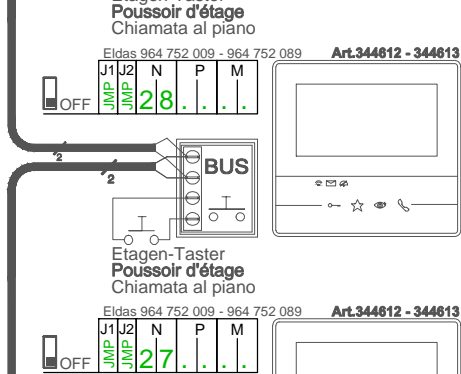


Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 28

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

22 INT 1.8/00

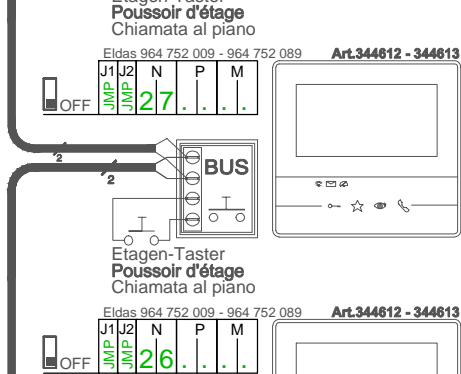


Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 27

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

22 INT 1.8/00

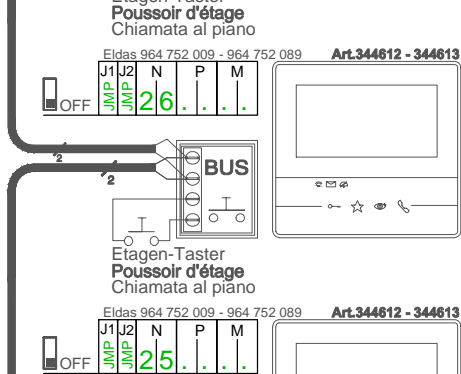


Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 26

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

22 INT 1.8/00

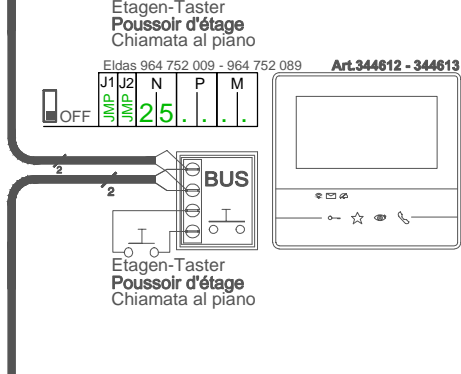

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 25

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

22 INT 1.8/00

22 INT 1.6/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

