


* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

22 INT 1.2/00

*1

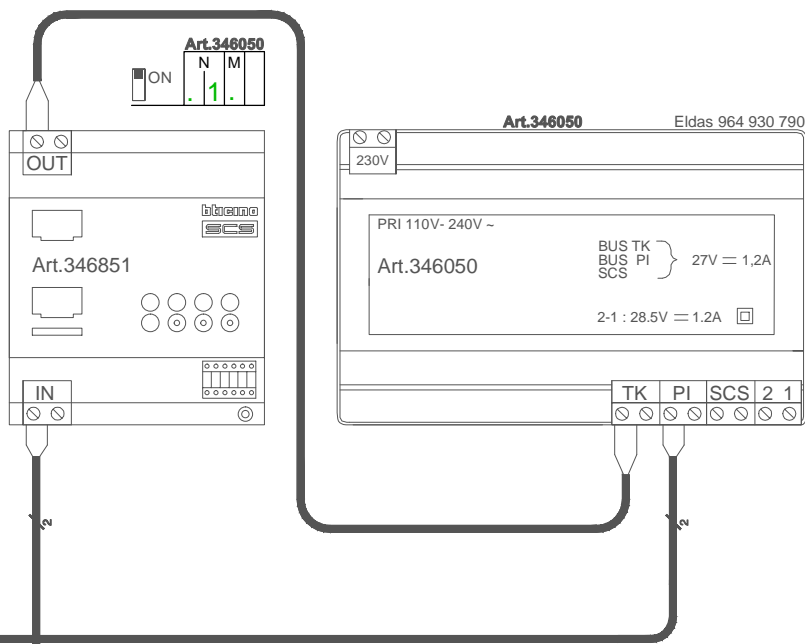














*1

21 TAB 1.1/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

22 INT 1.4/00

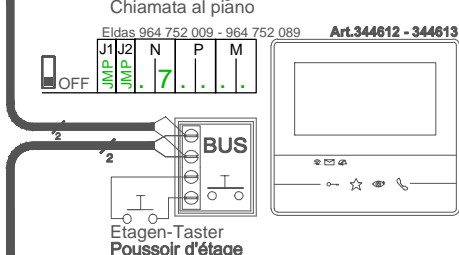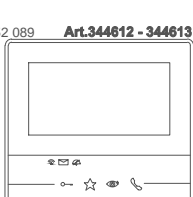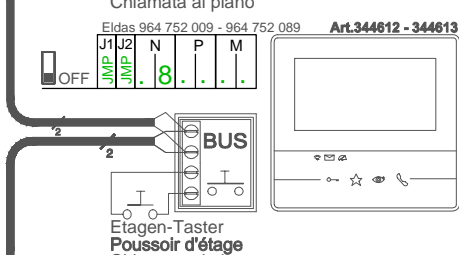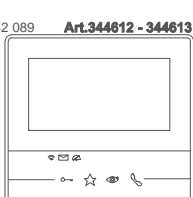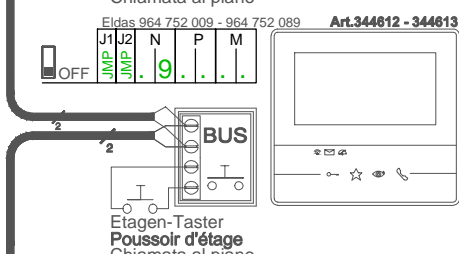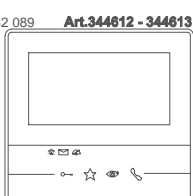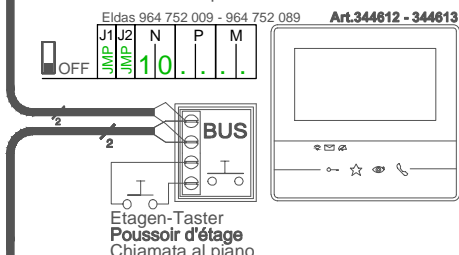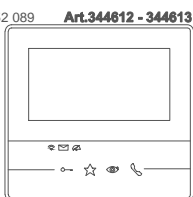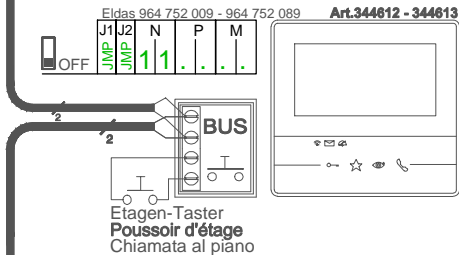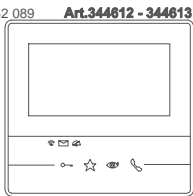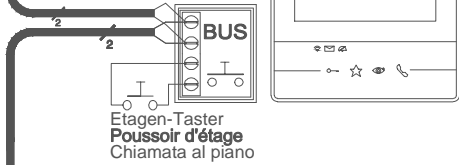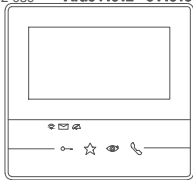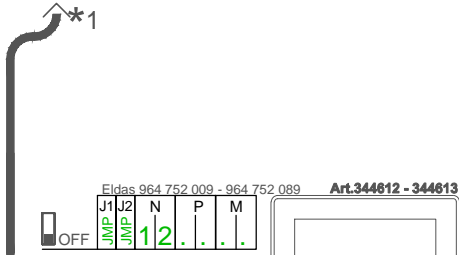


22 INT 1.2/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009



22 INT 1.5/00

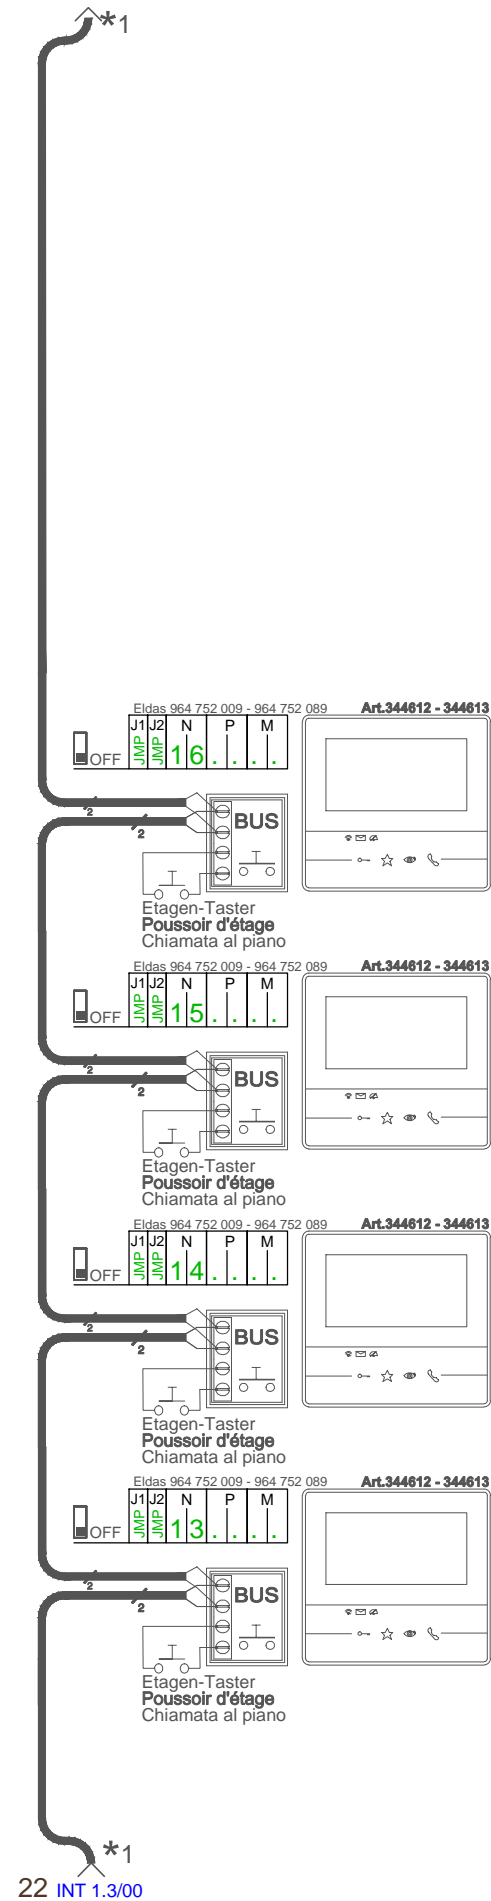

* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

23 INT 1.6/00





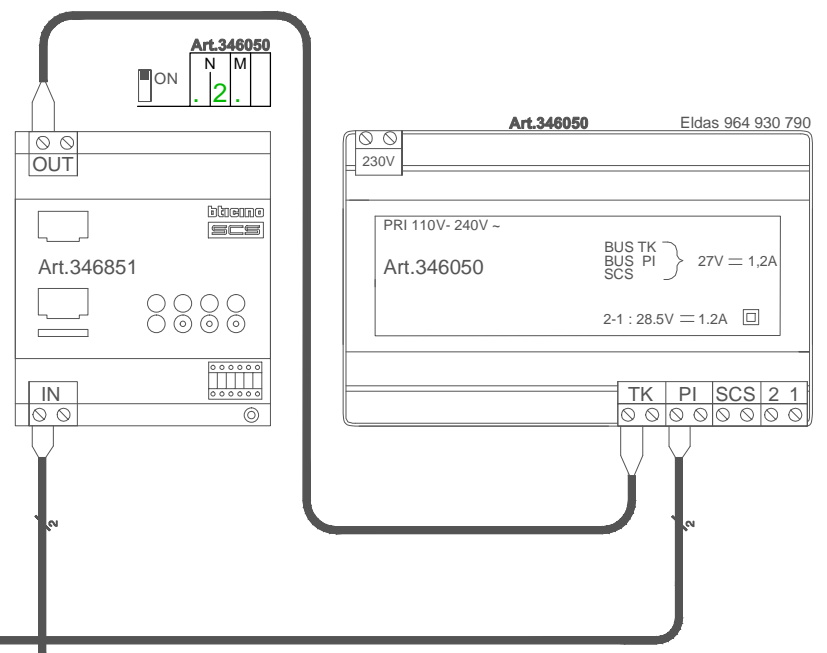
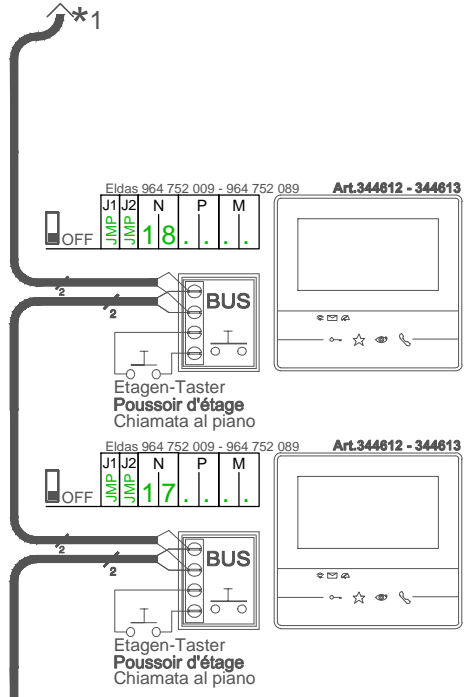


22 INT 1.4/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

22 INT 1.7/00

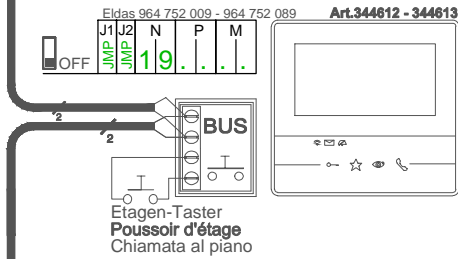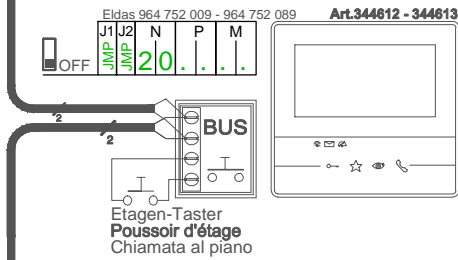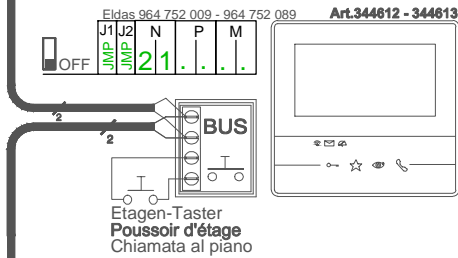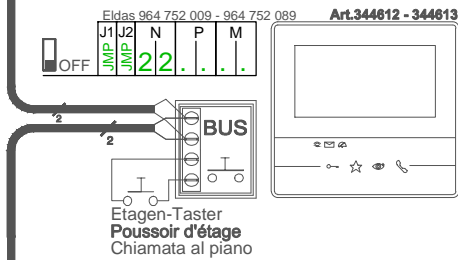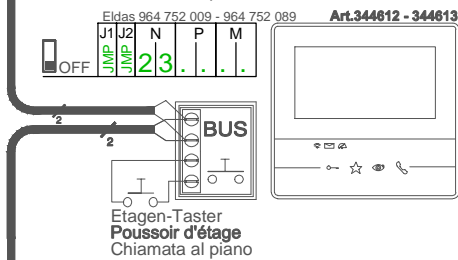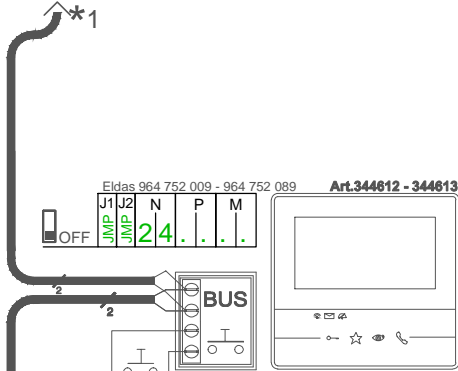


22 INT 1.5/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


22 INT 1.8/00

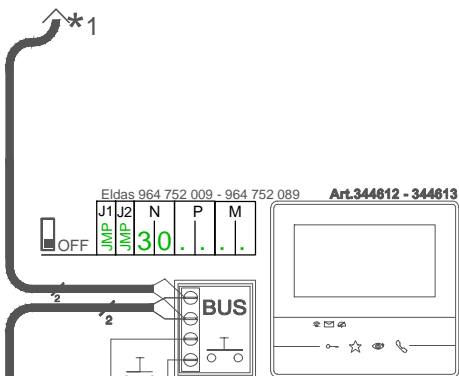

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 30


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

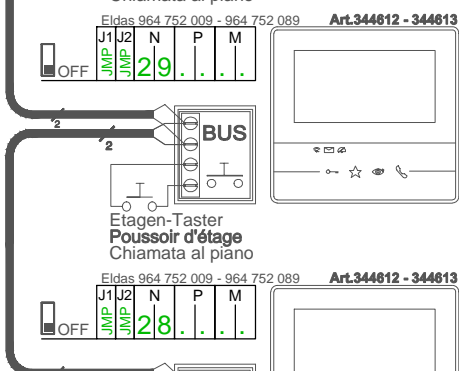

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 29


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

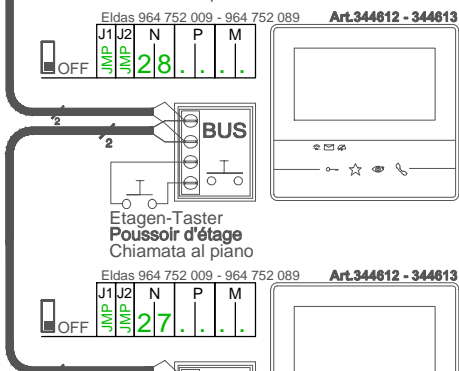

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 28


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

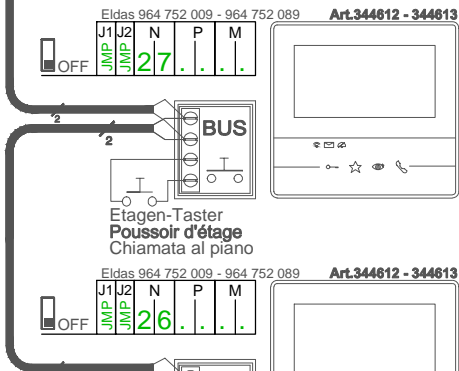

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 27


Etagen-Taster
Poussoir d'étage
 Chiamata al piano

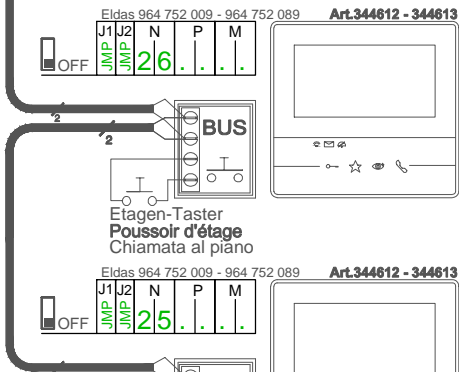

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 26

Etagen-Taster
Poussoir d'étage
 Chiamata al piano

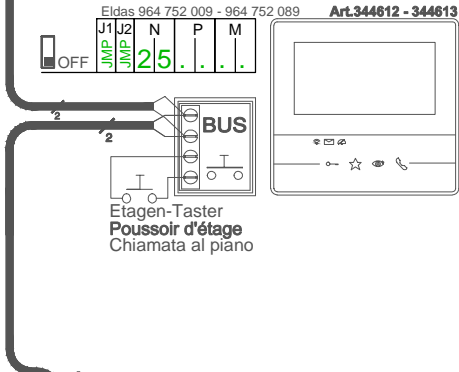

Eldas 964 752 009 - 964 752 089 **Art.344612 - 344613**

J1 J2 N P M
 JUMP JUMP 25

Etagen-Taster
Poussoir d'étage
 Chiamata al piano

22 INT 1.6/00

* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

