

* 1-4 (Strang / Colonne montante / Montante)

 
 
X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X^!|á|ä|é|Á|æ|à|á|, ^|} á|} Á|W|ä|Á|Á|é|à|Á|!|...!


Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.2/00

*1

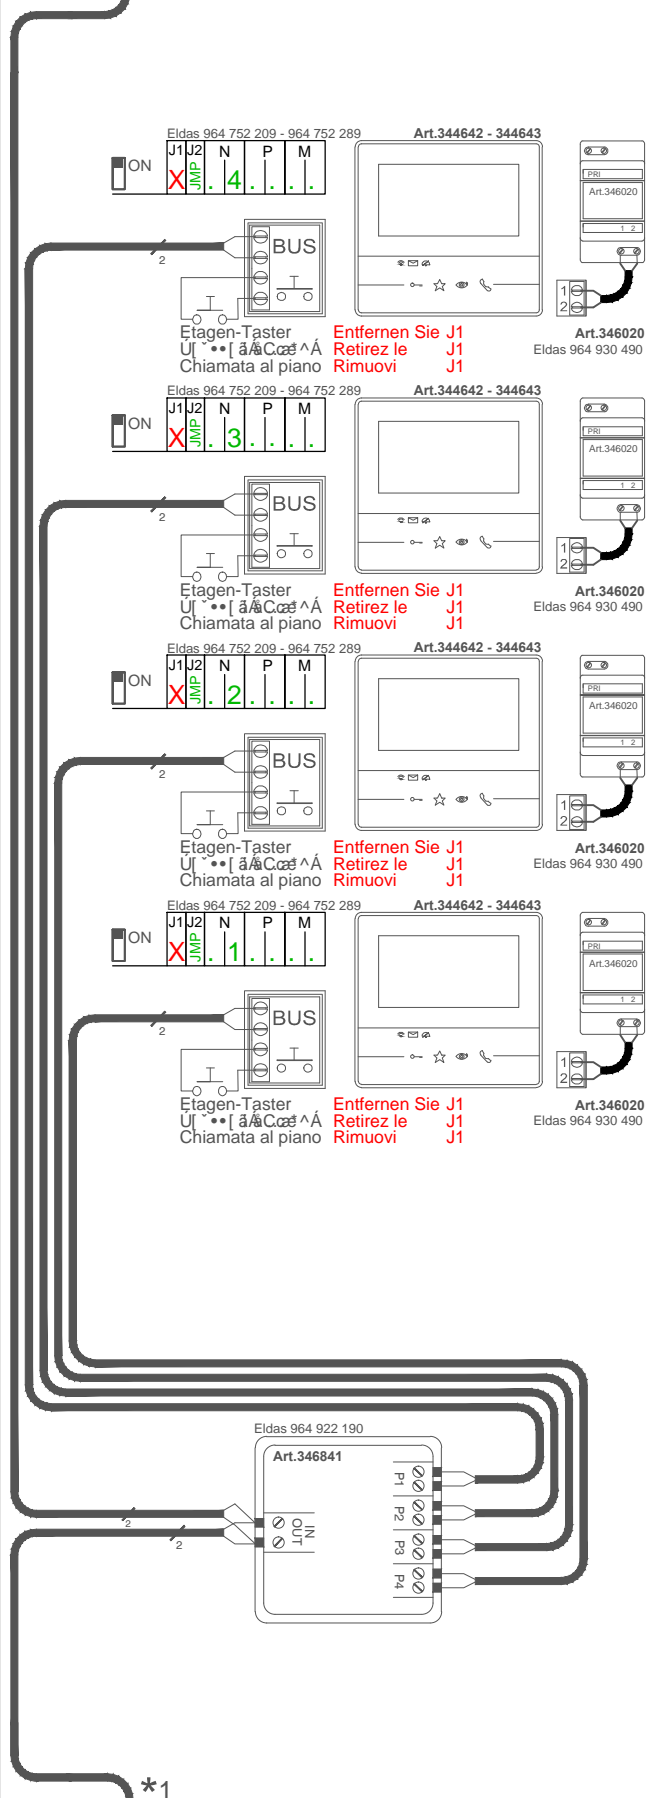


Art.344642 - 344643

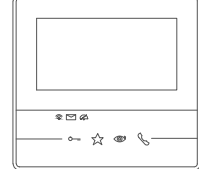 


Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490




Art.344642 - 344643

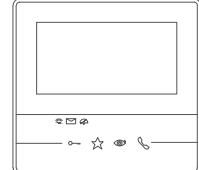 


Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490




Art.344642 - 344643

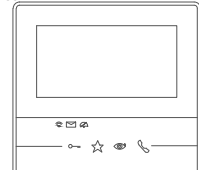 

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490



Art.344642 - 344643




Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

Art.346020
 Eldas 964 930 490

Eldas 964 922 190

 Art.346841

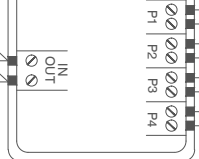

21 TAB 1.1/00

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)


Info: X...
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.3/00

*1




Art.344642 - 344643

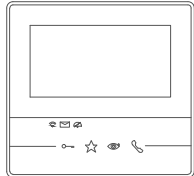 


Etagen-Taster
 U...
 Chiamata al piano

**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490




Art.344642 - 344643

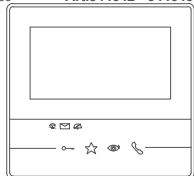 


Etagen-Taster
 U...
 Chiamata al piano

**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490




Art.344642 - 344643

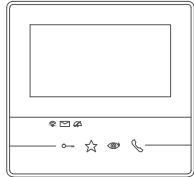 


Etagen-Taster
 U...
 Chiamata al piano

**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490



Art.344642 - 344643

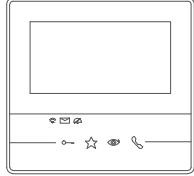 


Etagen-Taster
 U...
 Chiamata al piano

**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

Art.346020
 Eldas 964 930 490

 Eldas 964 922 190

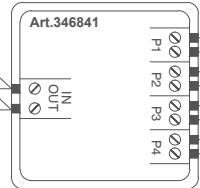

21 INT 1.1/00

*1

* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)



Info: X^i à i q c Á a a | Á ^, ^} á \} Á W ä á | Á ^ Á è à | Á | : á ã . .

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.4/00

Eldas 964 752 209 - 964 752 289

  Art.344642 - 344643

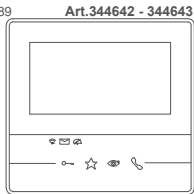



Etagen-Taster
Uf . . | á C ä Á
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

Art.346020
Eldas 964 930 490

Eldas 964 752 209 - 964 752 289

  Art.344642 - 344643

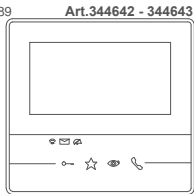



Etagen-Taster
Uf . . | á C ä Á
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

Art.346020
Eldas 964 930 490

Eldas 964 752 209 - 964 752 289

  Art.344642 - 344643

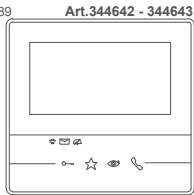


Etagen-Taster
Uf . . | á C ä Á
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

Art.346020
Eldas 964 930 490

Eldas 964 752 209 - 964 752 289

 Art.344642 - 344643

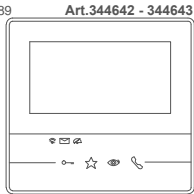


Etagen-Taster
Uf . . | á C ä Á
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

Art.346020
Eldas 964 930 490

 Eldas 964 922 190

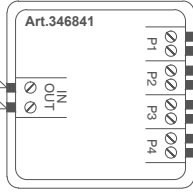

21 INT 1.2/00

* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)


Info: X^i à a | c Á a a | c ^ i , ^ } a } A W a a | s ^ Á e a | Á i : a a . .

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.6/00

Eldas 964 752 209 - 964 752 289

 Art.344642 - 344643

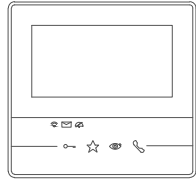



Etagen-Taster
 U | • • | á Á c a s ^ Á
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

Art.346020
 Eldas 964 930 490

Eldas 964 752 209 - 964 752 289

  Art.344642 - 344643

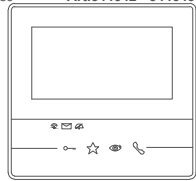



Etagen-Taster
 U | • • | á Á c a s ^ Á
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

Art.346020
 Eldas 964 930 490

Eldas 964 752 209 - 964 752 289

  Art.344642 - 344643

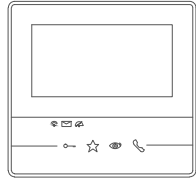




Etagen-Taster
 U | • • | á Á c a s ^ Á
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

Art.346020
 Eldas 964 930 490

Eldas 964 752 209 - 964 752 289

   Art.344642 - 344643

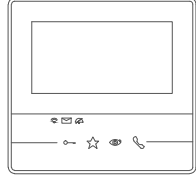


Etagen-Taster
 U | • • | á Á c a s ^ Á
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

Art.346020
 Eldas 964 930 490

 Eldas 964 922 190

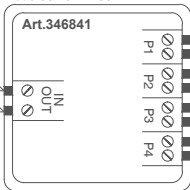

21 INT 1.4/00

* 1-4 (Strang / Colonne montante / Montante)
X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X...
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

