


\* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X^!á!á!cÁæ^!Á! ^)á}ÁWá^!Á^Áéà^Á!iæ..:

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.2/00

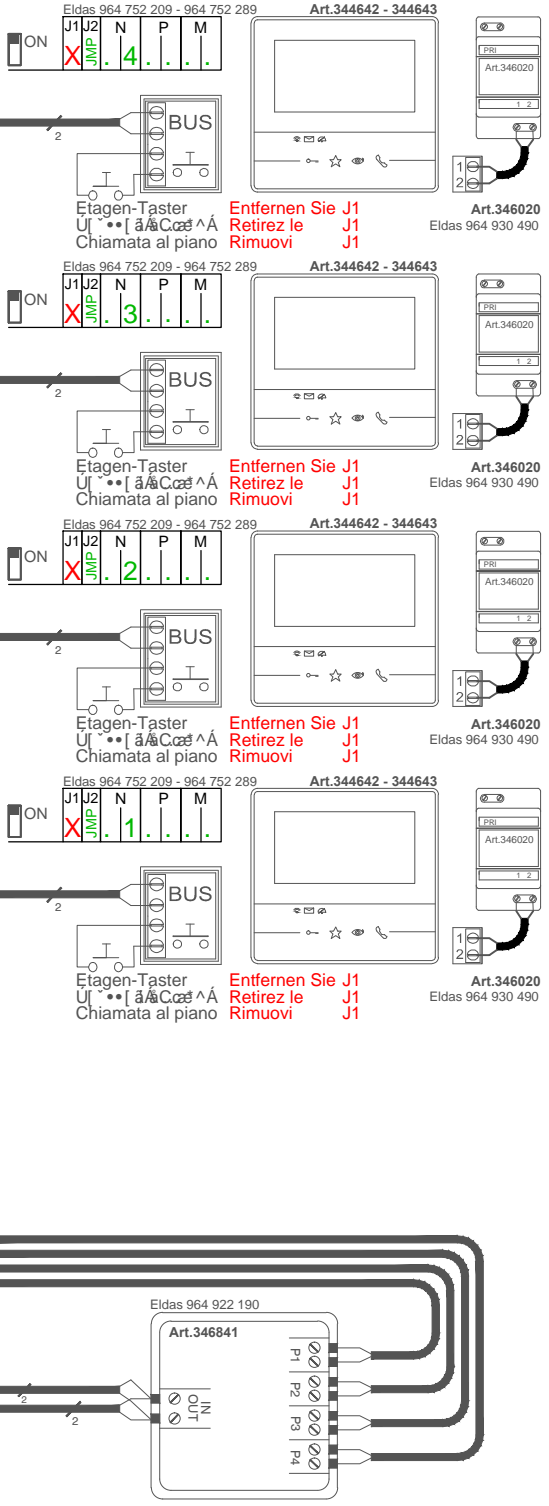

21 TAB 1.1/00






\* 1-4 (Strang / Colonne montante / Montante)  
**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: X...  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


21 INT 1.5/00 \*1

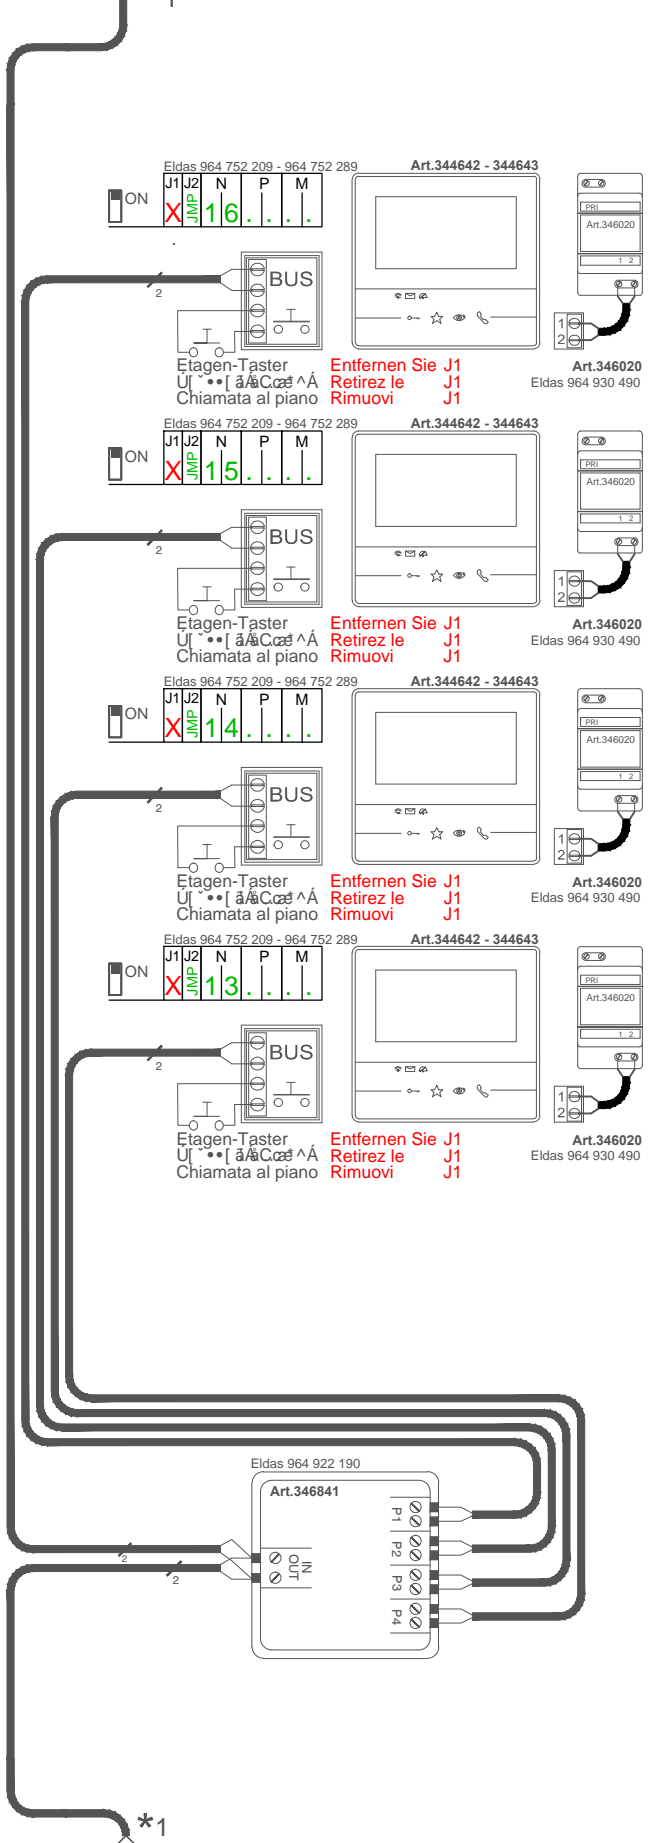

21 INT 1.3/00 \*1

\* 1-4 (Strang / Colonne montante / Montante)  
**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**






Info: X^i|à|ä|c|Ä|æ|/|ç|^|,| ^|}^|ä|w|ä|/|ä|/|&|à|/|Ä|:|æ|...  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

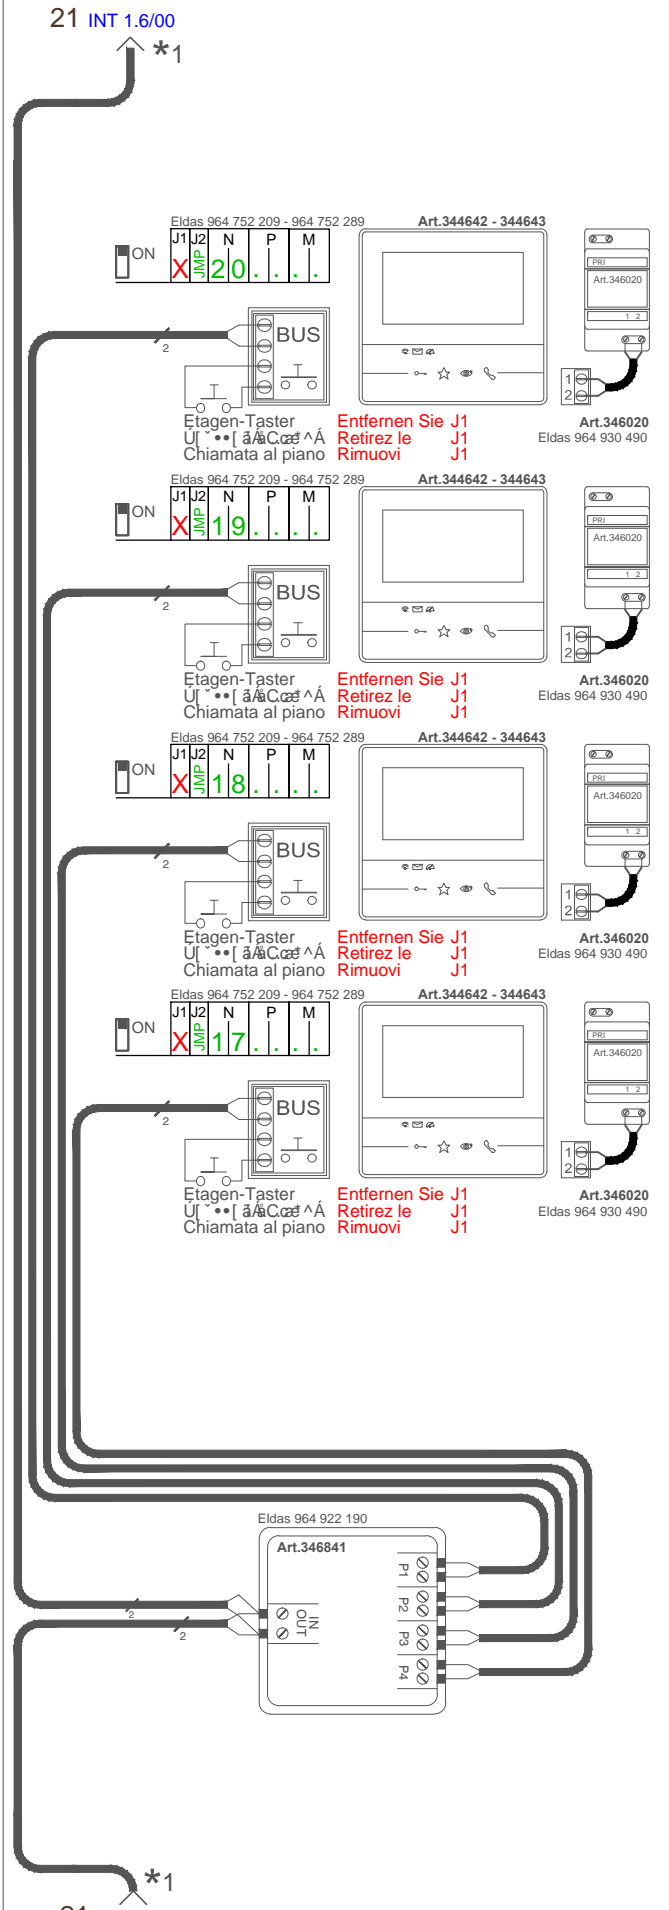

\* 1-4 (Strang / Colonne montante / Montante)  
**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: X...  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.7/00 \*1

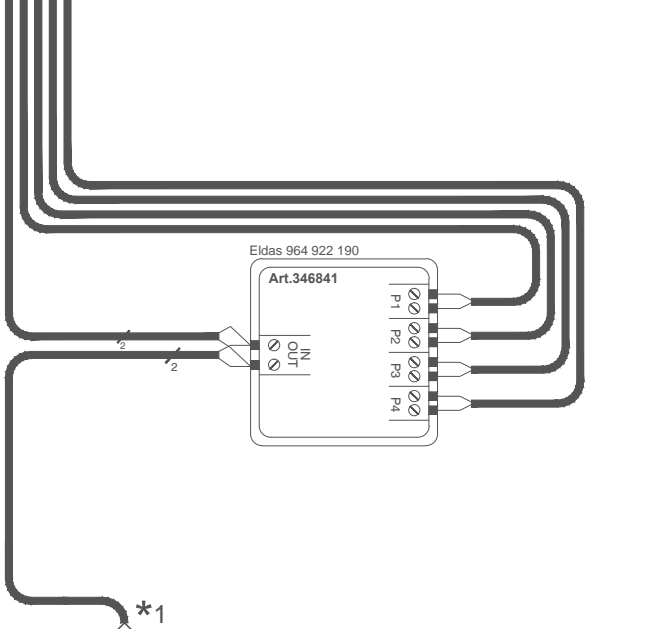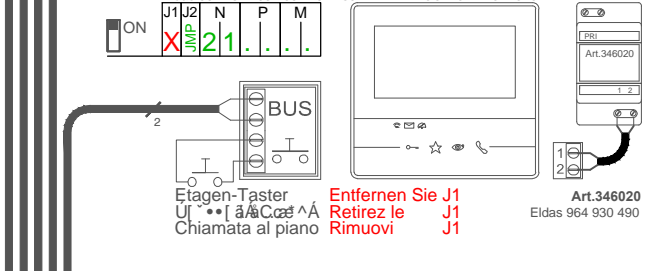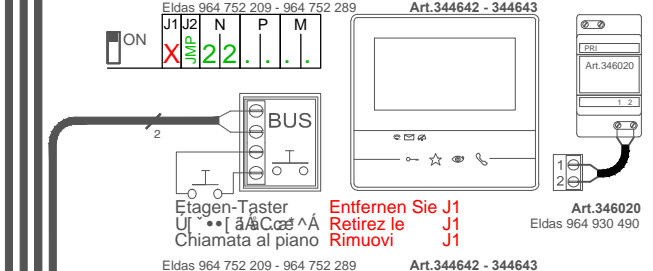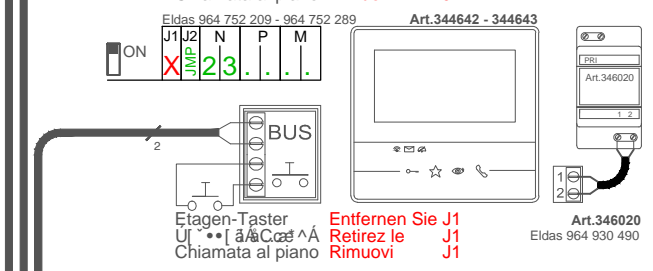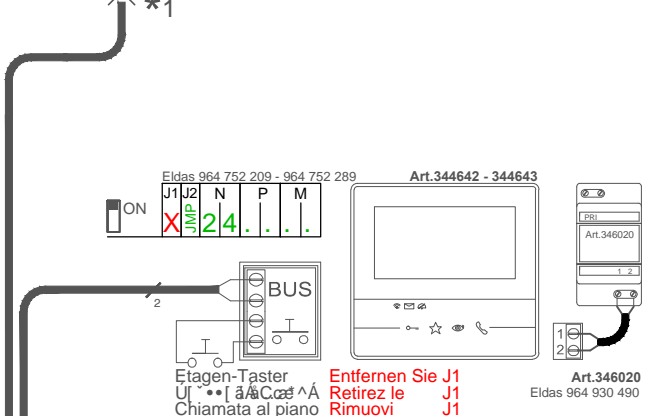

21 INT 1.5/00 \*1

\* 1-4 (Strang / Colonne montante / Montante)  
**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: X^!á!á|cÁæ^|Á^!, ^} á^} ÁWqá^!Á^Á Séá|^Á|!•æ..:  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

