

* 1-4 (Strang / Colonne montante / Montante)


X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X^i|à|q|c|Á|æ|/|ç|, |^| } à\} Á|W|ã|/|á|/|&|è|/|Á| |•|æ|..|


Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.4/00


*1

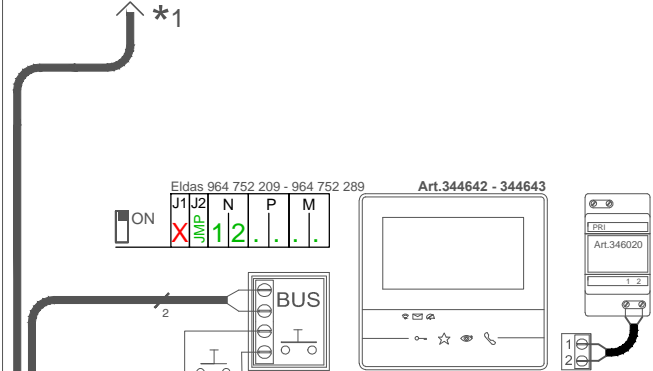


Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

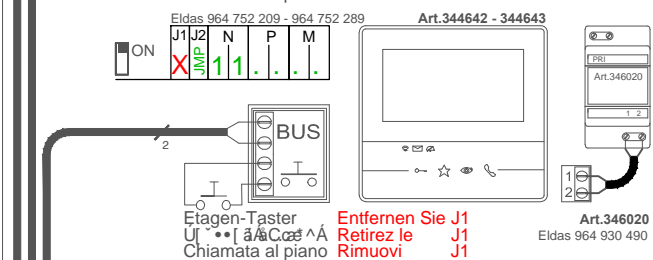


Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

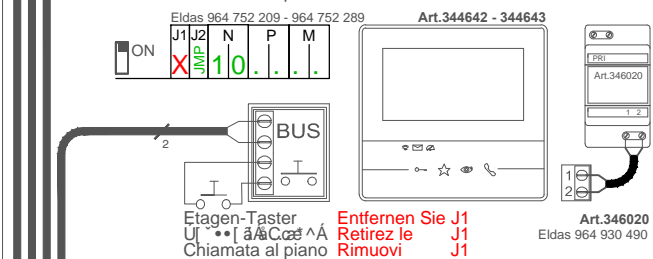

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

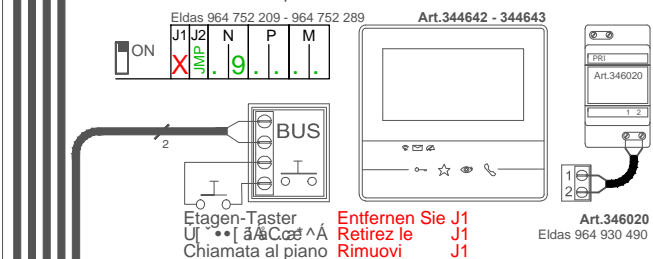

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

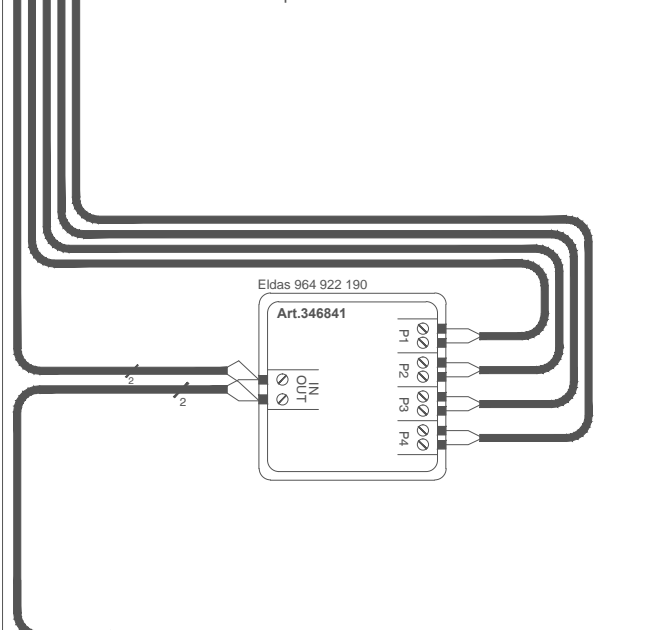

21 INT 1.2/00






* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X'ia'ia'ic'Áaa'Á'Á' ^) á} ÁW'á'Á'Á' Áéà'Á'Á' :aa'..

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.7/00

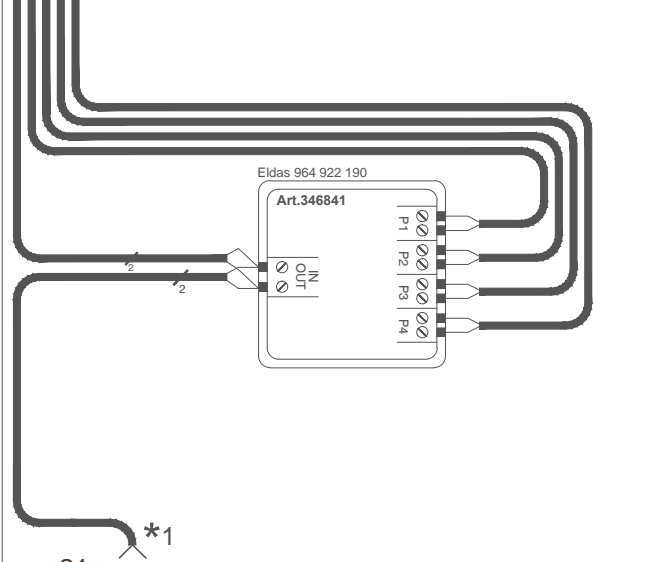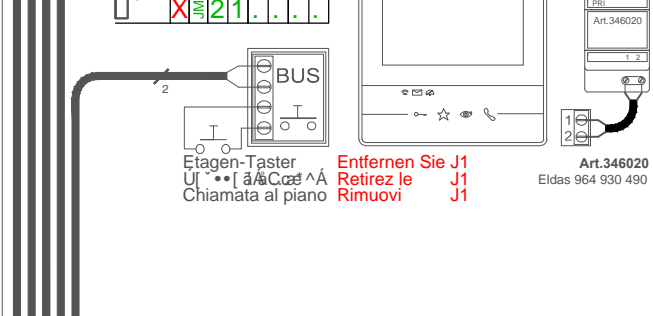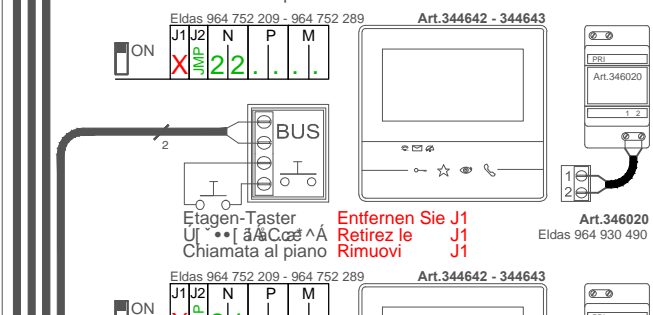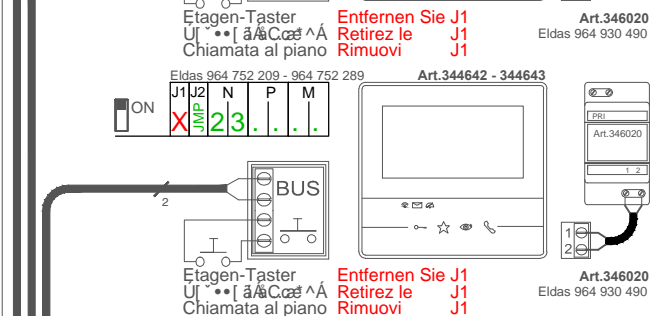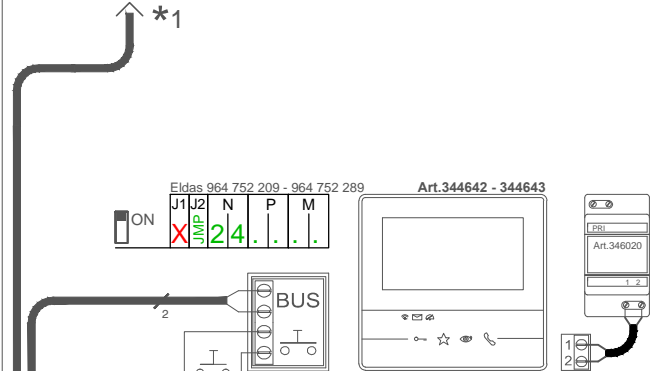

21 INT 1.5/00

* 1-4 (Strang / Colonne montante / Montante)
X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X^!à!q!c^Áæ^!s^!, ^} à^} /ÁWã^!Á^•Séà^•Á!•æ!•
Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

