





\* 1-4 (Strang / Colonne montante / Montante)


**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: X^i|à|q|c|Á|æ|/|ç|, |^| } à\} Á|W|ã|/|á|/|&|è|/|Á| |•|æ|..|

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.4/00

\*1

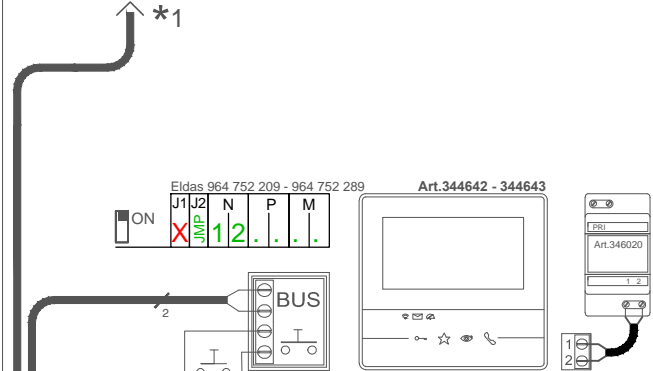

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643



ON J1 J2 N P M  
 X 12 . . . .

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

Art.346020  
 Eldas 964 930 490

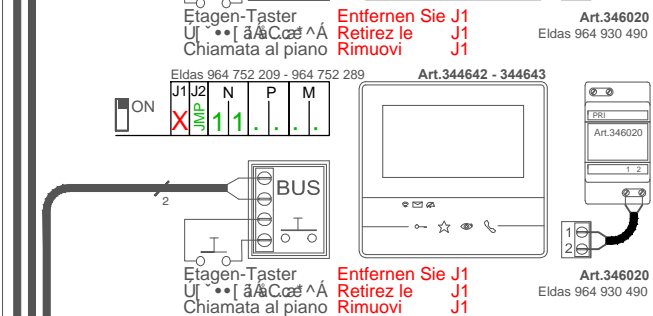

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643



ON J1 J2 N P M  
 X 11 . . . .

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

Art.346020  
 Eldas 964 930 490

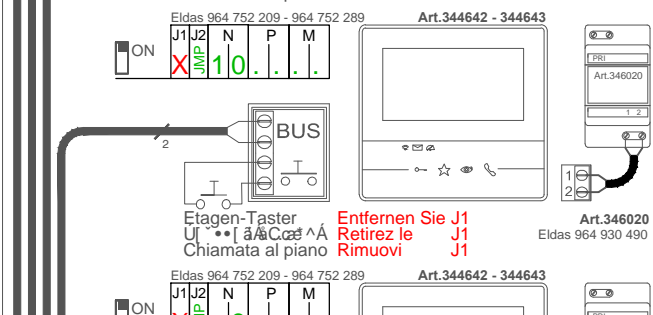

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643



ON J1 J2 N P M  
 X 10 . . . .


Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

Art.346020  
 Eldas 964 930 490

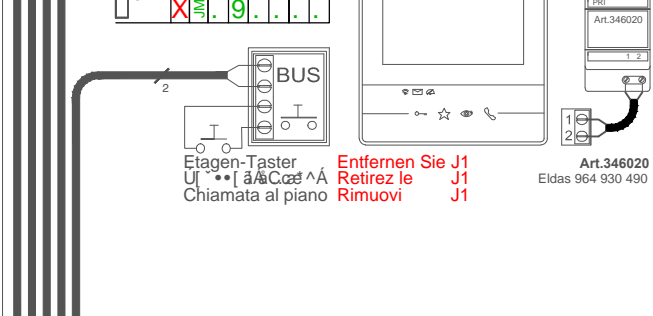

Eldas 964 752 209 - 964 752 289

 
Art.344642 - 344643



ON J1 J2 N P M  
 X 9 . . . .

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

Art.346020  
 Eldas 964 930 490

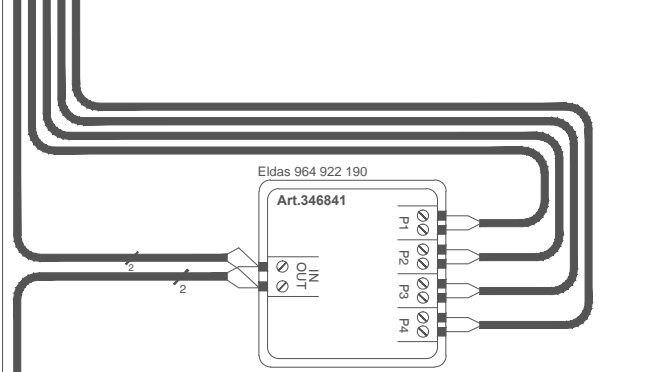

Eldas 964 922 190

Art.346841

P1  
 P2  
 P3  
 P4

21 INT 1.2/00

\*1










\* 1-4 (Strang / Colonne montante / Montante)  
**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: X...  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.7/00 \*1

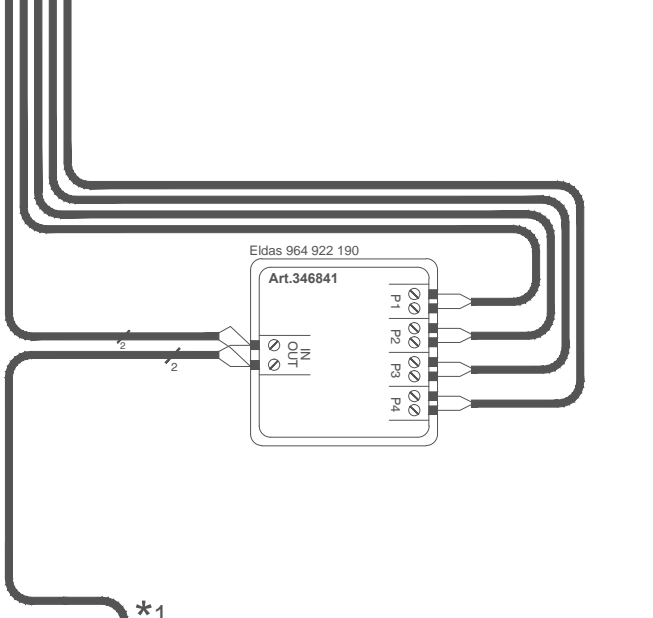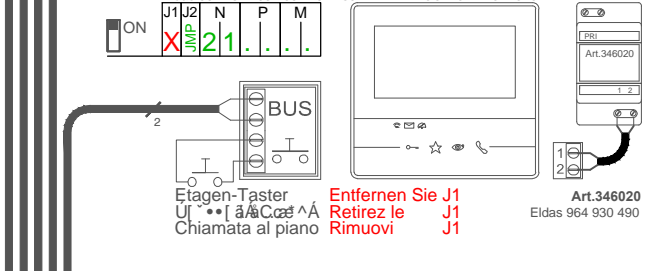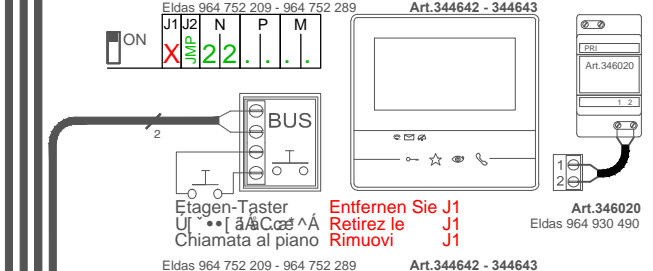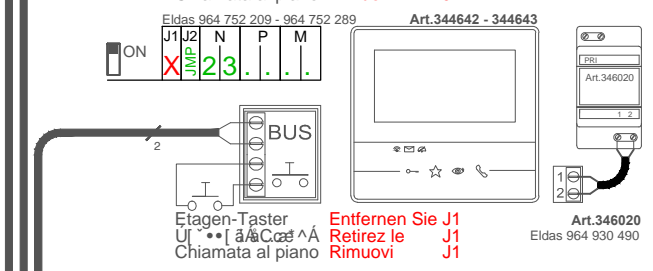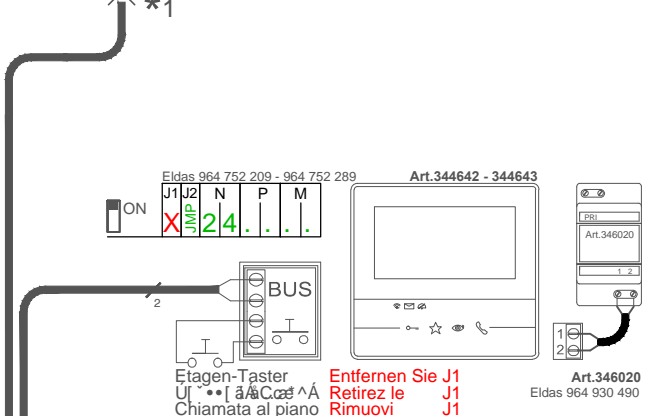

21 INT 1.5/00 \*1







\* 1-4 (Strang / Colonne montante / Montante)

**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: X^!á!á|c Áæ^|Á^, ^} á} ÁVá^!Á^Áé|Á^!áæ..

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

