
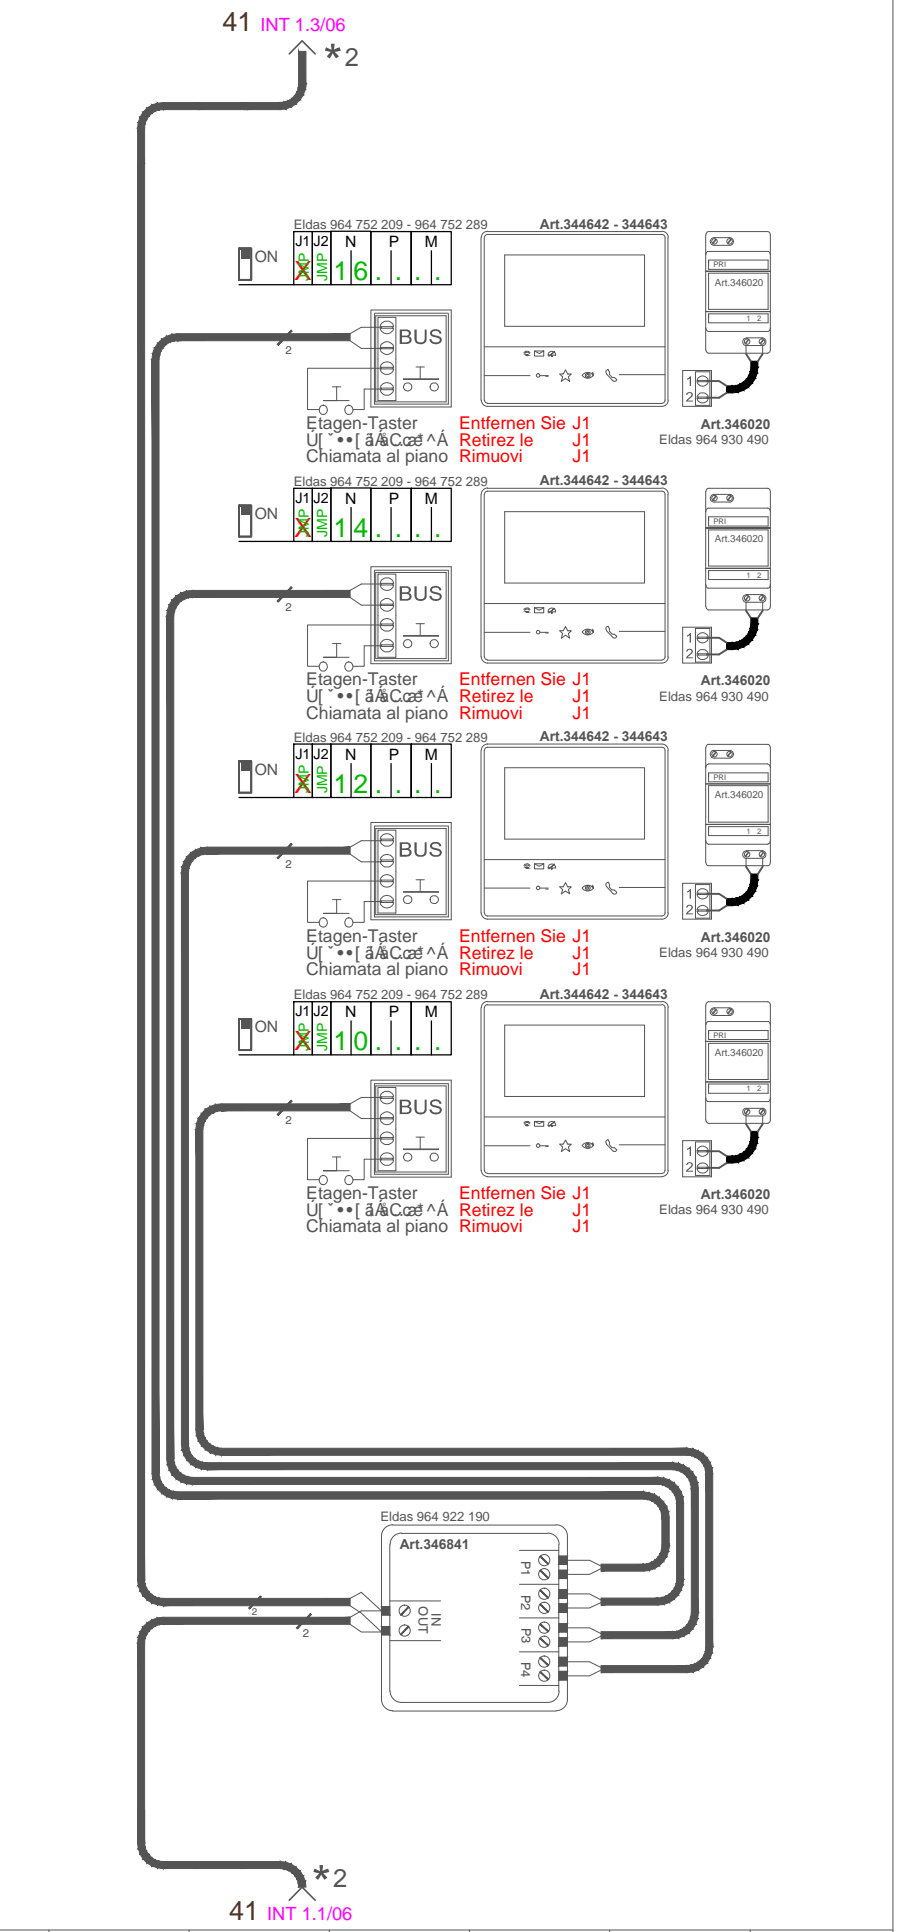


* 1-4 (Strang / Colonne montante / Montante)
X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X^!á!ã!cÁæ!Á! ^) á! ÁWãá!Á!Á!Á!Á!Á!
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

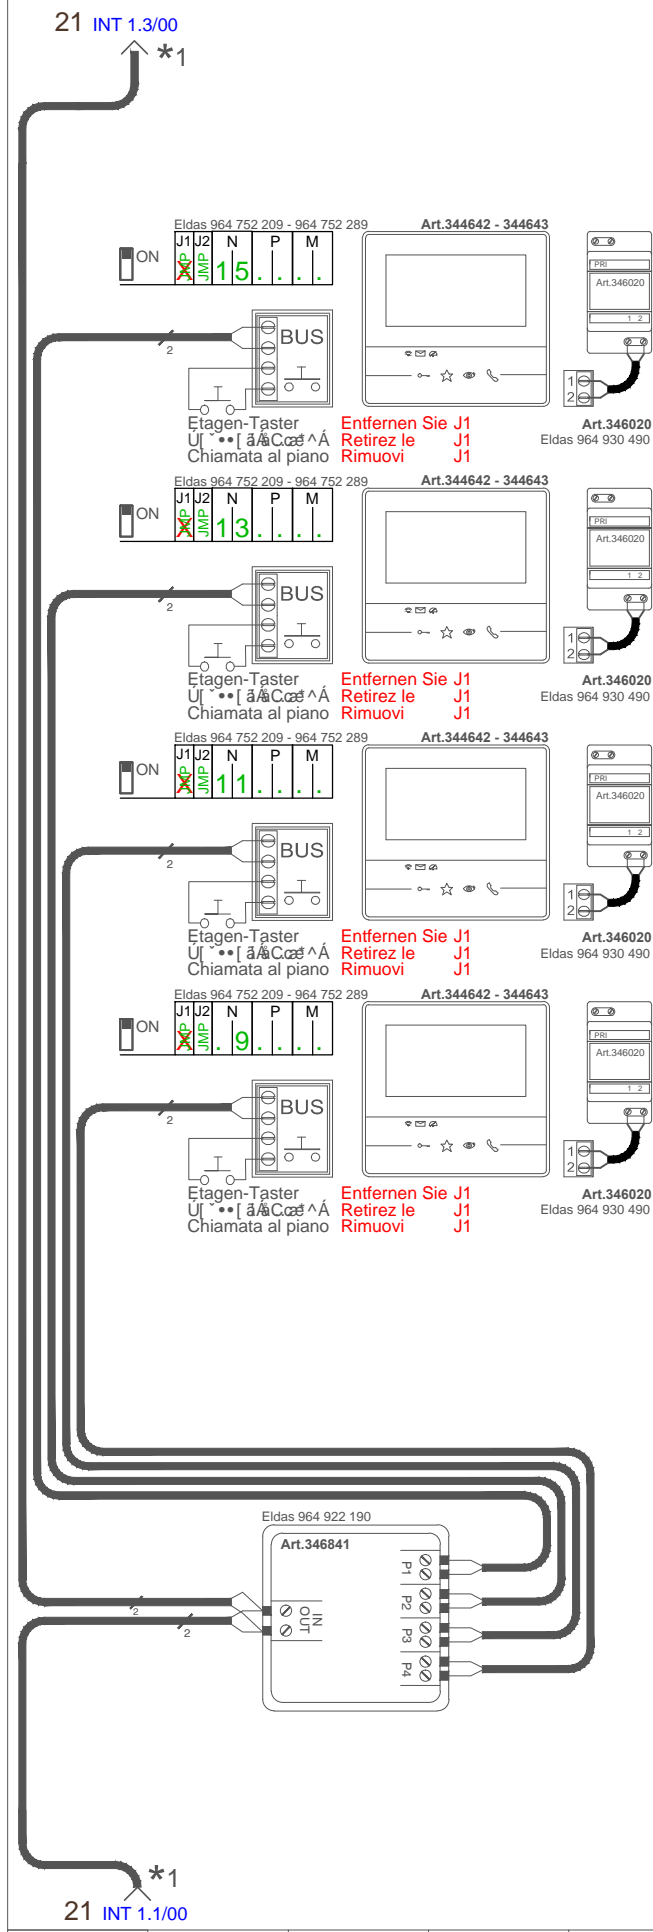

* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X\1 à 4 / A à 4 / A\1, \) à 4 / A\1 à 4 / A\1 à 4 / A\1 à 4 / A\1 à 4


Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.4/00


*1

41 INT 1.4/06

*2

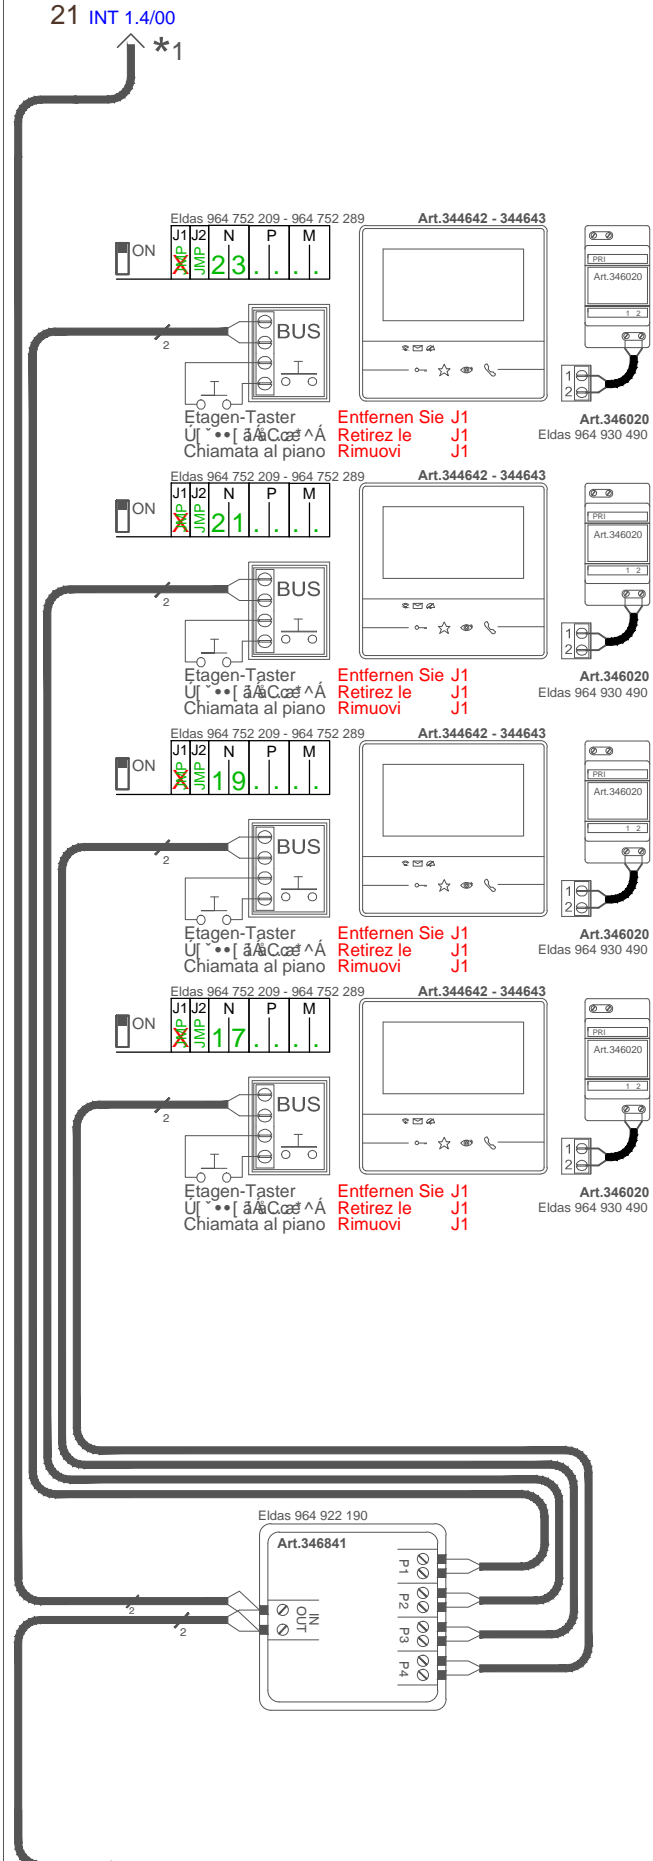

21 INT 1.2/00

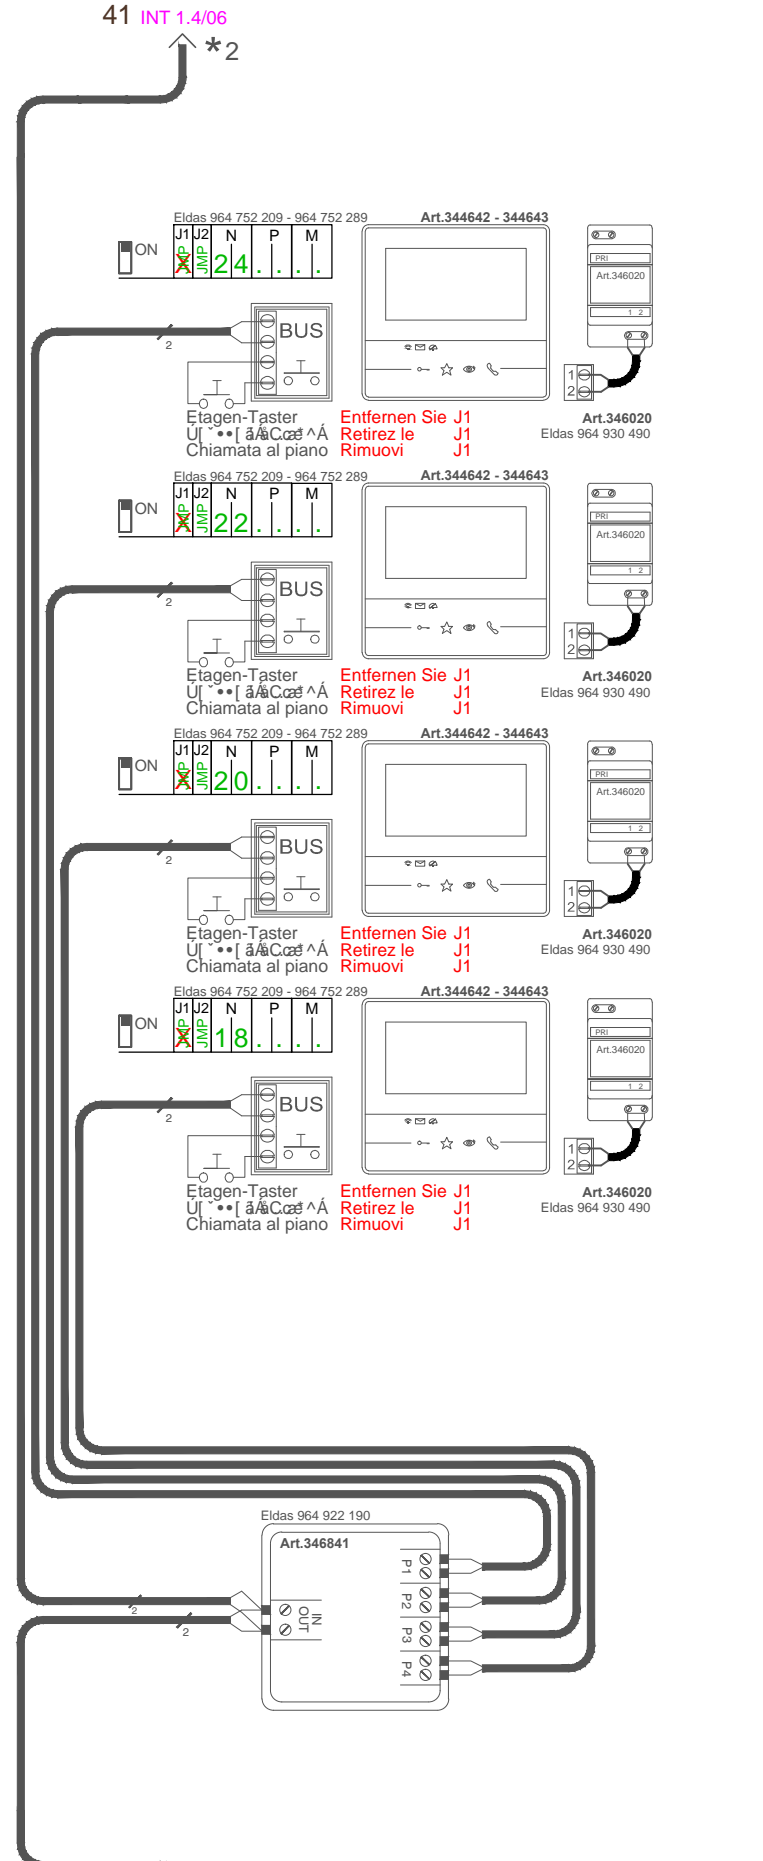

41 INT 1.2/06

* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: X^!|à|à|C^À^æ^|À^!^, ^} à^} À^V^à^!^À^!^•À^è^!^•À^!^•à^!^•

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

