


\* 1-4 (Strang / Colonne montante / Montante)

**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

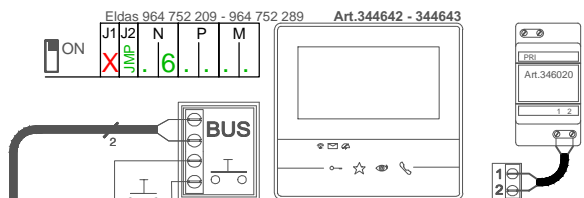


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

**Entfernen Sie J1**  
**Retirez le J1**  
**Rimuovi J1**

Art.346020  
 Eldas 964 930 490

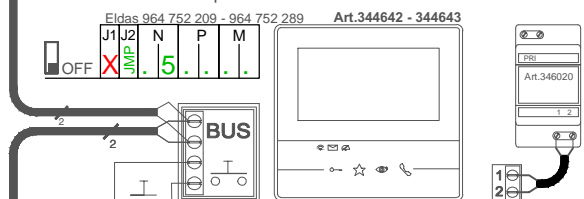


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

**Entfernen Sie J1**  
**Retirez le J1**  
**Rimuovi J1**

Art.346020  
 Eldas 964 930 490

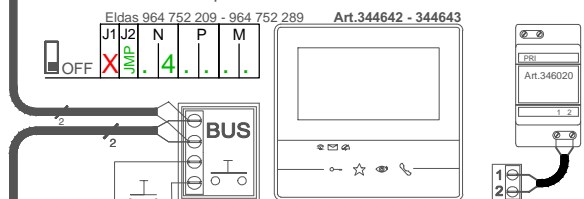


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

**Entfernen Sie J1**  
**Retirez le J1**  
**Rimuovi J1**

Art.346020  
 Eldas 964 930 490

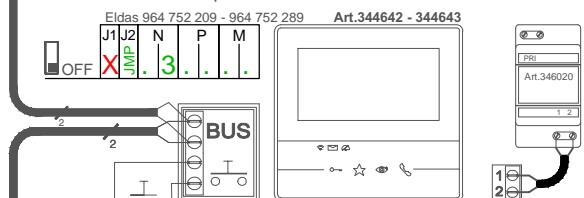


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

**Entfernen Sie J1**  
**Retirez le J1**  
**Rimuovi J1**

Art.346020  
 Eldas 964 930 490

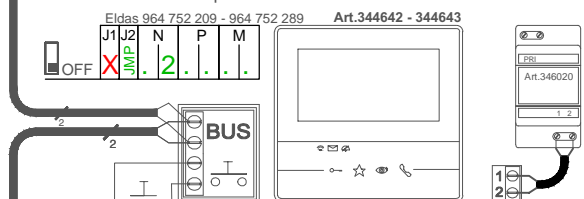


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

**Entfernen Sie J1**  
**Retirez le J1**  
**Rimuovi J1**

Art.346020  
 Eldas 964 930 490

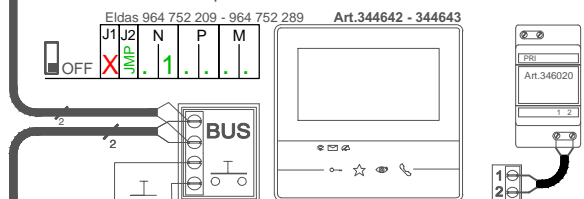

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

**Entfernen Sie J1**  
**Retirez le J1**  
**Rimuovi J1**

Art.346020  
 Eldas 964 930 490