

 
\* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.2/00

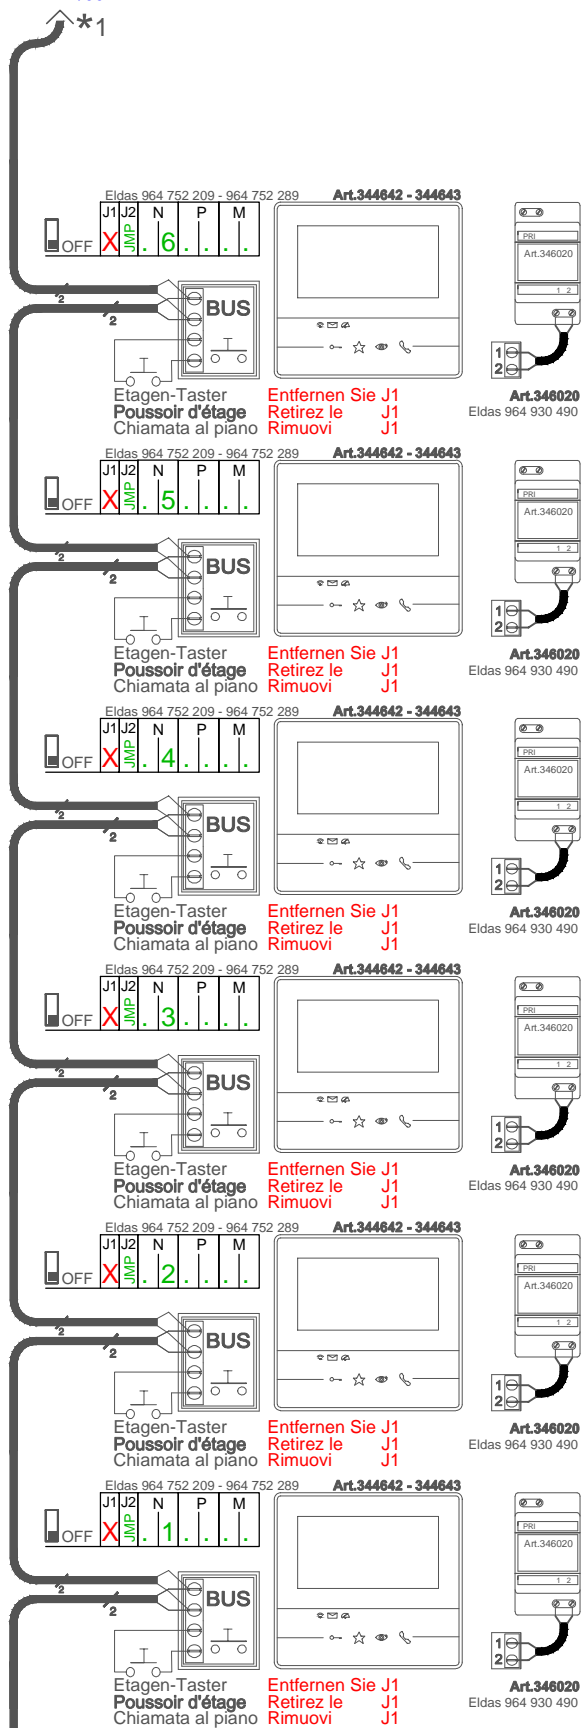


21 TAB 1.1/00

\* 1-4 (Strang / Colonne montante / Montante)  
**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

 
21 INT 1.3/00

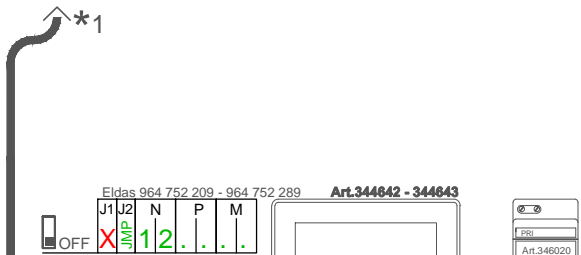

Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 
**Art.346020**  
 Eldas 964 930 490

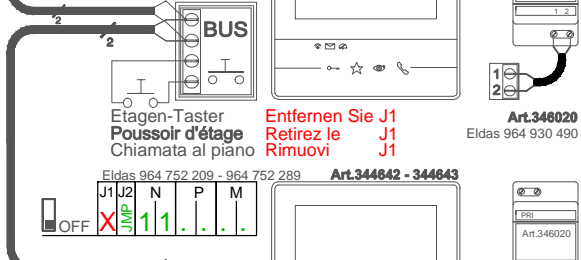

Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 **Art.346020**  
 Eldas 964 930 490

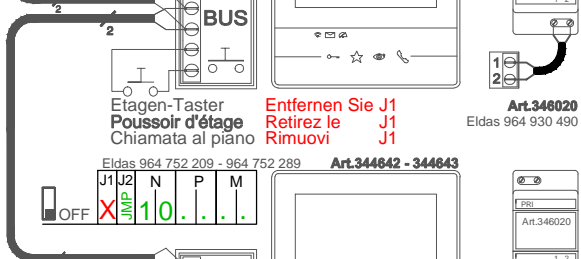

Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

**Art.346020**  
 Eldas 964 930 490



Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1


**Art.346020**  
 Eldas 964 930 490



Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 **Art.346020**  
 Eldas 964 930 490

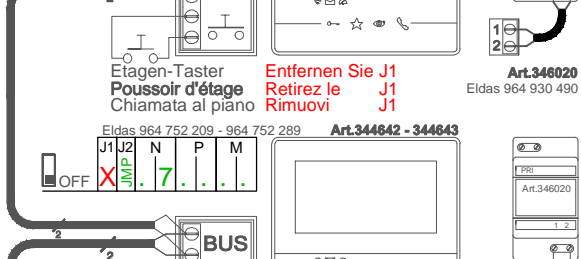

Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

**Art.346020**  
 Eldas 964 930 490



21 INT 1.1/00


\* 1-4 (Strang / Colonne montante / Montante)

**X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)**

 Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.4/00

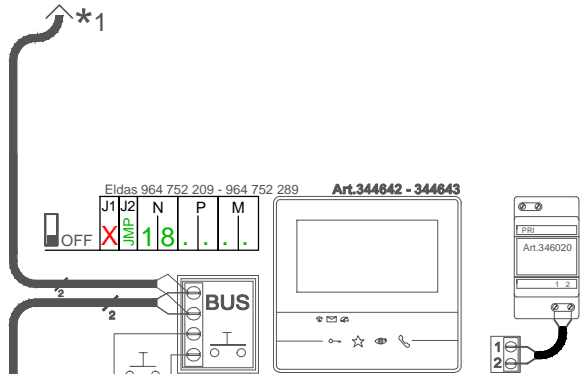

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M  
 OFF X JMP 18 . . . .

Etagen-Taster  
 Poussoir d'étage  
 Chiamata al piano

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 Art.346020  
 Eldas 964 930 490

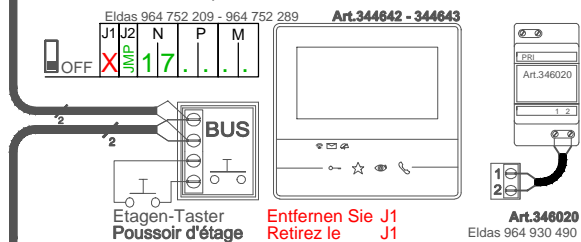

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M  
 OFF X JMP 17 . . . .

Etagen-Taster  
 Poussoir d'étage  
 Chiamata al piano

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 Art.346020  
 Eldas 964 930 490

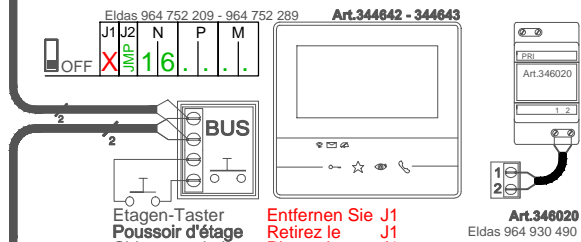

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M  
 OFF X JMP 16 . . . .

Etagen-Taster  
 Poussoir d'étage  
 Chiamata al piano

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 Art.346020  
 Eldas 964 930 490

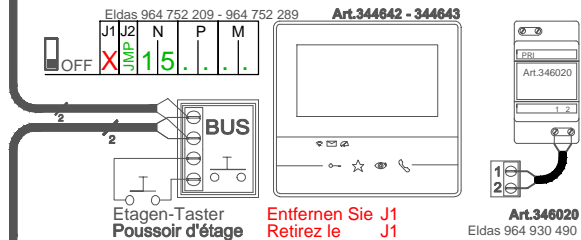

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M  
 OFF X JMP 15 . . . .

Etagen-Taster  
 Poussoir d'étage  
 Chiamata al piano

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 Art.346020  
 Eldas 964 930 490

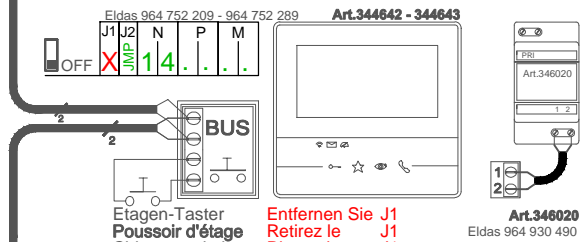

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M  
 OFF X JMP 14 . . . .

Etagen-Taster  
 Poussoir d'étage  
 Chiamata al piano

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

 Art.346020  
 Eldas 964 930 490

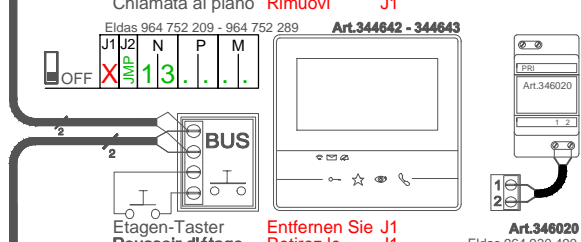

Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

J1 J2 N P M  
 OFF X JMP 13 . . . .

Etagen-Taster  
 Poussoir d'étage  
 Chiamata al piano

Entfernen Sie J1  
 Retirez le J1  
 Rimuovi J1

Art.346020  
 Eldas 964 930 490

 
 
 
 
21 INT 1.2/00

\* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.5/00

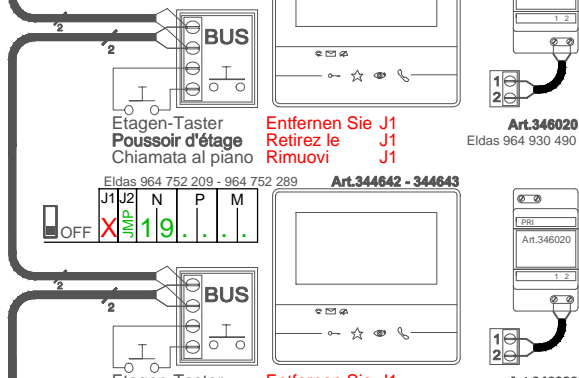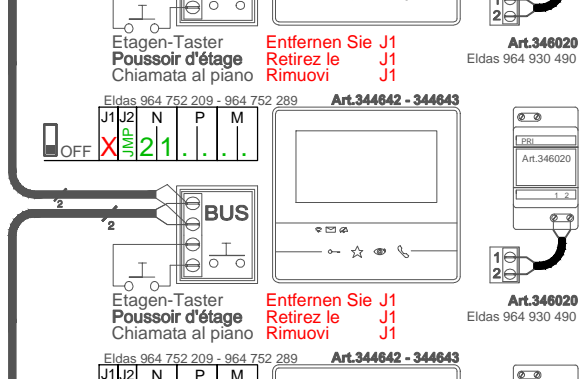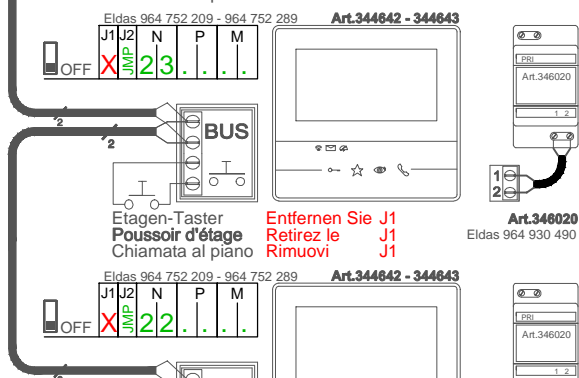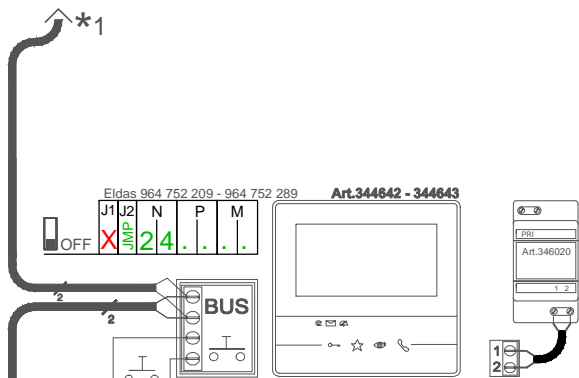

21 INT 1.3/00

 
 
 
 
 
 
\* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.6/00

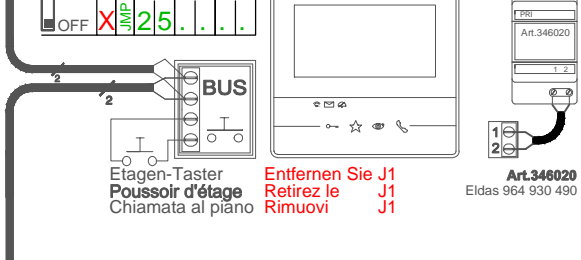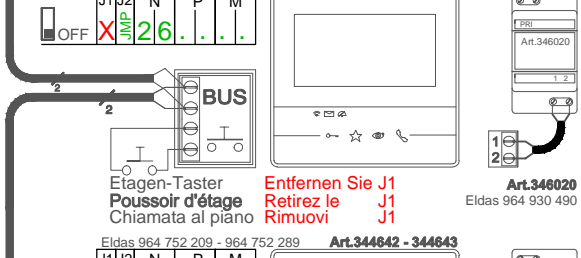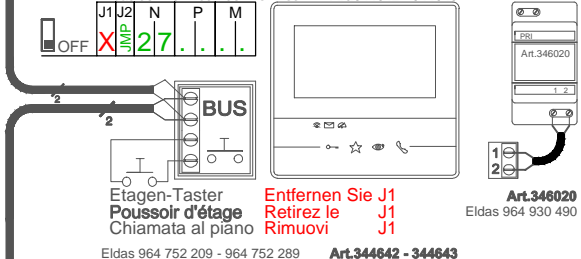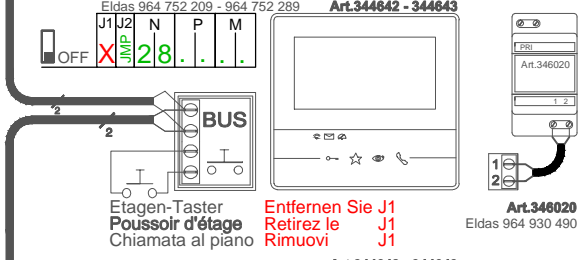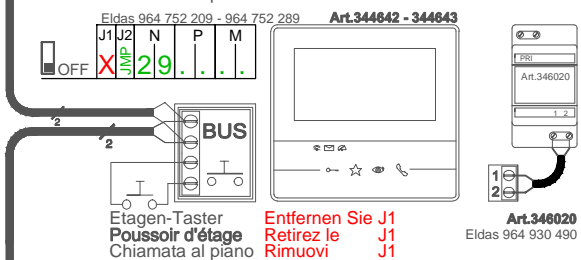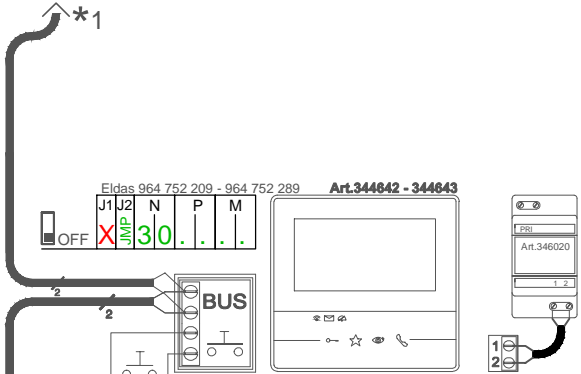

21 INT 1.4/00

 
\* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.7/00

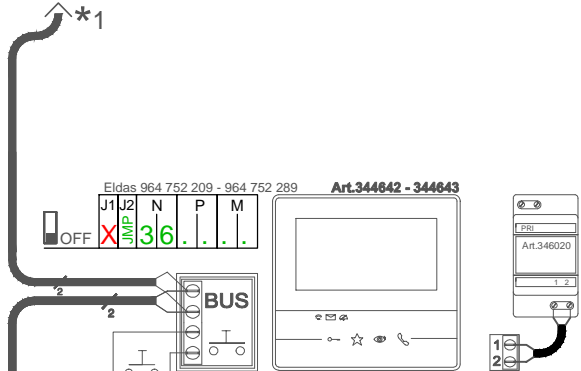


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

OFF J1 J2 N P M  
X J1 J2 N P M  
3 6 . . .

Etagen-Taster  
Poussoir d'étage  
Chiamata al piano

Entfernen Sie J1  
Retirez le J1  
Rimuovi J1

 **Art.346020**  
Eldas 964 930 490

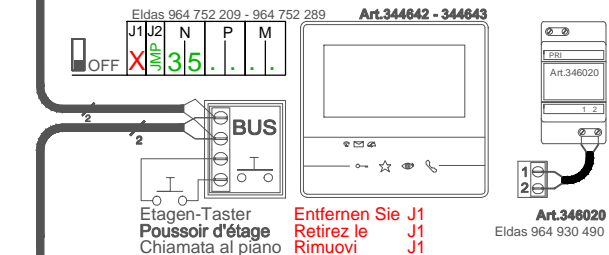


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

OFF J1 J2 N P M  
X J1 J2 N P M  
3 5 . . .

Etagen-Taster  
Poussoir d'étage  
Chiamata al piano

Entfernen Sie J1  
Retirez le J1  
Rimuovi J1

 **Art.346020**  
Eldas 964 930 490

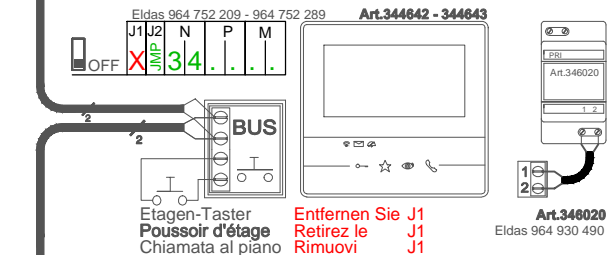


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

OFF J1 J2 N P M  
X J1 J2 N P M  
3 4 . . .

Etagen-Taster  
Poussoir d'étage  
Chiamata al piano

Entfernen Sie J1  
Retirez le J1  
Rimuovi J1

 **Art.346020**  
Eldas 964 930 490

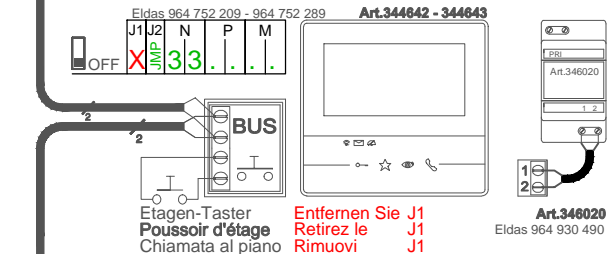


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

OFF J1 J2 N P M  
X J1 J2 N P M  
3 3 . . .

Etagen-Taster  
Poussoir d'étage  
Chiamata al piano

Entfernen Sie J1  
Retirez le J1  
Rimuovi J1

 **Art.346020**  
Eldas 964 930 490

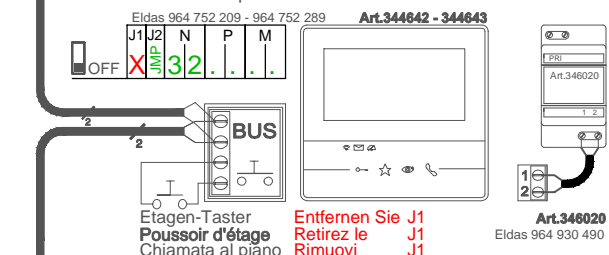


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

OFF J1 J2 N P M  
X J1 J2 N P M  
3 2 . . .

Etagen-Taster  
Poussoir d'étage  
Chiamata al piano

Entfernen Sie J1  
Retirez le J1  
Rimuovi J1

 **Art.346020**  
Eldas 964 930 490

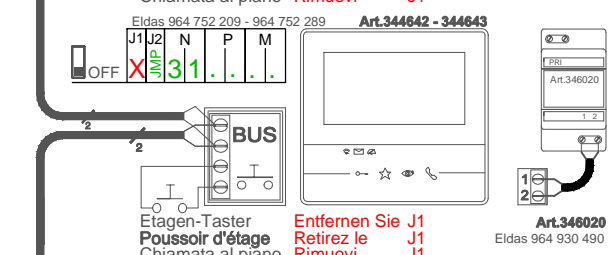

Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

OFF J1 J2 N P M  
X J1 J2 N P M  
3 1 . . .

Etagen-Taster  
Poussoir d'étage  
Chiamata al piano

Entfernen Sie J1  
Retirez le J1  
Rimuovi J1

**Art.346020**  
Eldas 964 930 490

21 INT 1.5/00

\* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

