

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.2/00

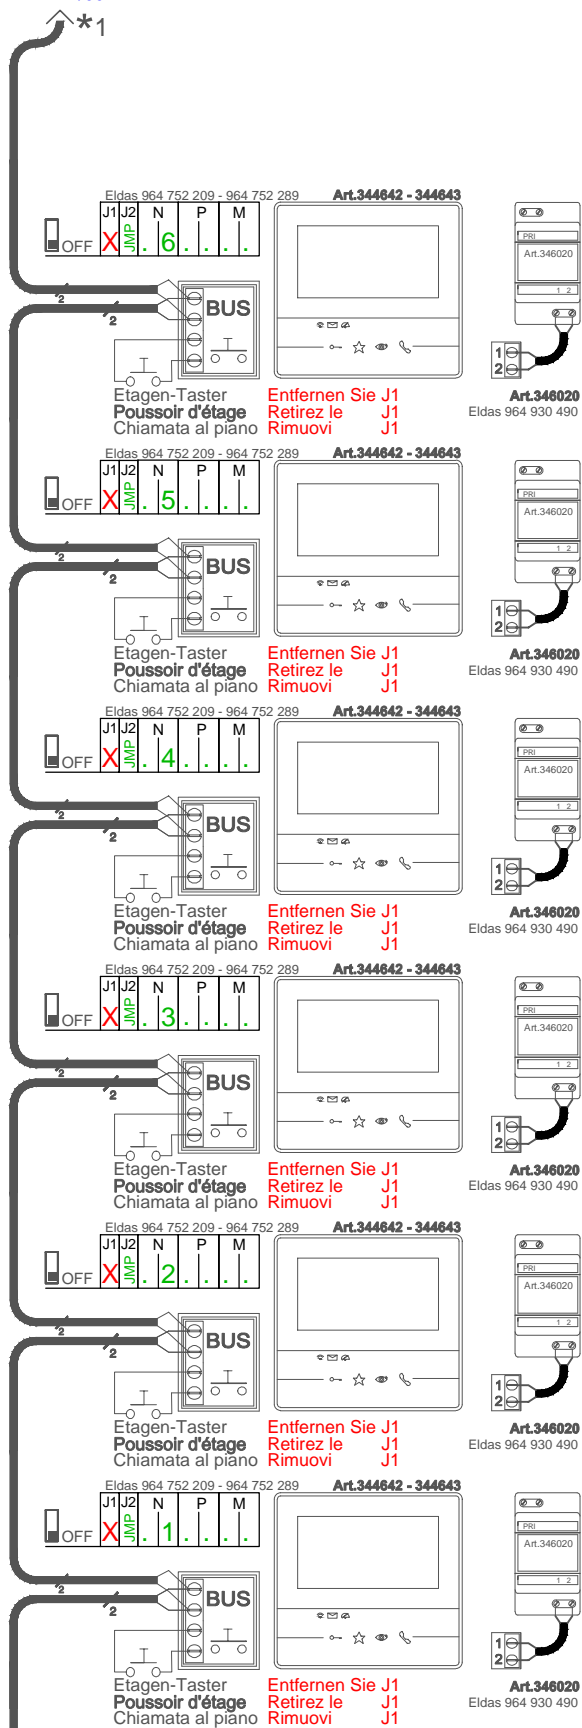


21 TAB 1.1/00

* 1-4 (Strang / Colonne montante / Montante)
X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

 21 INT 1.3/00

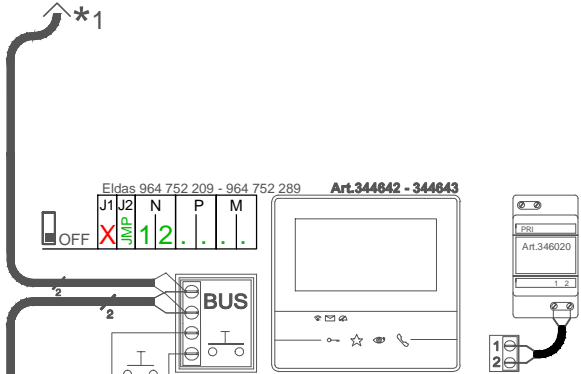


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**



Etagen-Taster
Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
 Eldas 964 930 490

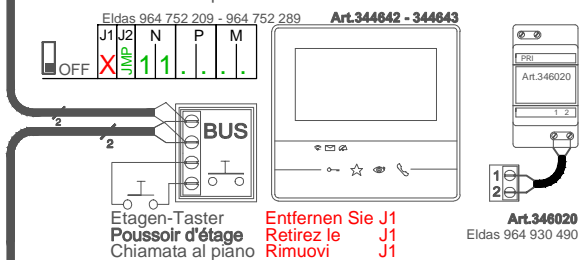


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**



Etagen-Taster
Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
 Eldas 964 930 490

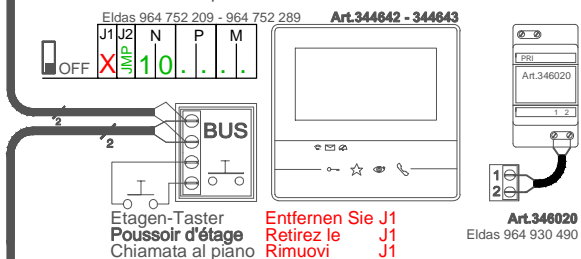


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**



Etagen-Taster
Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
 Eldas 964 930 490

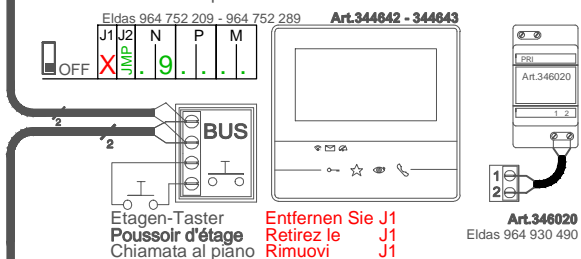


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**



Etagen-Taster
Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
 Eldas 964 930 490

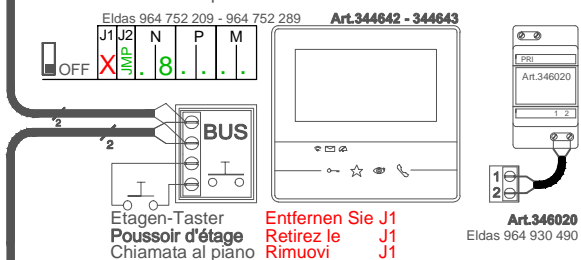


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**



Etagen-Taster
Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
 Eldas 964 930 490

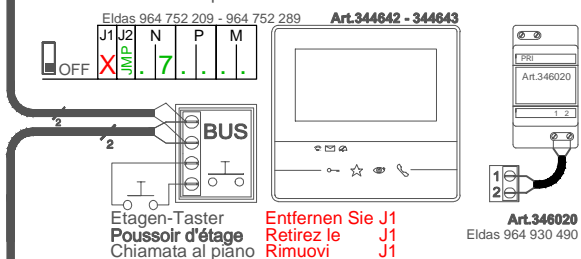

Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**



Etagen-Taster
Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1


Art.346020
 Eldas 964 930 490

21 INT 1.1/00

* 1-4 (Strang / Colonne montante / Montante)
X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.4/00

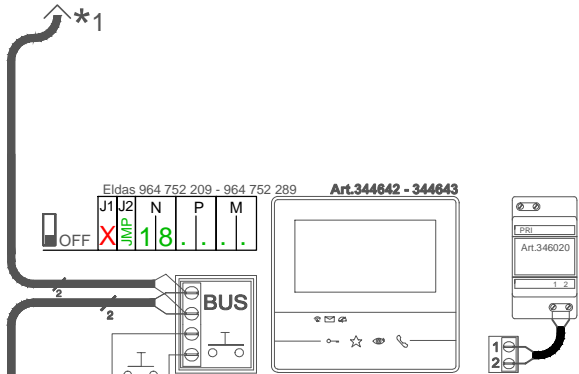


Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

Art.346020

 Eldas 964 930 490

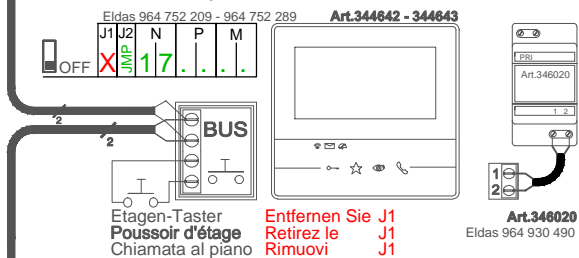


Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

Art.346020

 Eldas 964 930 490

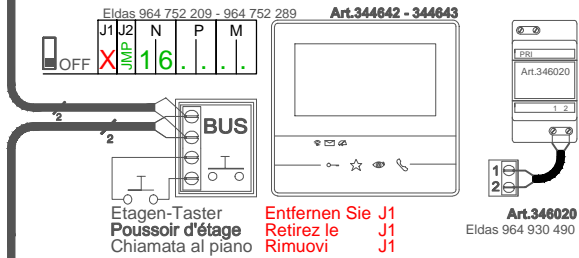


Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

Art.346020

 Eldas 964 930 490

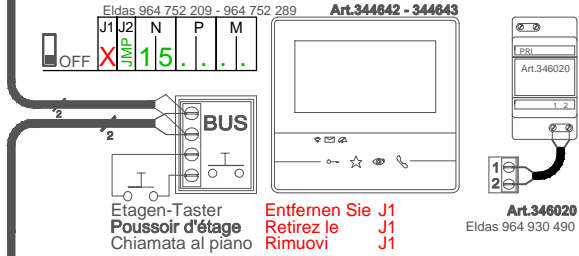


Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

Art.346020

 Eldas 964 930 490

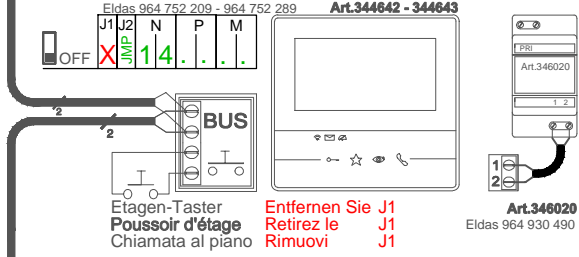


Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

Art.346020

 Eldas 964 930 490

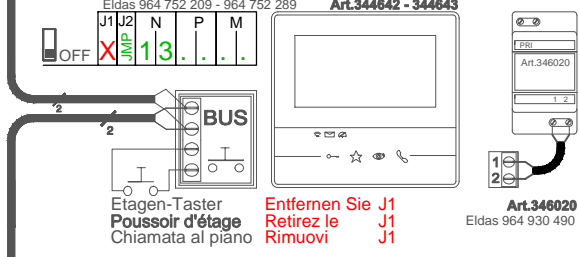

Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

Art.346020

Eldas 964 930 490

21 INT 1.2/00


* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.5/00

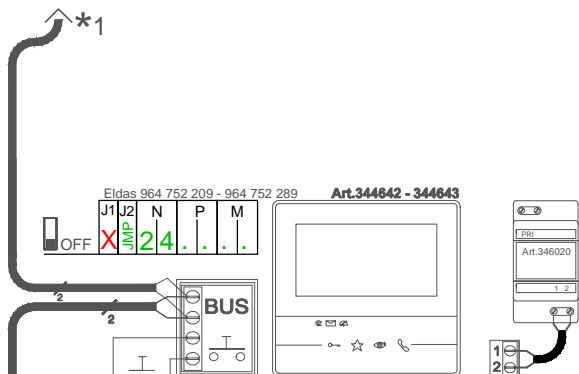


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Etagen-Taster
Poussoir d'étage
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
Eldas 964 930 490

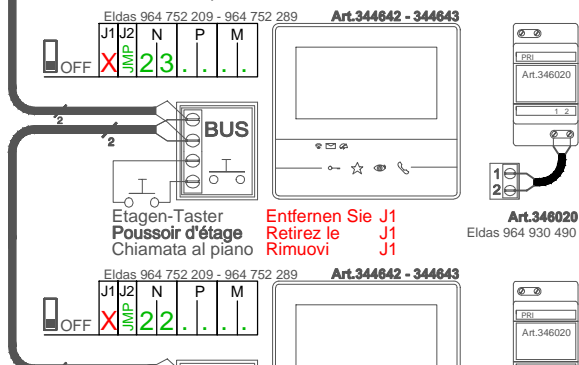


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Etagen-Taster
Poussoir d'étage
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
Eldas 964 930 490

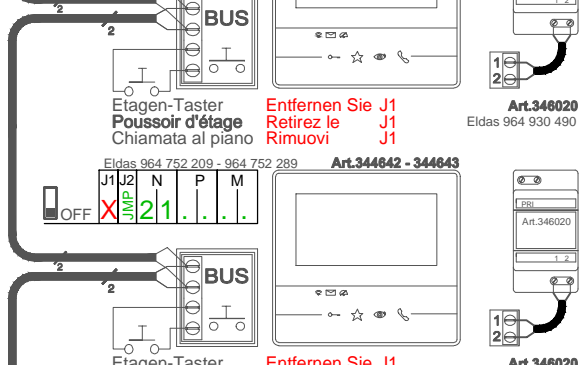


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Etagen-Taster
Poussoir d'étage
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
Eldas 964 930 490

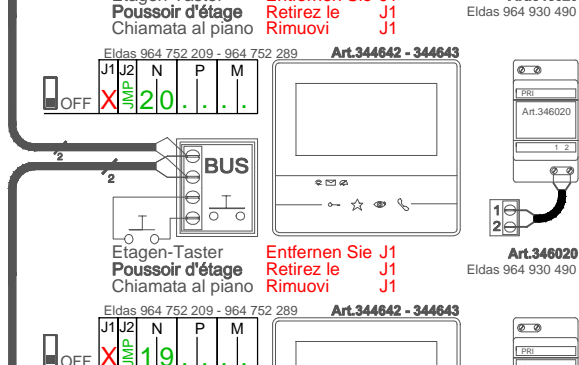


Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Etagen-Taster
Poussoir d'étage
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1

 Art.346020
Eldas 964 930 490

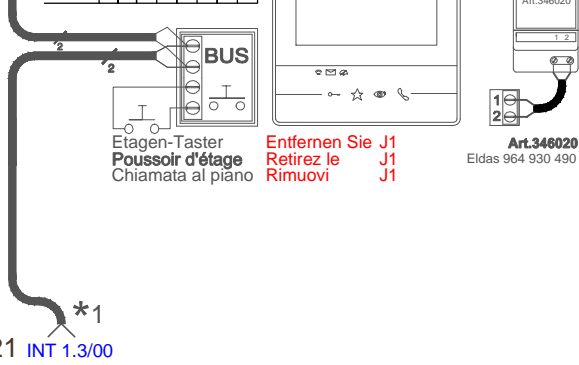

Eldas 964 752 209 - 964 752 289 **Art.344642 - 344643**

Etagen-Taster
Poussoir d'étage
Chiamata al piano

Entfernen Sie J1
Retirez le J1
Rimuovi J1







Art.346020
Eldas 964 930 490

21 INT 1.3/00

* 1-4 (Strang / Colonne montante / Montante)
 X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.6/00

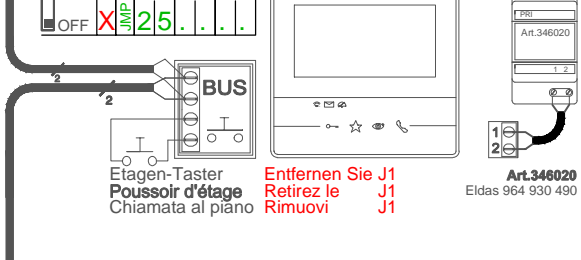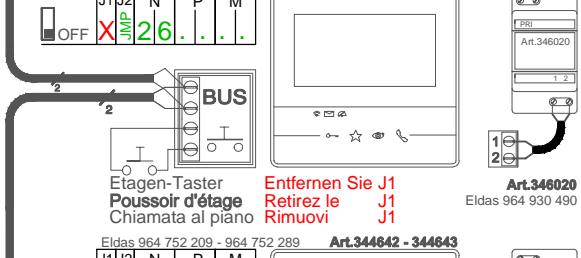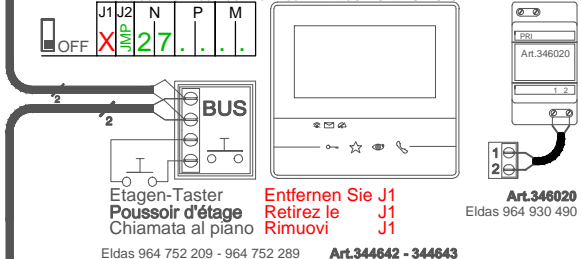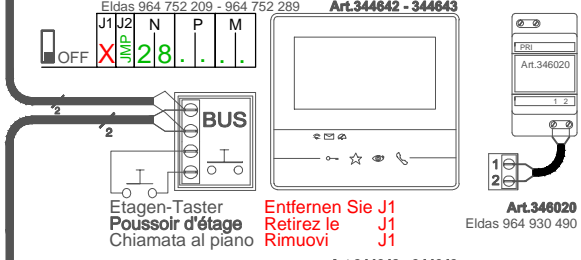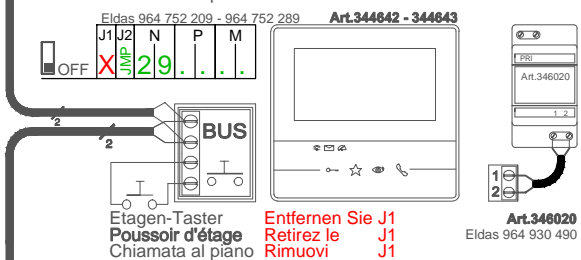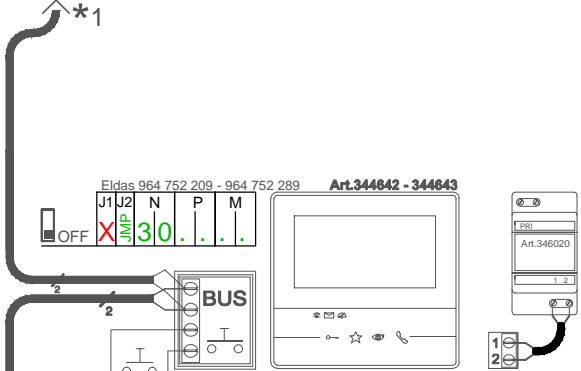

21 INT 1.4/00

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)


Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


21 INT 1.7/00

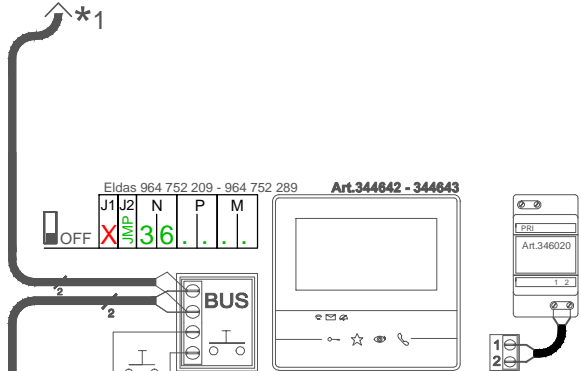

 
Entfernen Sie J1
Retirez le J1
Rimuovi J1

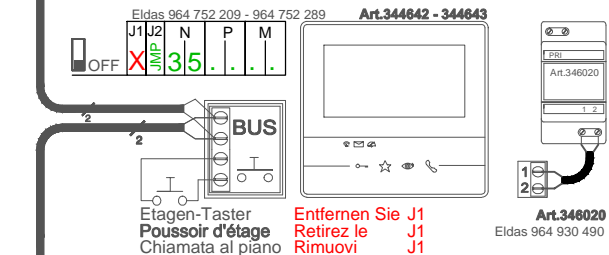

 
Entfernen Sie J1
Retirez le J1
Rimuovi J1

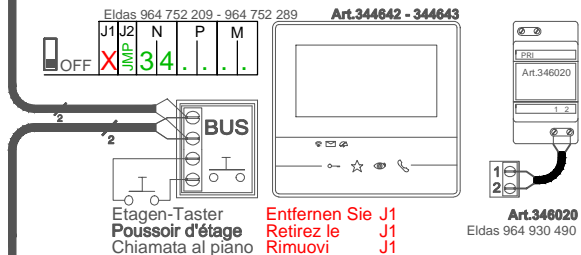

 
Entfernen Sie J1
Retirez le J1
Rimuovi J1

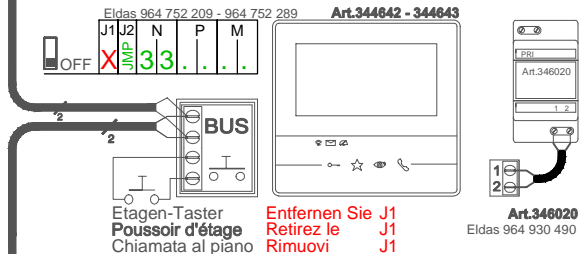

 Entfernen Sie J1
Retirez le J1
Rimuovi J1

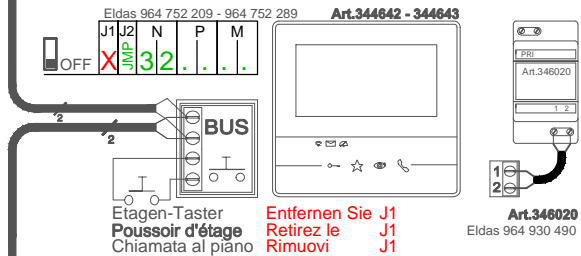

 Entfernen Sie J1
Retirez le J1
Rimuovi J1

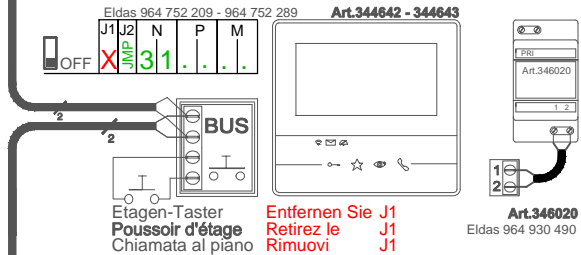

Entfernen Sie J1
Retirez le J1
Rimuovi J1

21 INT 1.5/00

*** 1-4 (Strang / Colonne montante / Montante)**
X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**
Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

