

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.2/00

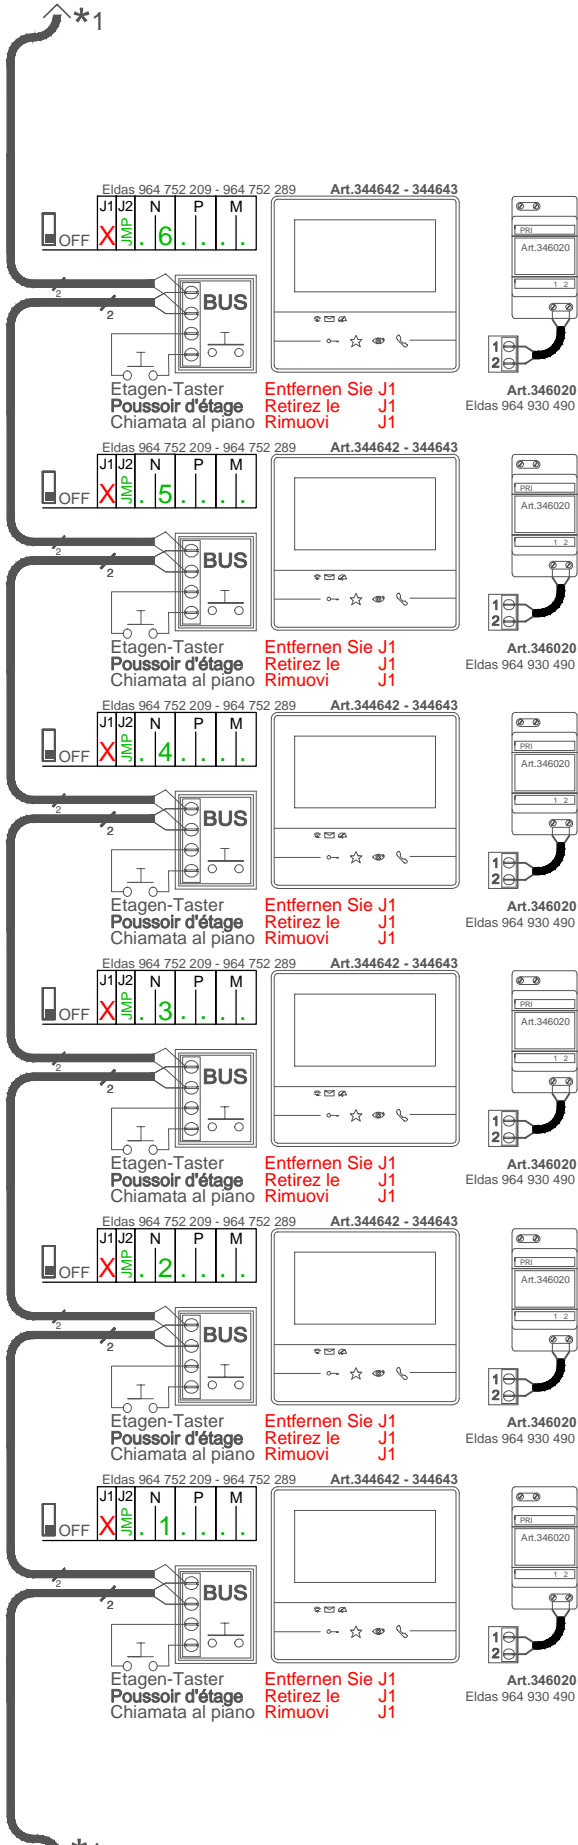

21 TAB 1.1/00

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


21 INT 1.3/00

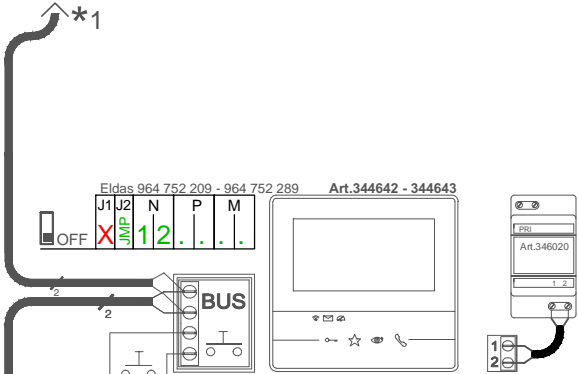

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 J1 J2 N P M
 1 2

 
Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

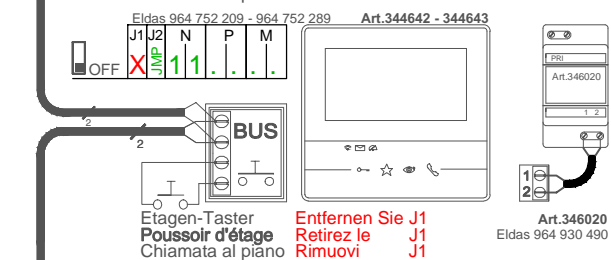

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 J1 J2 N P M
 1 1

 
Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

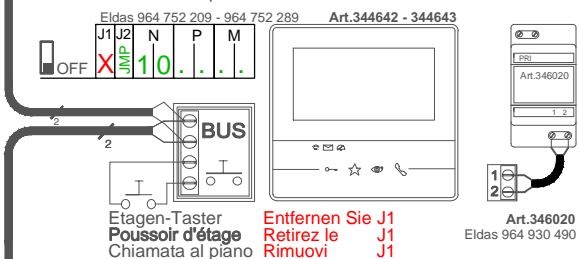

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 J1 J2 N P M
 1 0

 
Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

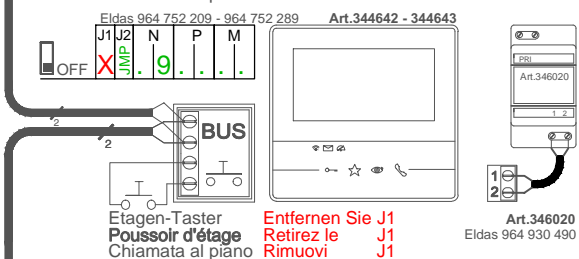

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 J1 J2 N P M
 . 9

 
Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

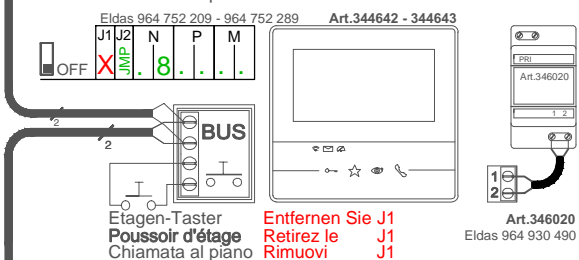

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 J1 J2 N P M
 . 8

 Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

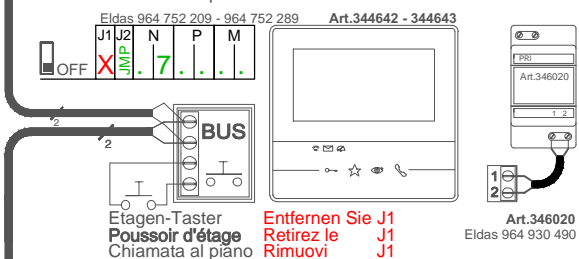

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 J1 J2 N P M
 . 7

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

21 INT 1.1/00

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.4/00

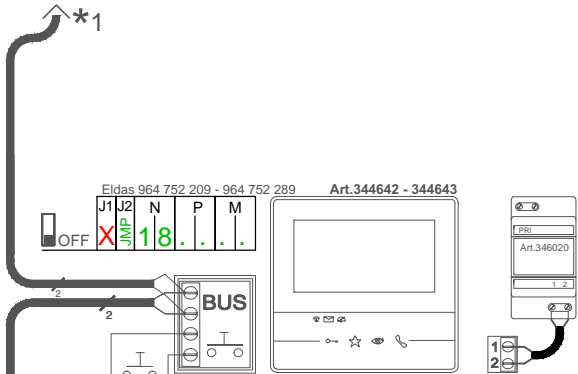

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 1 8

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

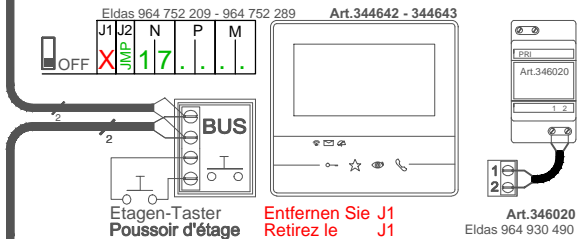

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 1 7

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

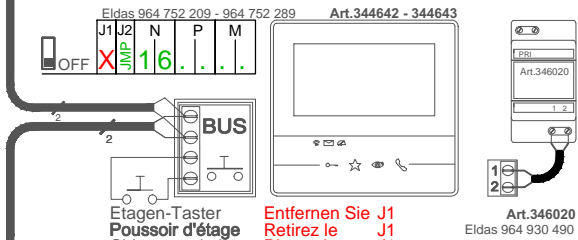

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 1 6

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

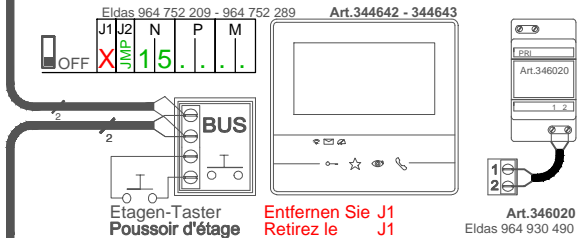

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 1 5

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

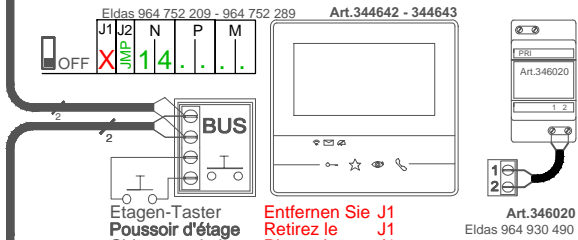

Eldas 964 752 209 - 964 752 289


Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 1 4

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

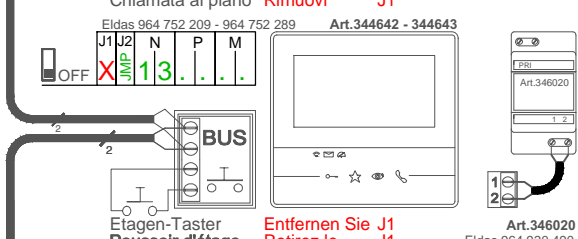

Eldas 964 752 209 - 964 752 289

Art.344642 - 344643

J1 J2 N P M
 OFF X J1 J2 N P M
 1 3

Etagen-Taster
 Poussoir d'étage
 Chiamata al piano

Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

Art.346020
 Eldas 964 930 490

21 INT 1.2/00

 
 
 
 
 
 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.5/00

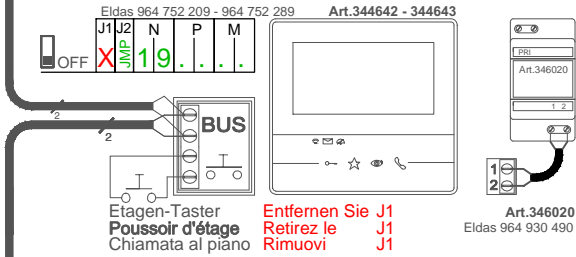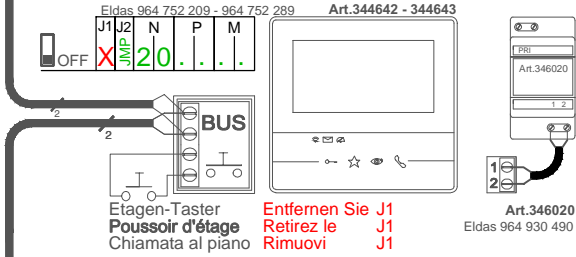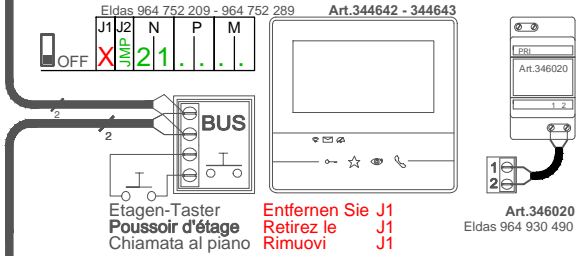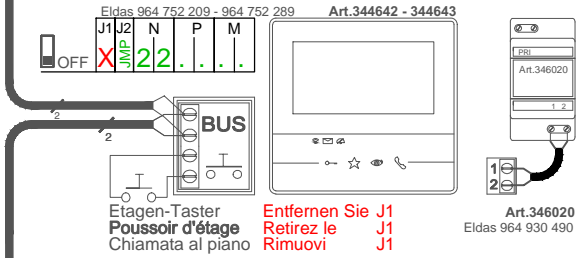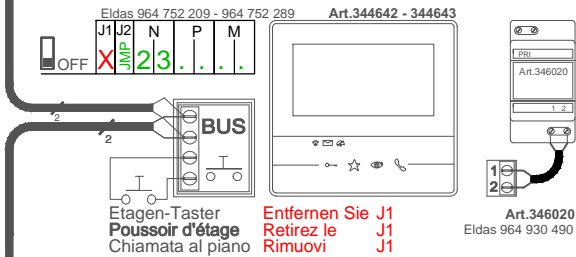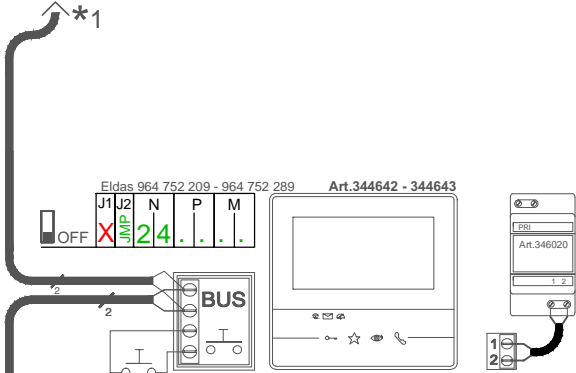

21 INT 1.3/00

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**


Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.6/00

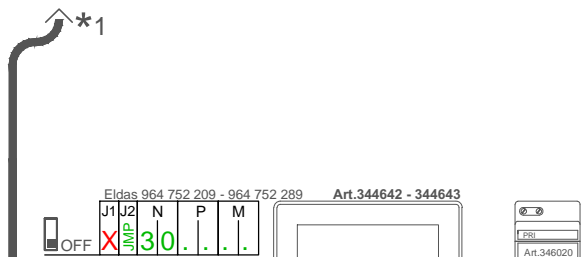


**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490

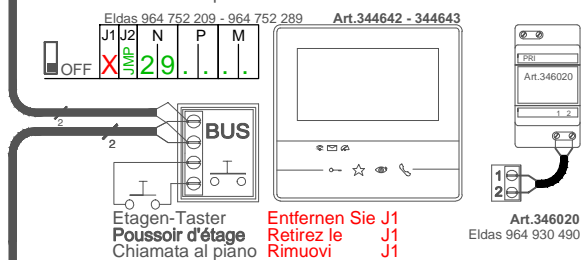


**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490

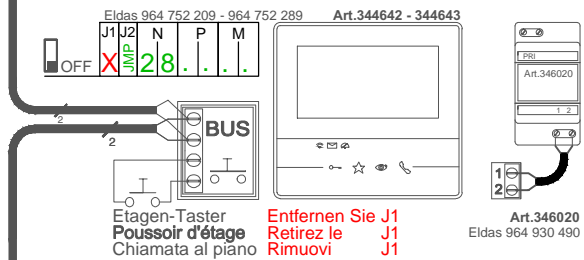


**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490

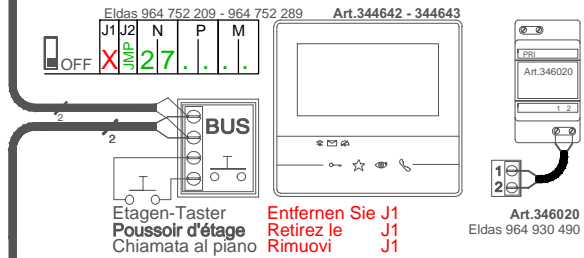


**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490

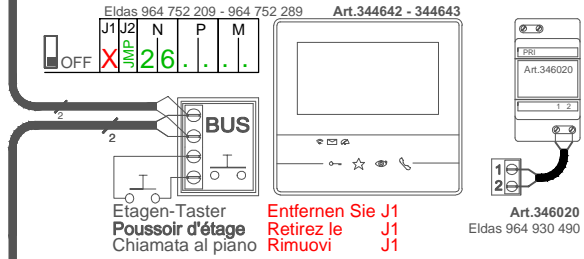

**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

 Art.346020
 Eldas 964 930 490

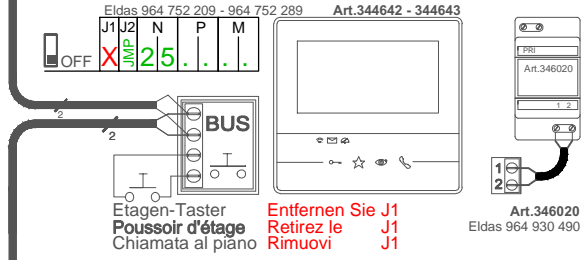

**Entfernen Sie J1
 Retirez le J1
 Rimuovi J1**

Art.346020
 Eldas 964 930 490

21 INT 1.4/00

 
* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.7/00

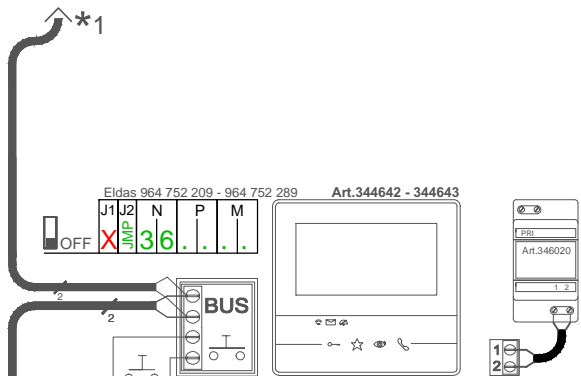


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643




Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

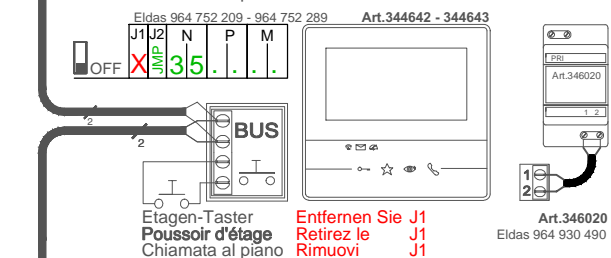


 Eldas 964 752 209 - 964 752 289 Art.344642 - 344643



Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

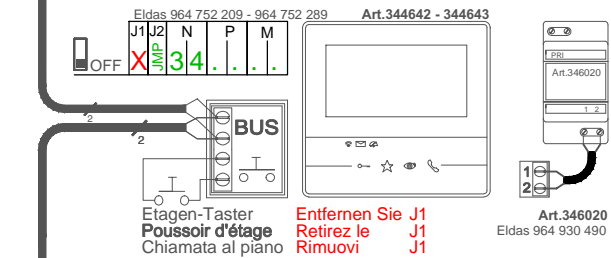


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643



Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

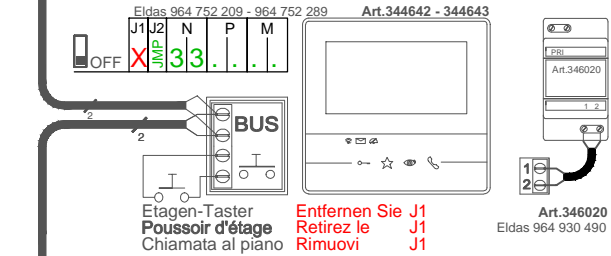


Eldas 964 752 209 - 964 752 289 Art.344642 - 344643




Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

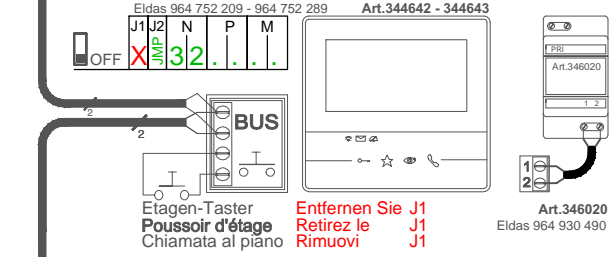


 Eldas 964 752 209 - 964 752 289 Art.344642 - 344643



Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

 Art.346020
 Eldas 964 930 490

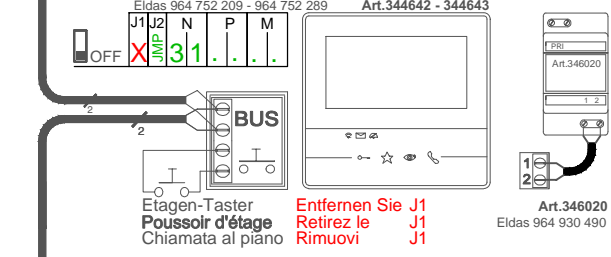

Eldas 964 752 209 - 964 752 289 Art.344642 - 344643



Entfernen Sie J1
 Retirez le J1
 Rimuovi J1

Art.346020
 Eldas 964 930 490

21 INT 1.5/00

* 1-4 (Strang / Colonne montante / Montante)

X (Entfernen Sie J1 / Retirez le J1 / Rimuovi J1)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**

Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

