 


\* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.2/00

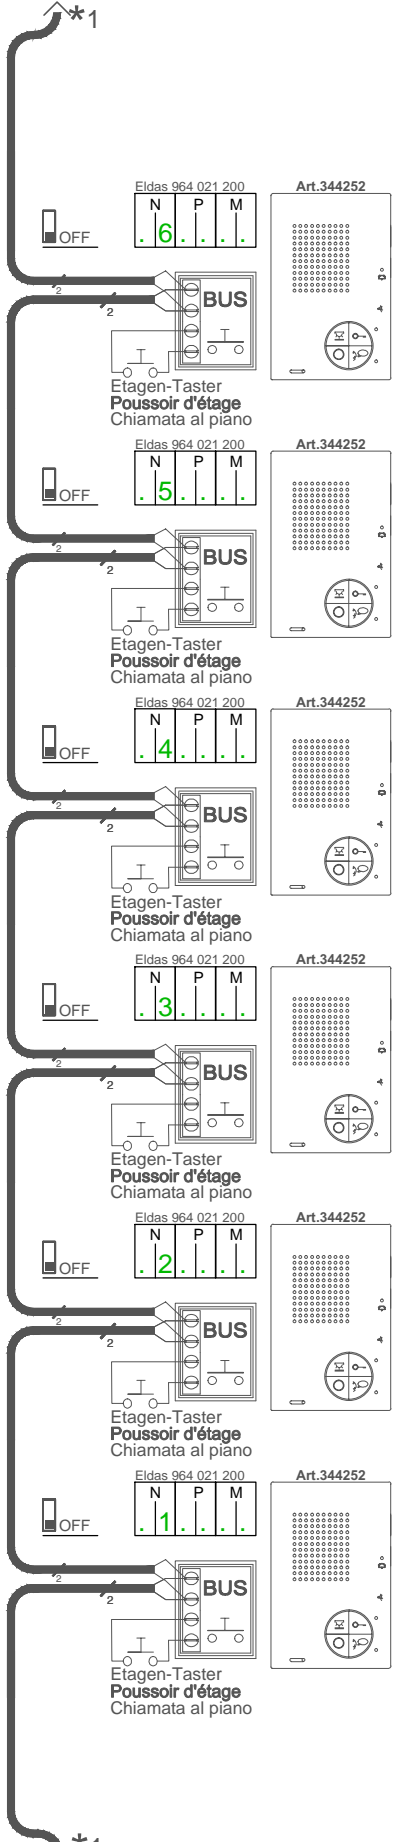


21 TAB 1.1/00


\* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


21 INT 1.3/00

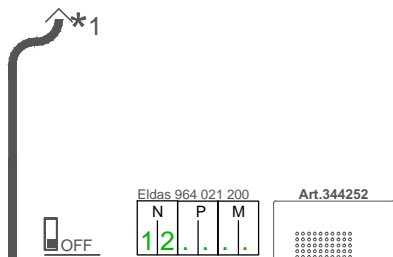


Eldas 964 021 200  
 N P M  
 12 . . .

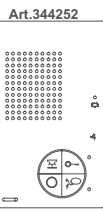


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

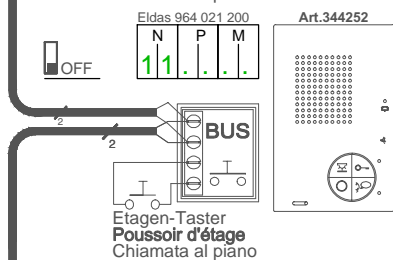


Eldas 964 021 200  
 N P M  
 11 . . .

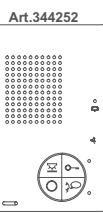


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

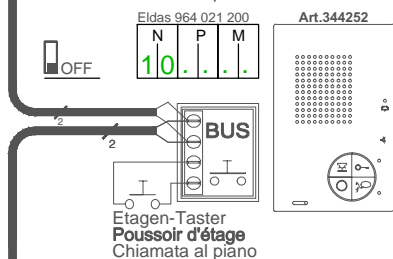


Eldas 964 021 200  
 N P M  
 10 . . .

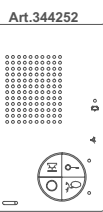


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

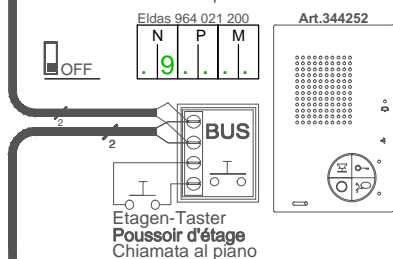


Eldas 964 021 200  
 N P M  
 9 . . .

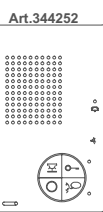


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

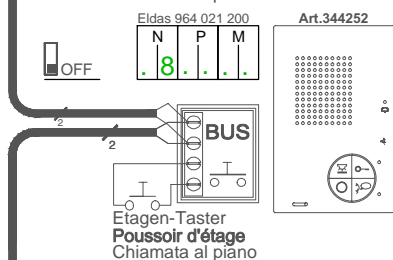


Eldas 964 021 200  
 N P M  
 8 . . .

 

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

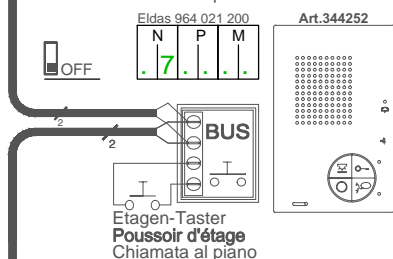

Eldas 964 021 200  
 N P M  
 7 . . .

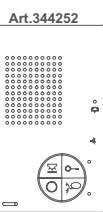


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

21 INT 1.1/00

\* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

 
21 INT 1.4/00

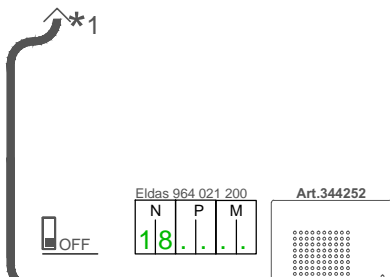

Eldas 964 021 200  
 N P M  
 18 . . .

Art.344252

 
BUS  
 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

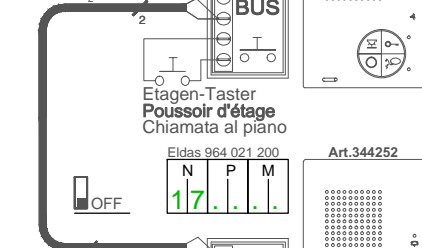

Eldas 964 021 200  
 N P M  
 17 . . .

Art.344252

 
BUS  
 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

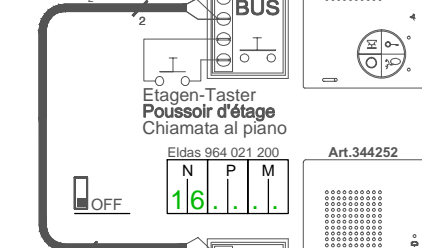

Eldas 964 021 200  
 N P M  
 16 . . .

Art.344252

 
BUS  
 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

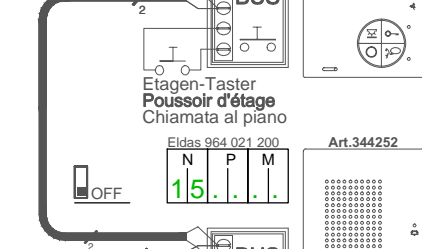

Eldas 964 021 200  
 N P M  
 15 . . .

Art.344252

 
BUS  
 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

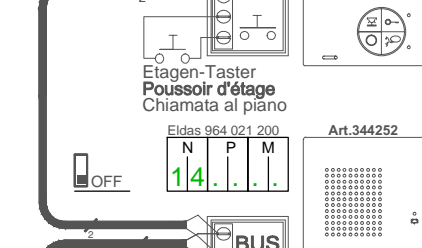

Eldas 964 021 200  
 N P M  
 14 . . .

Art.344252

 BUS  
 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

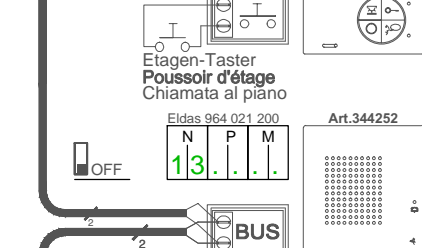

Eldas 964 021 200  
 N P M  
 13 . . .

Art.344252

BUS  
 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

 
 
 
 
 
 
 
 
 
21 INT 1.2/00

\*1

\* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.5/00

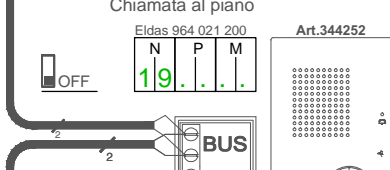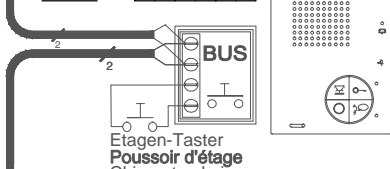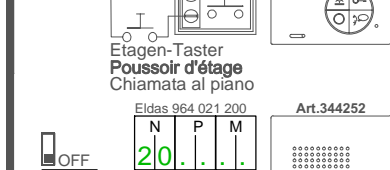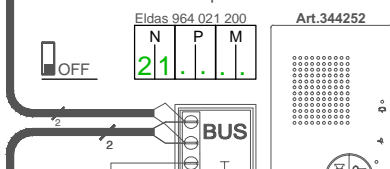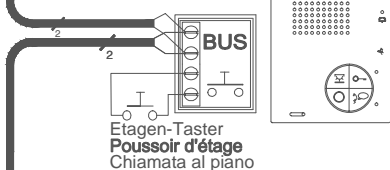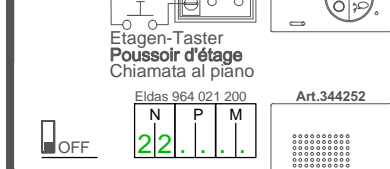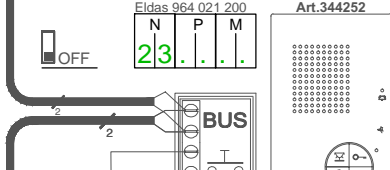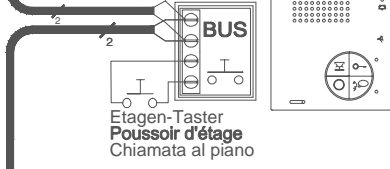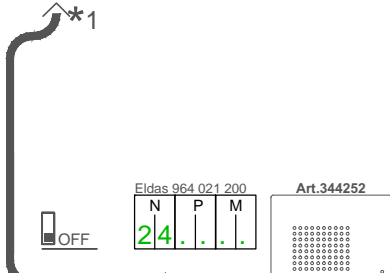


21 INT 1.3/00

\*1


\* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009


21 INT 1.6/00

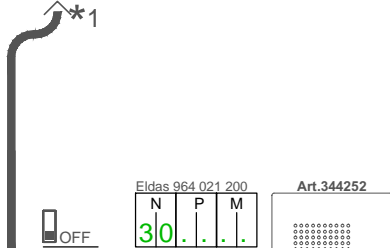


Eldas 964 021 200  
 N P M  
**30** . . .

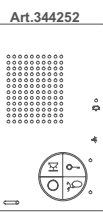


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

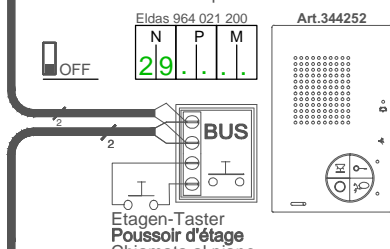


Eldas 964 021 200  
 N P M  
**29** . . .

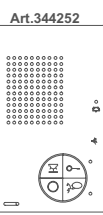


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

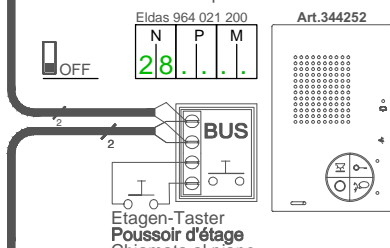

Eldas 964 021 200  
 N P M  
**28** . . .

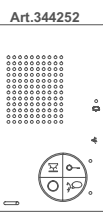


Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

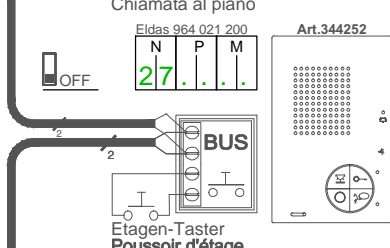


Eldas 964 021 200  
 N P M  
**27** . . .




Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

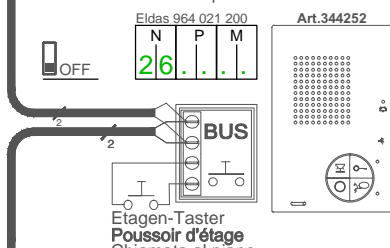

Eldas 964 021 200  
 N P M  
**26** . . .

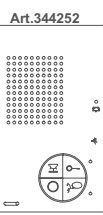

Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

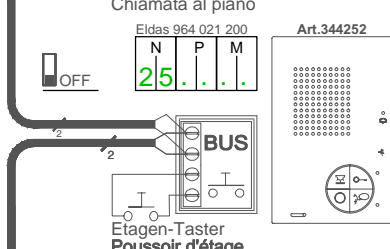

Eldas 964 021 200  
 N P M  
**25** . . .



 
 
 
 
 
 
 
 
 
 
 
 
Etagen-Taster  
**Poussoir d'étage**  
 Chiamata al piano

21 INT 1.4/00

\* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.7/00

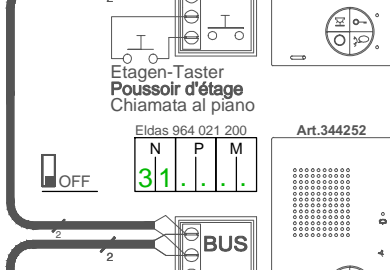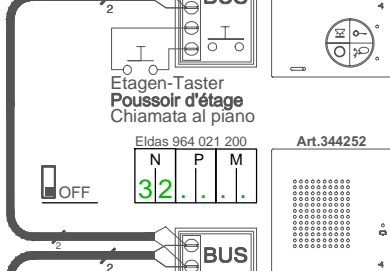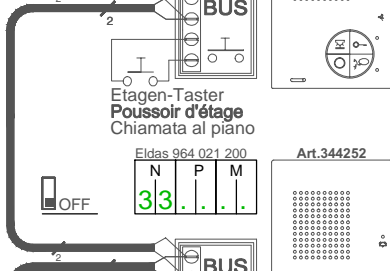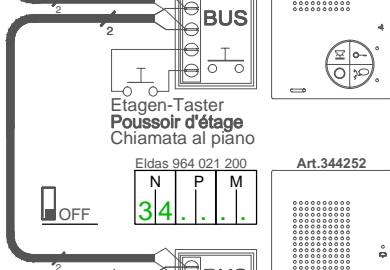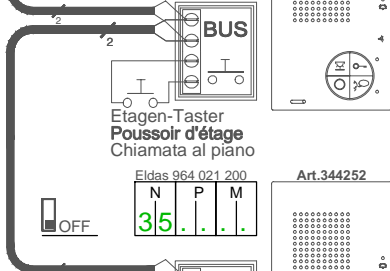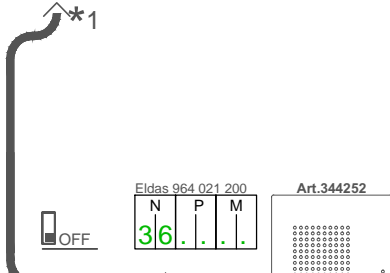

21 INT 1.5/00

\* 1-4 (Strang / Colonne montante / Montante)

Info: **Verdrillte kabel verwenden / Utiliser des câbles torsadés**  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

