 


\* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

21 INT 1.2/00

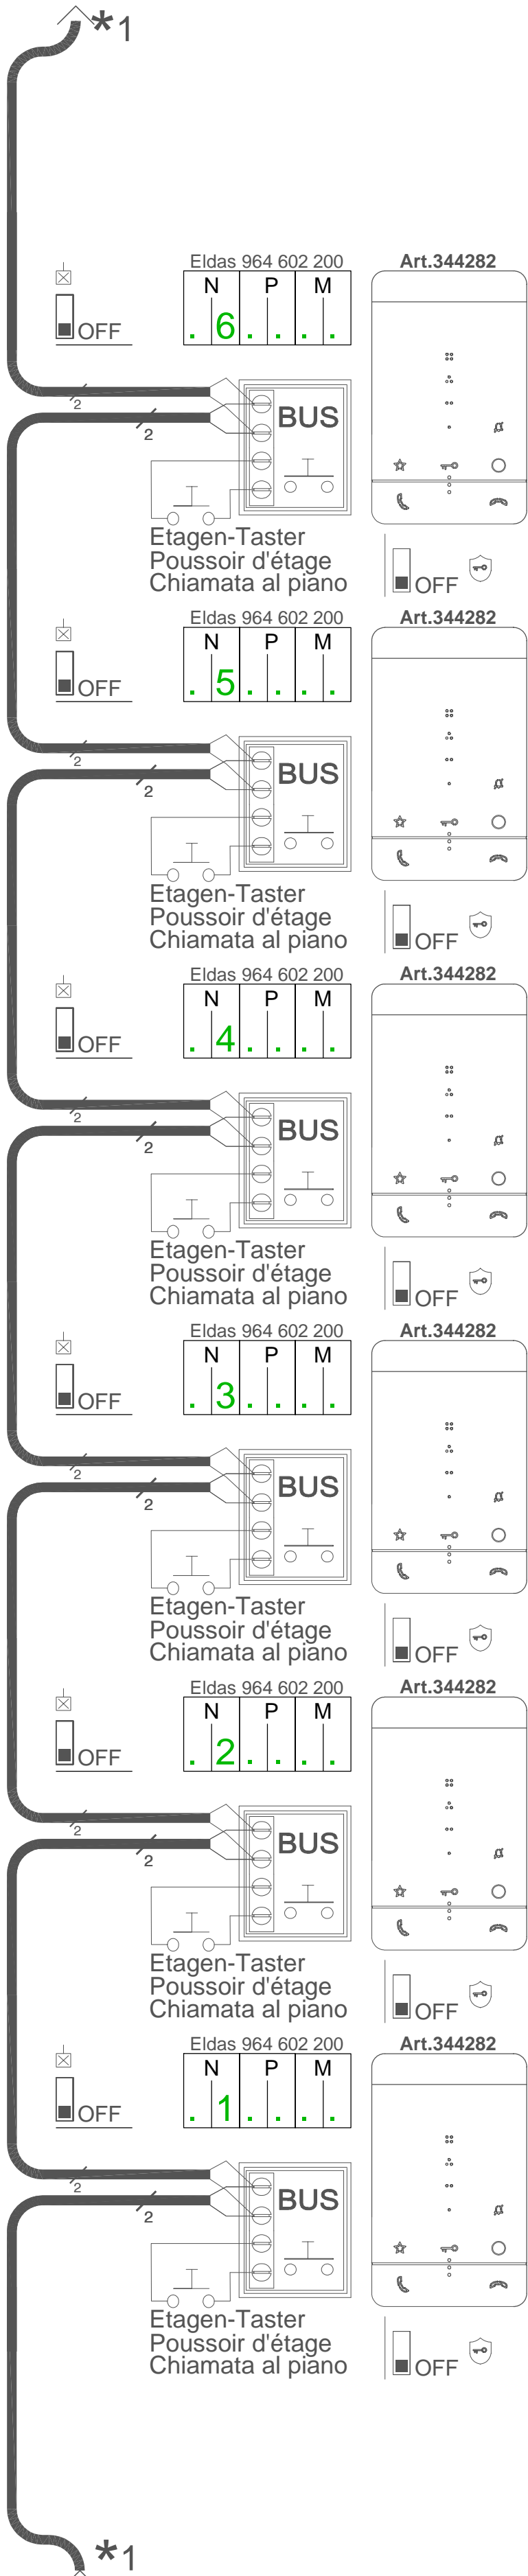 


21 TAB 1.1/00

\* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009








21 INT 1.3/00

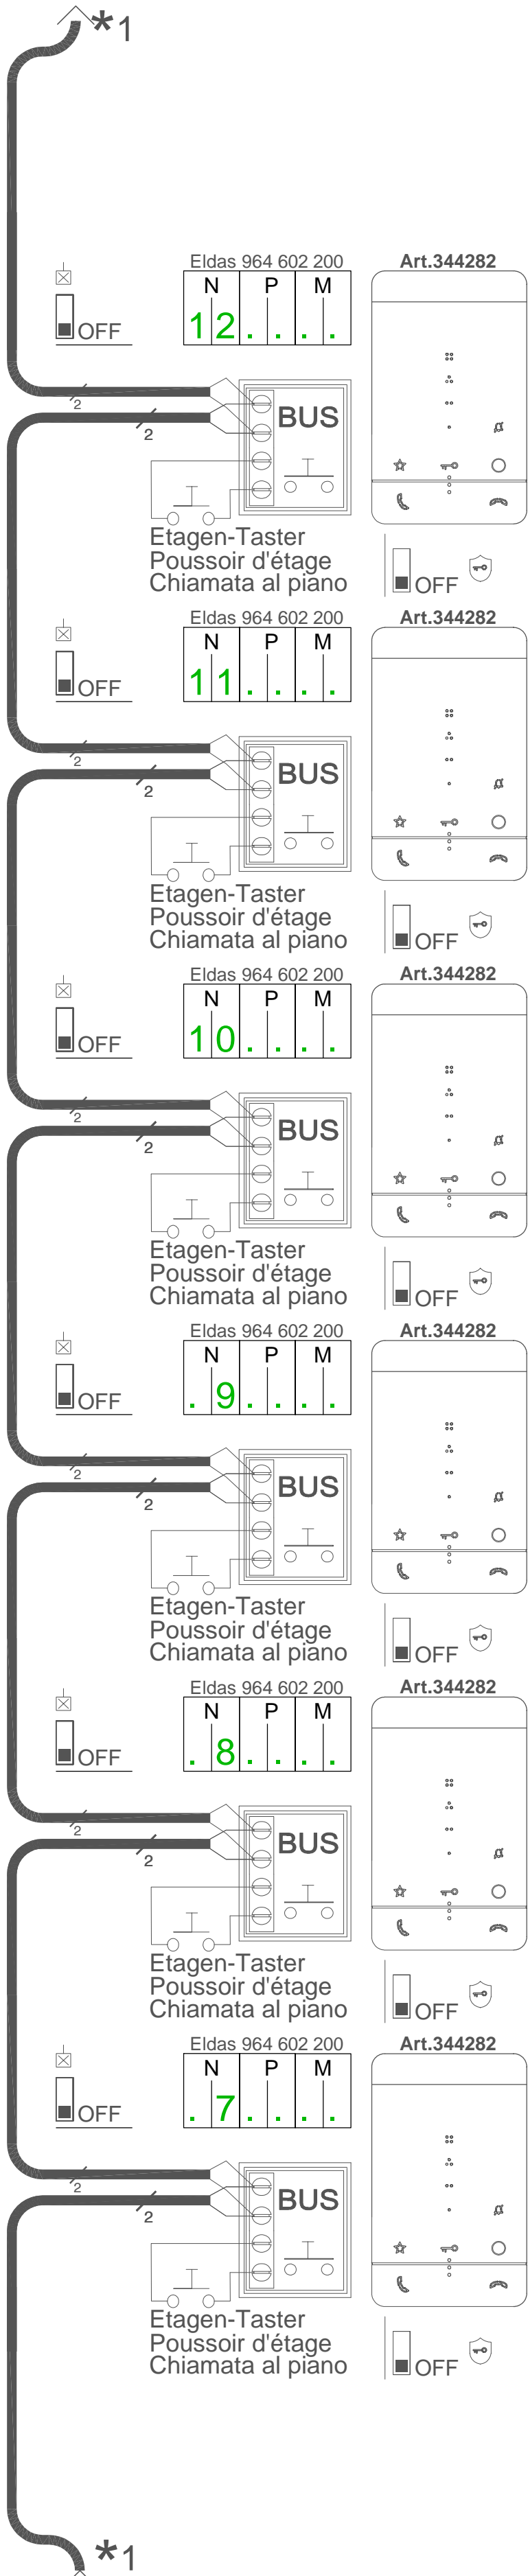

\* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

       21 INT 1.4/00







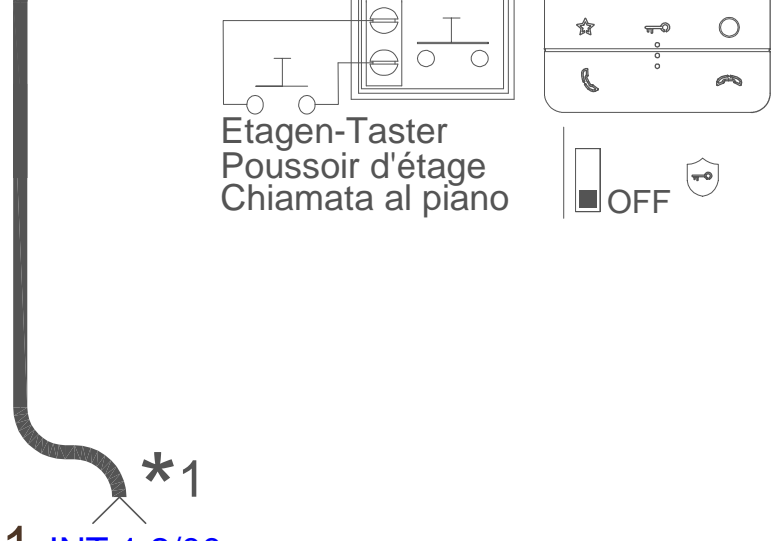
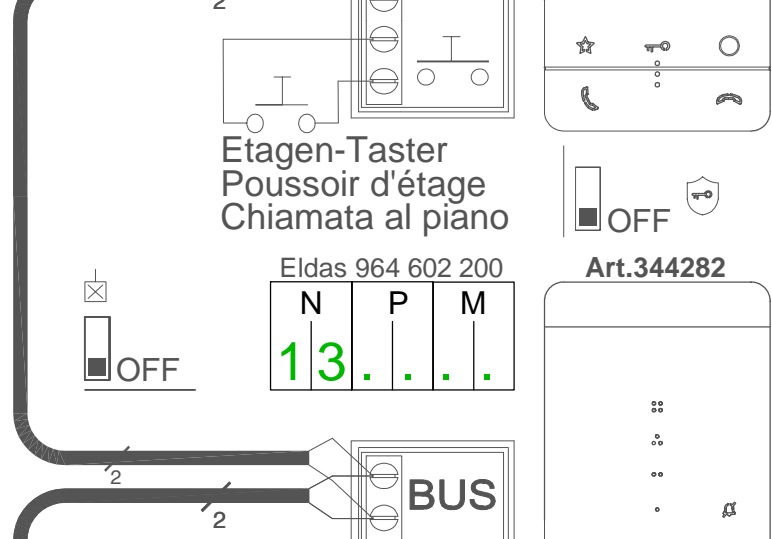
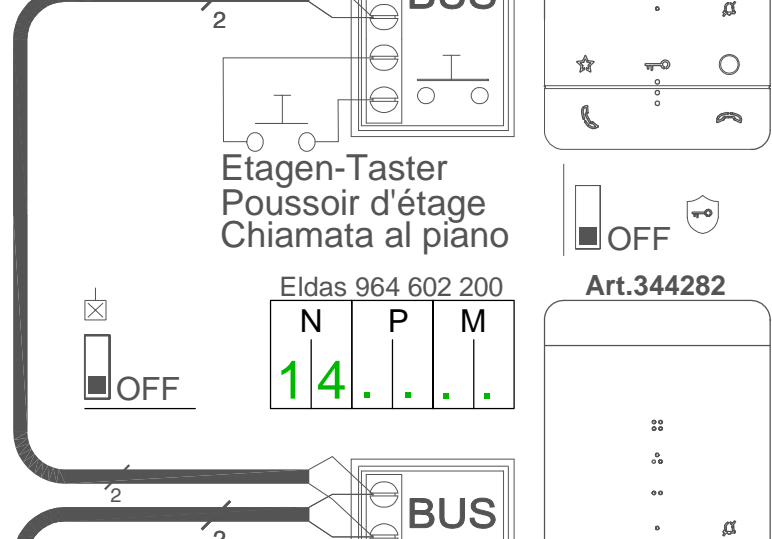
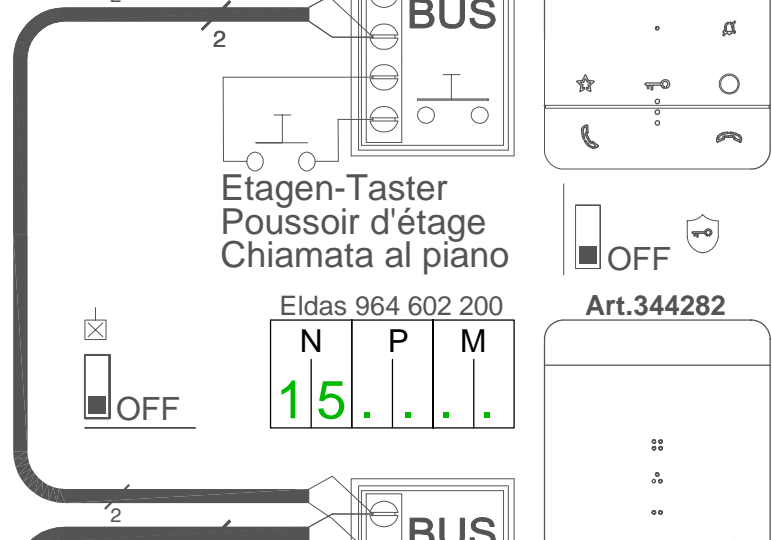
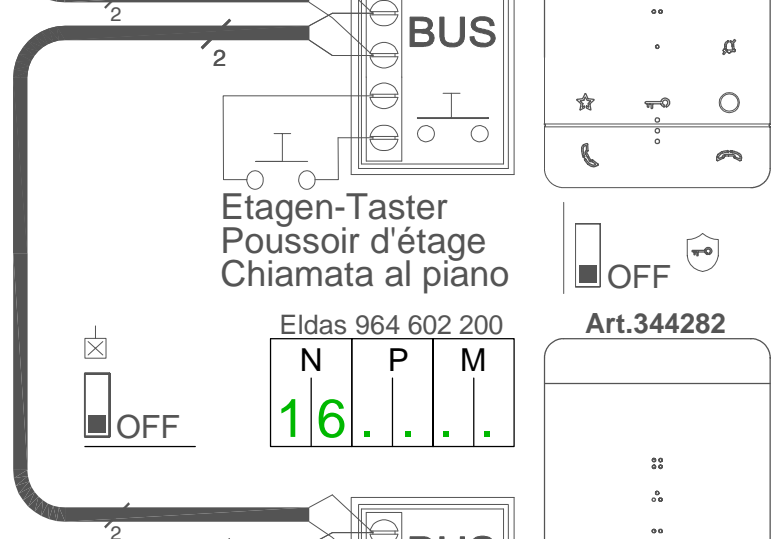
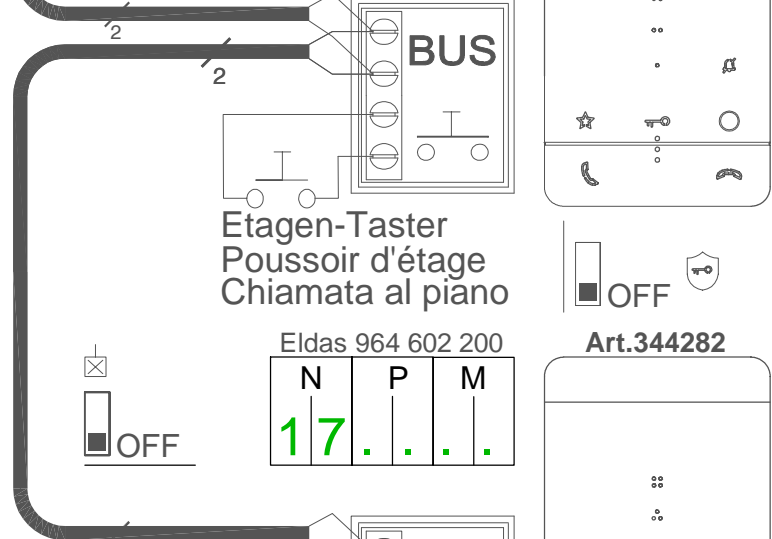
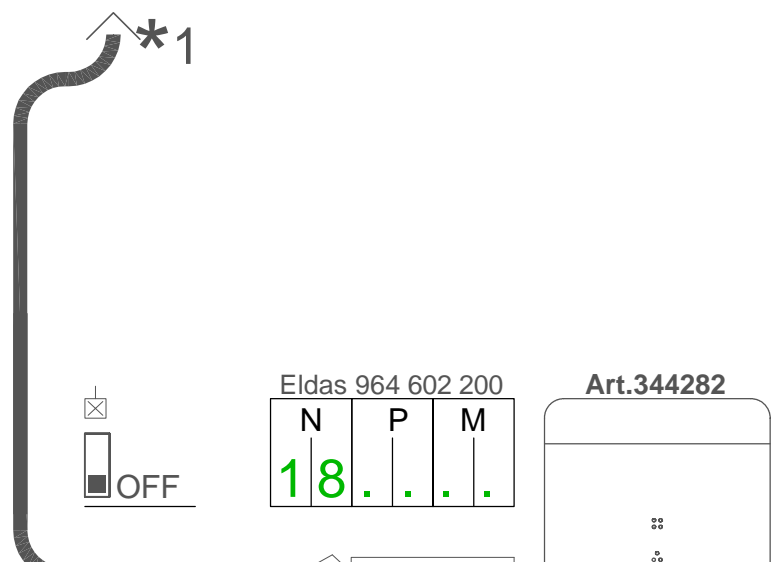


21 INT 1.2/00

\* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

             21 INT 1.5/00

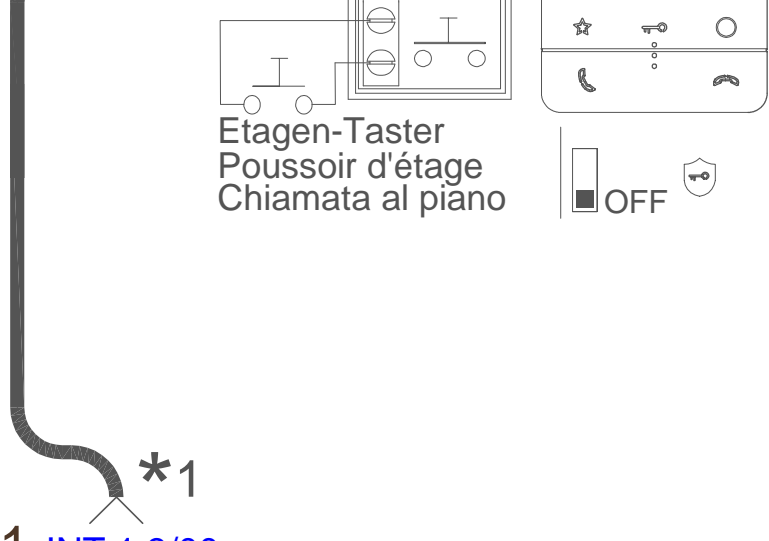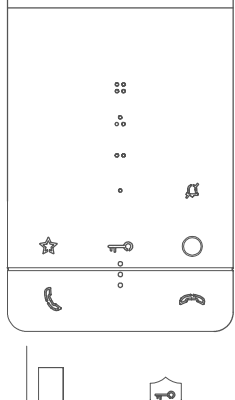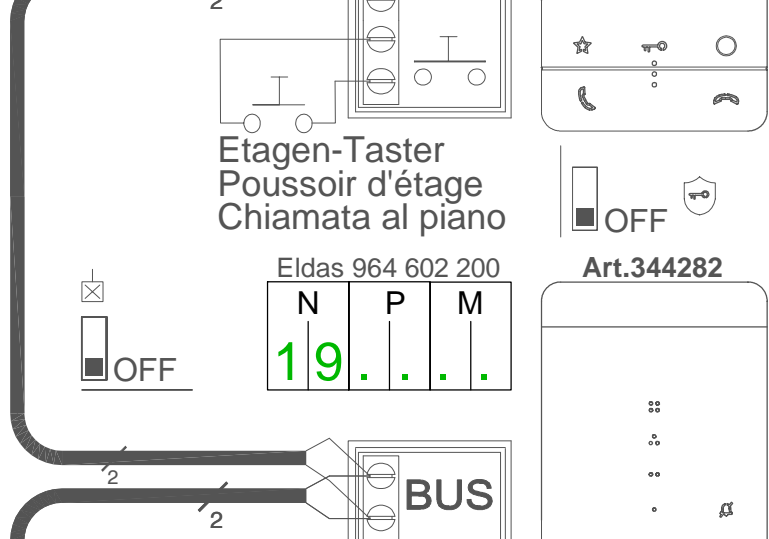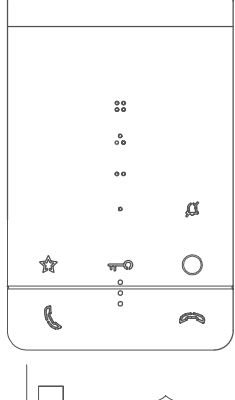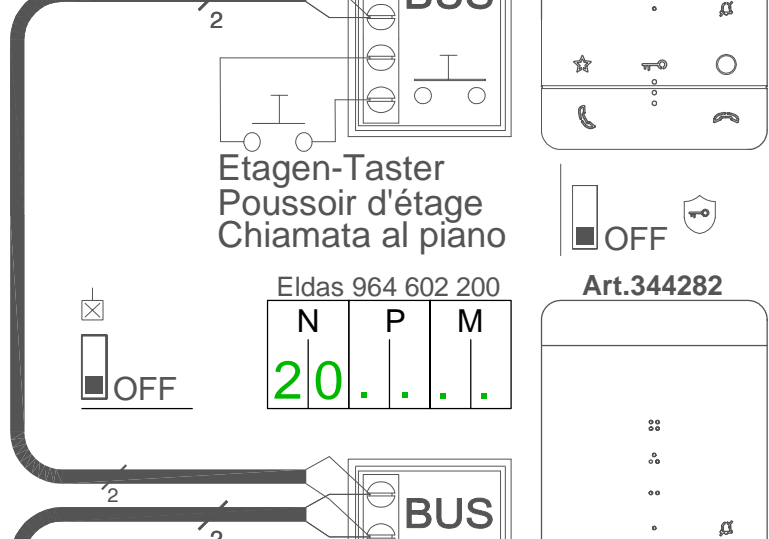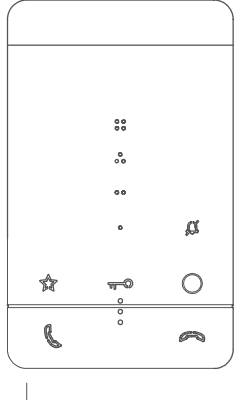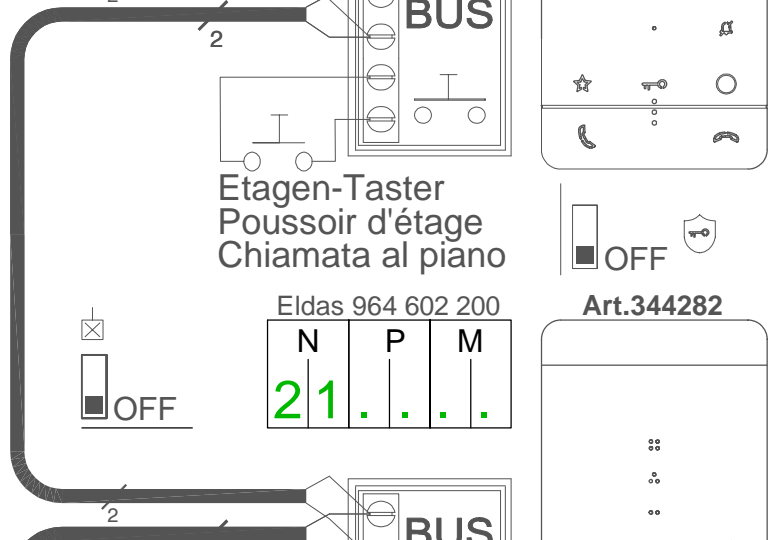
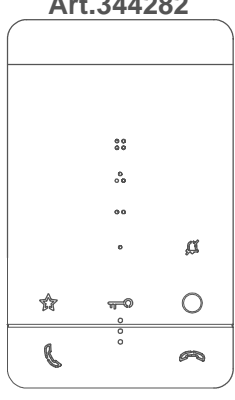
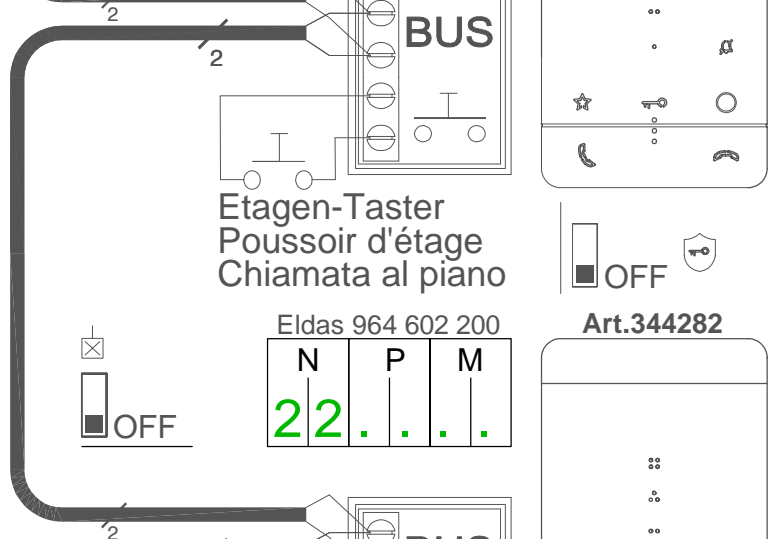
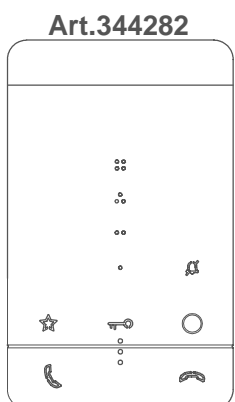
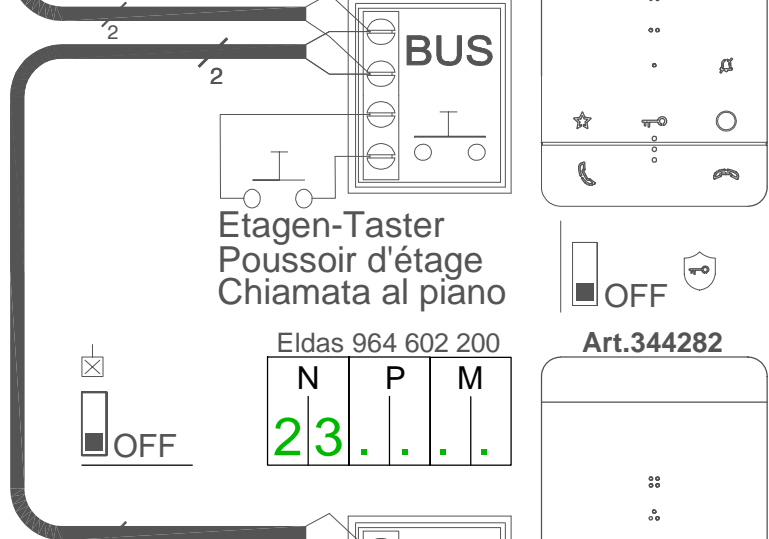
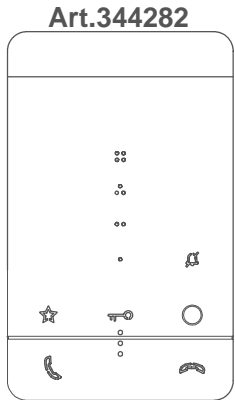
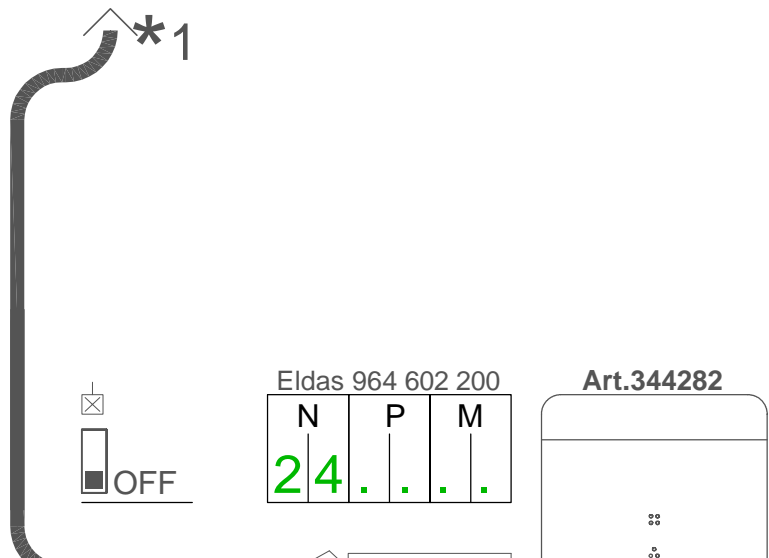


21 INT 1.3/00

\* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

       21 INT 1.6/00

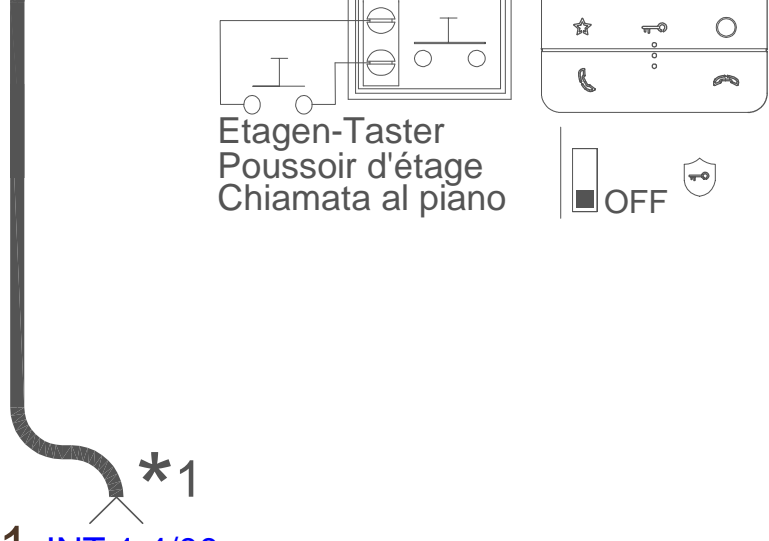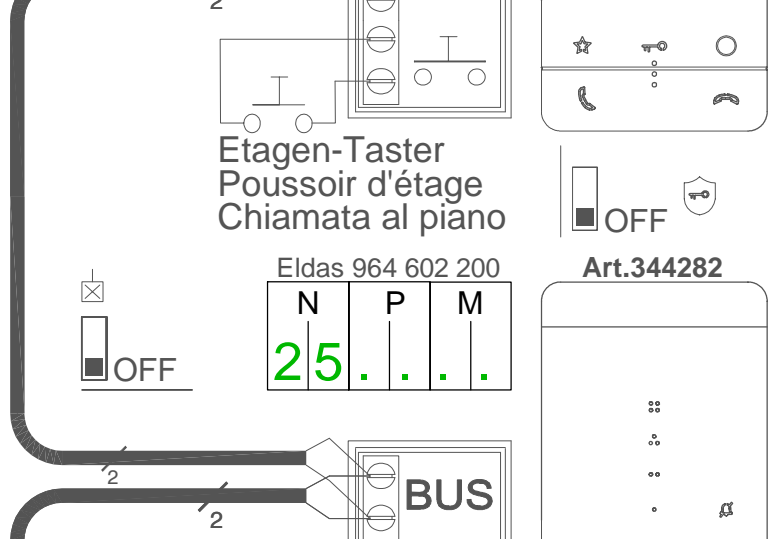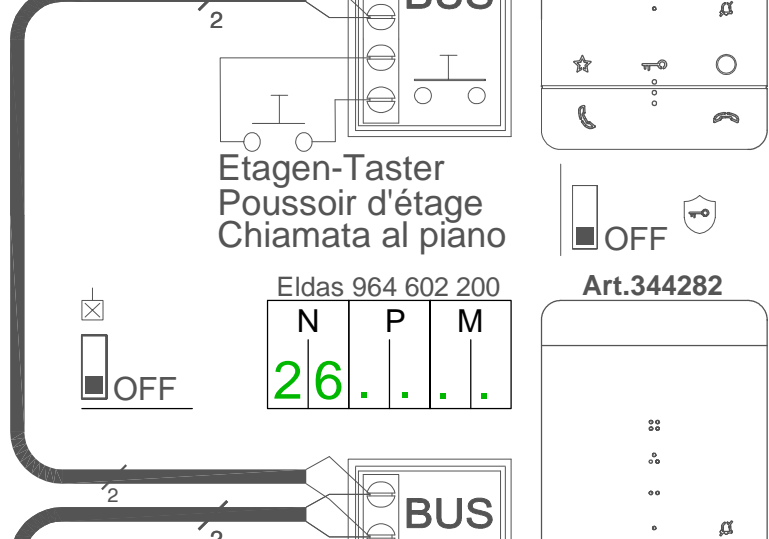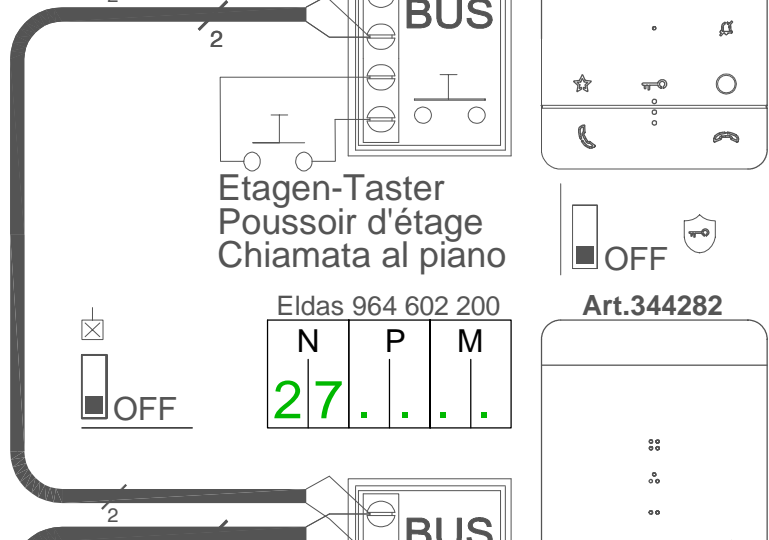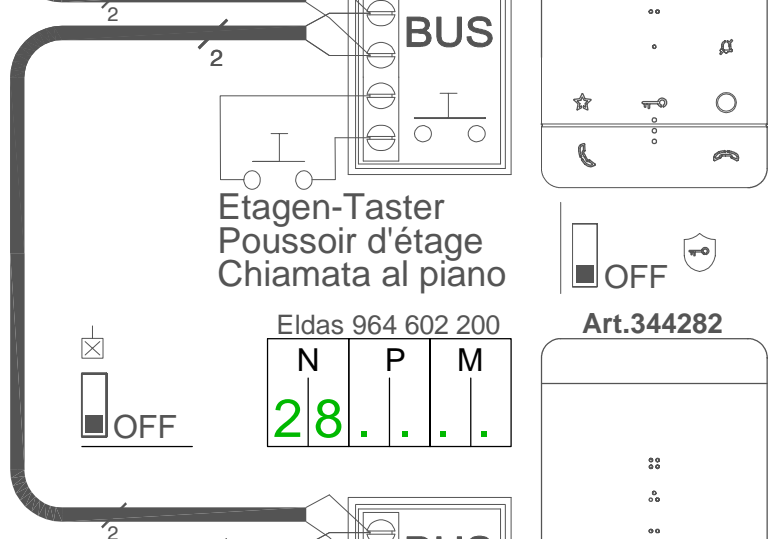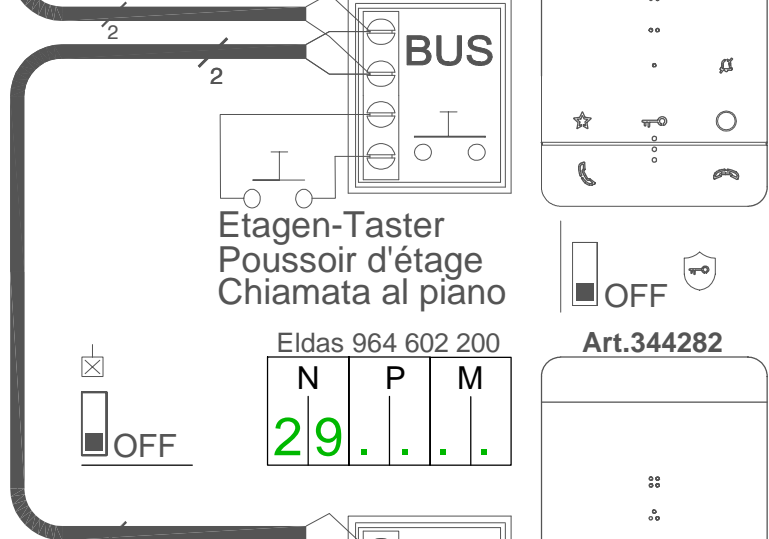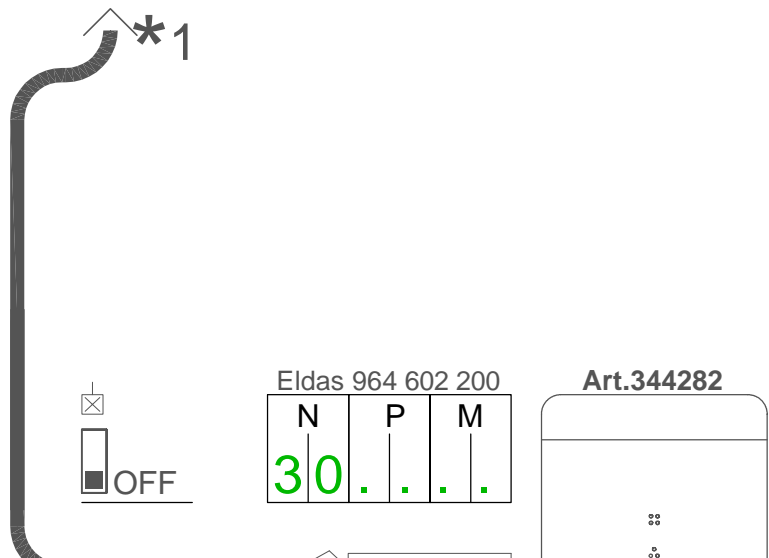


21 INT 1.4/00

\* 1-4 (Strang / Colonne montante / Montante)


Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

 21 INT 1.7/00

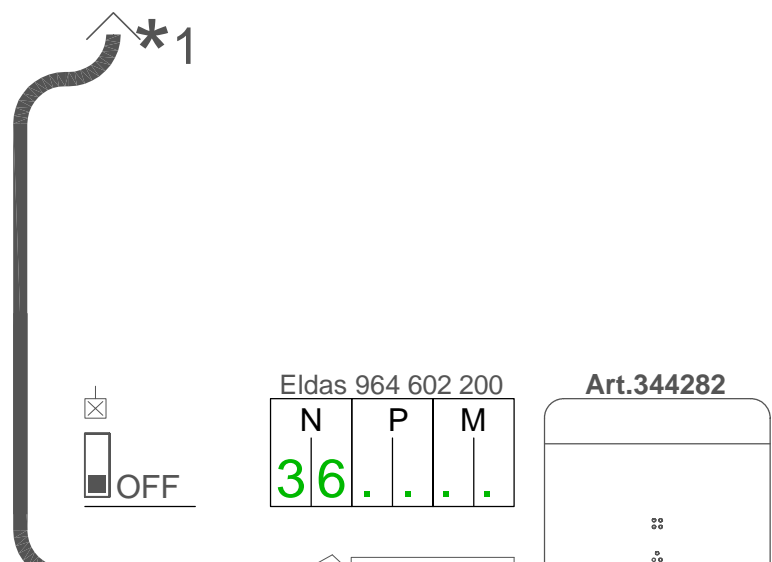


Eldas 964 602 200  
 N P M  
 36 . . . .

 Art.344282

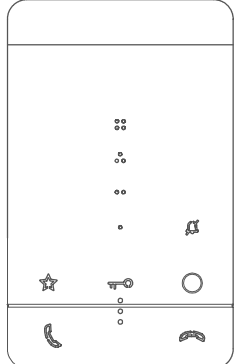


 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

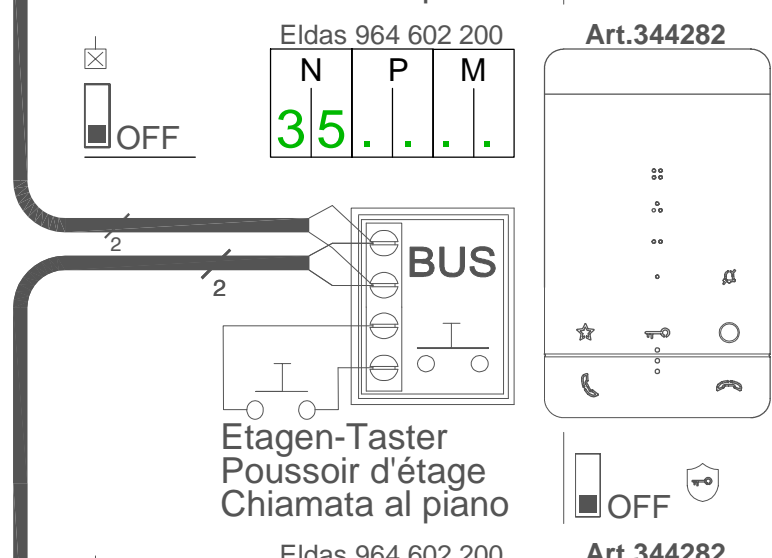


Eldas 964 602 200  
 N P M  
 35 . . . .

 Art.344282

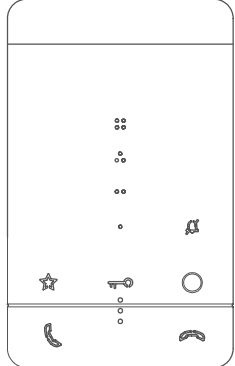


 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

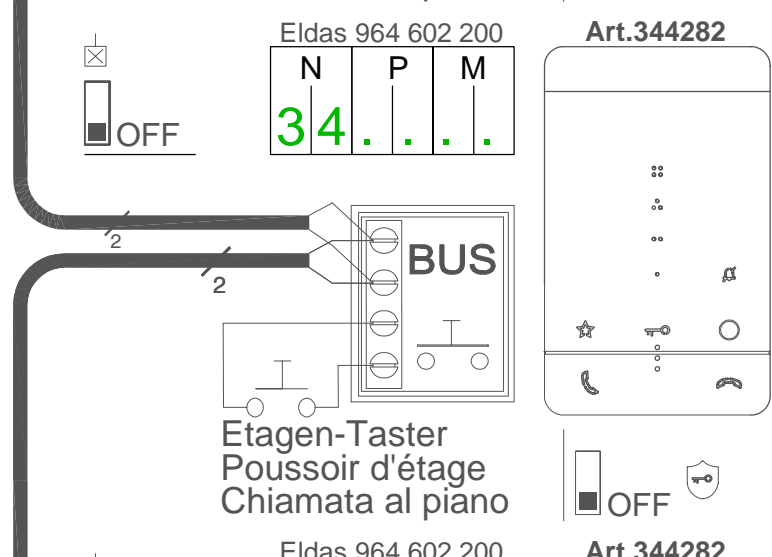


Eldas 964 602 200  
 N P M  
 34 . . . .

 Art.344282

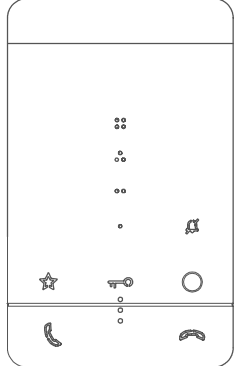


 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

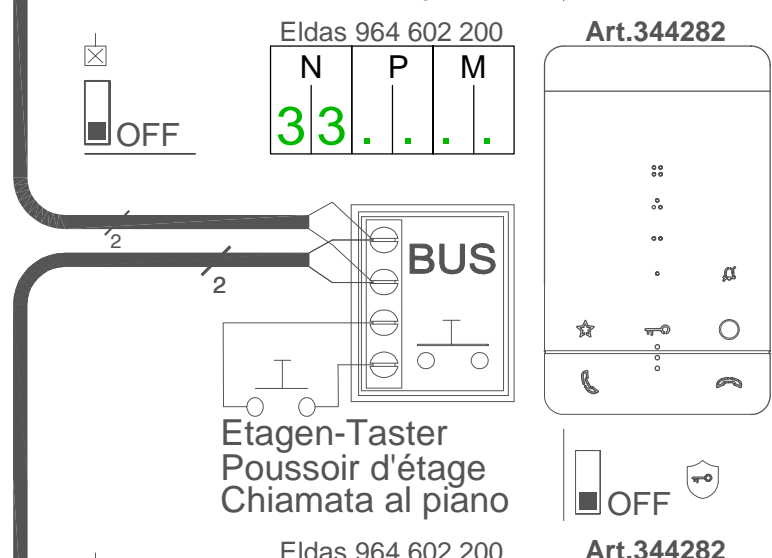


Eldas 964 602 200  
 N P M  
 33 . . . .

 Art.344282

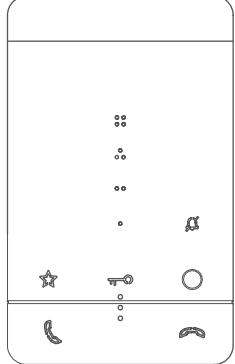


 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

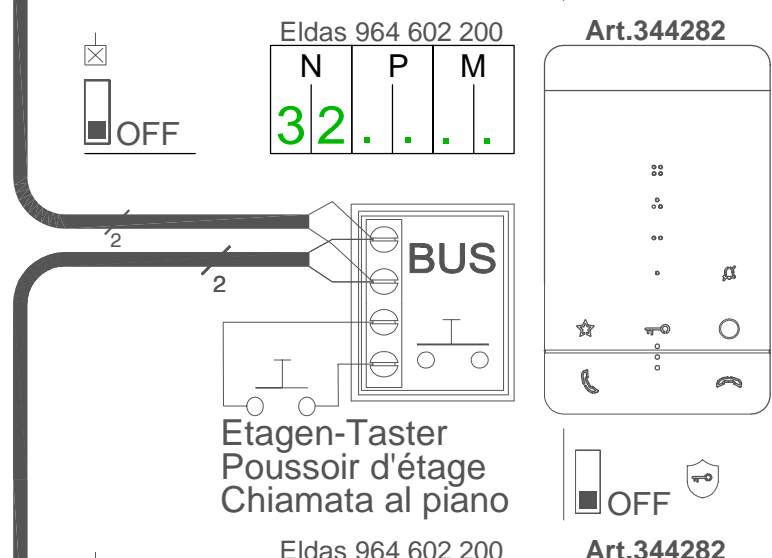


Eldas 964 602 200  
 N P M  
 32 . . . .

 Art.344282

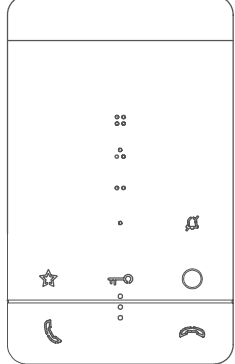


 Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

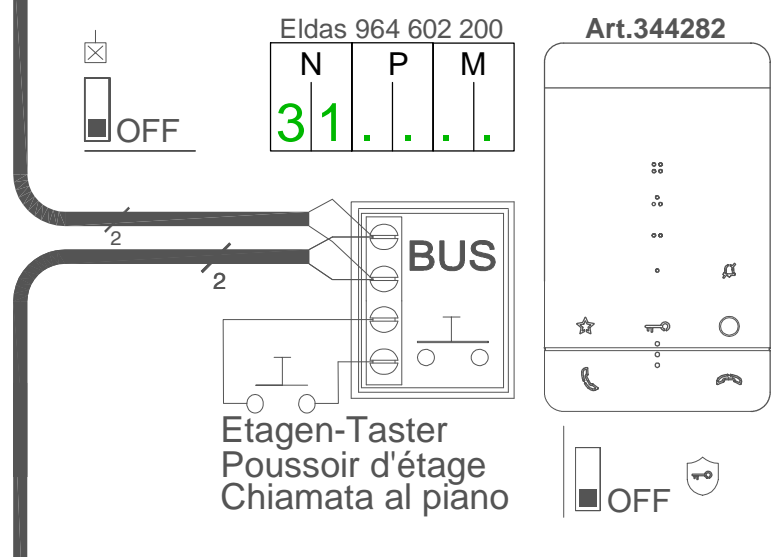

Eldas 964 602 200  
 N P M  
 31 . . . .

 Art.344282

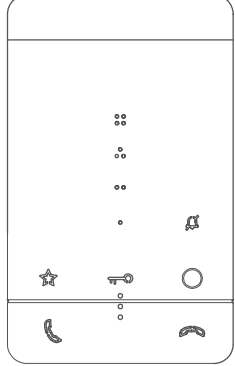

Etagen-Taster  
 Pousoir d'étage  
 Chiamata al piano

21 INT 1.5/00

\* 1-4 (Strang / Colonne montante / Montante)

Info: Verdrillte kabel verwenden / Utiliser des câbles torsadés  
 Utilizzare cavi twistati Art.336904 - Eldas 101 282 009

